

Models MT3809G & MT3810G

2-5-1 How to Remove and Reinstall GP Housing Indicator Covers



**Directions to remove and reinstall the GP Housing Cover and adjust the Pointer:**

1. To begin, make sure the float is at rest and there isn't flow going through the meter.
2. Using a T20 TORX tool loosen the 4 cover screws. Note, the screws will stay attached to the cover.
3. Remove the cover from the housing. The gasket should still be attached to the cover in the gasket groove. If not, place the gasket into the groove of the cover.
4. Using a flat blade screwdriver with a 1/8" blade, hold the pointer and turn the screw to align with the "R" on the scale. It may take a few adjustments to get the pointer on the "R".
5. To replace the cover, place the cover against the housing and tighten the 4 screws using a T20 TORX tool. Tighten to 45 in-lbs or 5.08 N-m to keep a watertight seal.