

**Brooks Expert Support Tool (BEST)  
Supplemental Manual**

**Software Version 5.14.0.0  
for  
Quantim<sup>®</sup> QMB, SLA Rev A**

## Essential Instructions Read before proceeding!

Brooks Instrument designs, manufactures and tests its products to meet many national and international standards. These products must be properly installed, operated and maintained to ensure they continue to operate within their normal specifications. The following instructions must be adhered to and integrated into your safety program when installing, operating and maintaining Brooks Instrument products.

- To ensure proper performance, use qualified personnel to install, operate, update, program and maintain the product.
- Read all instructions prior to installing, operating and servicing the product. If this instruction manual is not the correct manual, please see back cover for local sales office contact information. Save this instruction manual for future reference.

**⚠ WARNING: Do not operate this instrument in excess of the specifications listed in the Instruction and Operation Manual. Failure to heed this warning can result in serious personal injury and / or damage to the equipment.**

- If you do not understand any of the instructions, contact your Brooks Instrument representative for clarification.
- Follow all warnings, cautions and instructions marked on and supplied with the product.

**WARNING: Prior to installation ensure this instrument has the required approval ratings to meet local and national codes. Failure to heed this warning can result in serious personal injury and / or damage to the equipment.**

- Install your equipment as specified in the installation instructions of the appropriate instruction manual and per applicable local and national codes. Connect all products to the proper electrical and pressure sources.
- Operation: (1) Slowly initiate flow into the system. Open process valves slowly to avoid flow surges. (2) Check for leaks around the flow meter inlet and outlet connections. If no leaks are present, bring the system up to the operating pressure.
- Please make sure that the process line pressure is removed prior to service. When replacement parts are required, ensure that qualified people use replacement parts specified by Brooks Instrument. Unauthorized parts and procedures can affect the product's performance and place the safe operation of your process at risk. Look-alike substitutions may result in fire, electrical hazards or improper operation.
- Ensure that all equipment doors are closed and protective covers are in place to prevent electrical shock and personal injury, except when maintenance is being performed by qualified persons.

**WARNING: For liquid flow devices, if the inlet and outlet valves adjacent to the devices are to be closed for any reason, the devices must be completely drained. Failure to do so may result in thermal expansion of the liquid that can rupture the device and may cause personal injury.**

### European Pressure Equipment Directive (PED)

All pressure equipment with an internal pressure greater than 0.5 bar (g) and a size larger than 25mm or 1" (inch) falls under the Pressure Equipment Directive (PED).

- The Specifications Section of this manual contains instructions related to the PED directive.
- Products described in this manual are in compliance with EN directive 2014/34/EU.
- All Brooks Instrument Flowmeters fall under fluid group 1.
- Products larger than 25mm or 1" (inch) are in compliance with PED category I, II or III.
- Products of 25mm or 1" (inch) or smaller are Sound Engineering Practice (SEP).

### European Electromagnetic Compatibility (EMC)

The Brooks Instrument (electric/electronic) equipment bearing the CE mark has been successfully tested to the regulations of the Electro Magnetic Compatibility (EMC directive 2014/30/EU).

Special attention however is required when selecting the signal cable to be used with CE marked equipment.

**Quality of the signal cable, cable glands and connectors:**

Brooks Instrument supplies high quality cable(s) which meets the specifications for CE certification.

If you provide your own signal cable you should use a cable which is overall completely screened with a 100% shield.

"D" or "Circular" type connectors used should be shielded with a metal shield. If applicable, metal cable glands must be used providing cable screen clamping.

The cable screen should be connected to the metal shell or gland and shielded at both ends over 360 Degrees.

The shield should be terminated to an earth ground.

Card Edge Connectors are standard non-metallic. The cables used must be screened with 100% shield to comply with CE certification.

The shield should be terminated to an earth ground.

For pin configuration : Please refer to the enclosed Instruction Manual.

### ESD (Electrostatic Discharge)

**⚠ CAUTION: This instrument contains electronic components that are susceptible to damage by static electricity. Proper handling procedures must be observed during the removal, installation or other handling of internal circuit boards or devices.**

**Handling Procedure:**

1. Power to unit must be removed.
2. Personnel must be grounded, via a wrist strap or other safe, suitable means before any printed circuit card or other internal device is installed, removed or adjusted.
3. Printed circuit cards must be transported in a conductive container. Boards must not be removed from protective enclosure until immediately before installation. Removed boards must immediately be placed in protective container for transport, storage or return to factory.

**Comments**

This instrument is not unique in its content of ESD (electrostatic discharge) sensitive components. Most modern electronic designs contain components that utilize metal oxide technology (NMOS, SMOS, etc.). Experience has proven that even small amounts of static electricity can damage or destroy these devices. Damaged components, even though they appear to function properly, exhibit early failure.

## Contents

### Chapter 1 Introduction1-1

1.1 Description .....	1-1
1.2 How to Use This Manual .....	1-2
1.3 Integrated Help .....	1-2
1.4 Theory of Operation .....	1-2

### Chapter 2 Installation

2.1 Hardware Requirements .....	2-1
2.2 System Requirements .....	2-1
2.3 Installing the Brooks Expert Support Tool Application .....	2-2
2.4 License Installation .....	2-5
2.5 Uninstalling the Brooks Expert Support Tool Application .....	2-6
2.6 Connecting the PC to the Device .....	2-6
2.6.1 Connection Hardware Requirements .....	2-7
2.6.2 Connection Procedure .....	2-8
2.6.3 Disconnecting the PC from the Device .....	2-10

### Chapter 3 Basic Operations

3.1 Main Screen .....	3-1
3.2 Attaching to a Device .....	3-2
3.3 Main Graph .....	3-3
3.4 Closing the Session with the Device and Exiting BEST .....	3-4
3.5 Brooks Expert Support Tool Conventions .....	3-4
3.6 Menu Bar .....	3-5

### Chapter 4 File Menu

### Chapter 5 Help Menu Item

5.1 About Window .....	5-1
5.1.1 License Info Window .....	5-2
5.1.2 Install License Window .....	5-2
5.1.3 EULA Window .....	5-2
5.2 User Manual Menu .....	5-3
5.3 ReadMe Menu .....	5-3

### Chapter 6 Window Menu

### Chapter 7 Settings

7.1 Graph Options .....	7-1
7.2 Reset All User Options .....	7-2
7.3 Data Logging Options .....	7-2
7.4 User Totalizer Options .....	7-3

### Chapter 8 Monitoring Menu

8.1 Warning Status .....	8-1
8.2 Alarm Status .....	8-1
8.3 User Totalizer Window .....	8-3
8.4 Graph Window .....	8-3

## Chapter 9 Tools Menu

9.1 Pressure Units Calculator .....	9-1
9.2 Flow Units Calculator .....	9-1
9.3 Temperature Units Calculator .....	9-2
9.4 Density Units Calculator .....	9-2

## Chapter 10 Device Comm Menu

10.1 Device Connection Window .....	10-1
10.1.1 Connecting to an Unconfigured Device .....	10-3
10.2 Terminal Window .....	10-5

## Chapter 11 Device Config Menu

11.1 Dump Files .....	11-2
11.2 Device Info .....	11-4
11.3 Model Code Window .....	11-4
11.4 Gas Page Configuration .....	11-5
11.5 Protocol Settings Window .....	11-5
11.6 RT Control Mode .....	11-5
11.7 Meter Simulate MFC .....	11-5
11.8 Alarm Settings .....	11-7
11.9 Config Parameters .....	11-8

## Chapter 12 Device Control Menu

12.1 Reboot Device .....	12-1
12.2 Valve Control .....	12-1
12.3 Delta Device Services .....	12-2

## Chapter 13 Calibration Menu

13.1 Pressure Controller Setup Diagram .....	13-1
13.2 Sensor Zero .....	13-2
13.3 Flow Sensor Zero .....	13-2
13.4 Pressure Sensor Zero .....	13-4
13.5 Analog Output Calibration .....	13-5
13.6 Analog Input Calibration .....	13-10
13.7 RT/Aux Input Calibration .....	13-13
13.8 Cal Pages .....	13-14
13.9 Flow Cal Pages .....	13-14
13.10 Pressure Cal Pages .....	13-16
13.11 Calibration .....	13-18
13.11.1 Flow Calibration - SLA Rev A Delta Smart II Devices .....	13-18
13.11.2 Pressure Controller Calibration .....	13-28
13.11.3 RT Device Calibration .....	13-28
13.12 Valve Tuning .....	13-29
13.12.1 Checking Offset and Span Values .....	13-30
13.12.2 Adjusting Offset and Span Values - Manual Tuning - For MFC Devices .....	13-31
13.12.3 Checking and Adjusting Offset & Span Values - Manual Tuning - For Pressure Devices .....	13-32
13.12.4 Adjusting the Offset and Span Values - Auto Tuning .....	13-33
13.12.5 Dynamically Adjusting the Offset and Span Values During Device Operation .....	13-35
13.13 Response Tuning .....	13-36
13.13.1 Response Tuning (Flow) .....	13-36
13.13.2 Response Tuning (Pressure) .....	13-42
13.14 Print Top Label .....	13-43

**Chapter 14 Viewing and Setting the Device Configuration (SLA Rev A)**

14.1 Viewing the Control Response Parameters .....	14-1
14.2 Viewing Device Information .....	14-4
14.3 Viewing Filter Parameters .....	14-5
14.4 Viewing Flow Sensor Parameters .....	14-5
14.5 Setting the Output Signal Behavior .....	14-10
14.6 Viewing and Setting Pressure Sensor Parameters .....	14-11
14.7 Viewing and Setting Setpoint Parameters .....	14-11
14.8 Viewing and Setting Valve Parameters .....	14-12
14.9 Viewing Selected Live Measurement Parameters .....	14-16

**Chapter 15 Viewing and Setting the Device Configuration (Quantim)**

15.1 Setting Units of Measure .....	15-1
15.2 Viewing and Setting Alarms .....	15-2
15.3 Diagnostic Alarm .....	15-2
15.4 Configuring Optional Warnings and Alarms .....	15-3
15.5 Modifying Standard Alarm Behavior .....	15-4
15.6 Viewing the Control Response Parameters .....	15-5
15.7 Viewing Device Information .....	15-6
15.8 Viewing HART Protocol Parameters .....	15-7
15.9 Viewing and Setting Primary and Secondary Output Parameters .....	15-8
15.10 Viewing Sensor Parameters .....	15-10
15.11 Viewing Setpoint Parameters .....	15-12
15.12 Viewing Valve Parameters .....	15-13
15.13 Viewing Selected Live Measurement Parameters .....	15-14

## Figures

Figure 1-1 BEST Main Screen .....	1-1
Figure 2-1 Running Setup.exe as an Admin .....	2-3
Figure 2-2 Installer Software Component Menu .....	2-4
Figure 2-3 License Installation Window .....	2-5
Figure 2-4 License Information Window .....	2-6
Figure 2-5 3-Wire Communications Cable and Adapter .....	2-7
Figure 2-6 SLA Rev A Device with Cover Removed .....	2-8
Figure 2-7 3-wire communications cable attached; black wire toward LEDs .....	2-9
Figure 2-8 Cable/Adapter Connection to PC .....	2-9
Figure 3-1 Main Screen with Device Connection Window .....	3-1
Figure 3-2 Device Connection Window, Device Attached .....	3-2
Figure 3-3 Executing Mode Window .....	3-3
Figure 3-4 Idle Mode Window .....	3-3
Figure 3-5 Graph Window .....	3-3
Figure 3-6 Example Numeric Up/Down Control .....	3-4
Figure 4-1 File->Exit Menu .....	4-1
Figure 5-1 Help Menu .....	5-1
Figure 5-2 About Window .....	5-1
Figure 5-3 License Information Window (Your versions may vary) .....	5-2
Figure 5-4 License Install Window .....	5-2
Figure 6-1 Window Menu .....	6-1
Figure 6-2 Cascaded Window Layout .....	6-2
Figure 6-3 Tiled Window Layout .....	6-2
Figure 6-4 Minimized Windows .....	6-3
Figure 7-1 Settings Menu .....	7-1
Figure 7-2 Graph Options Window .....	7-1
Figure 7-3 Data Logging Options .....	7-3
Figure 7-4 User Totalizer Options .....	7-3
Figure 8-1 Monitoring Menu (not all devices support all menus) .....	8-1
Figure 8-2 Alarm Status Window, Delta Lite/Smart II Device .....	8-2
Figure 8-3 Alarm Status Window, Quantim Device .....	8-2
Figure 8-4 User Totalizer Window .....	8-3
Figure 8-5 Main Graph Window .....	8-3
Figure 8-6 Main Graph Window with Cursor .....	8-5
Figure 8-7 Main Graph Window with Context Menu .....	8-6
Figure 8-8 Graph Window Zoomed .....	8-6
Figure 9-1 Tools Menu .....	9-1
Figure 9-2 Pressure Units Calculator .....	9-1
Figure 9-3 Flow Units Calculator .....	9-2
Figure 9-4 Temperature Units Calculator .....	9-2
Figure 9-5 Density Units Calculator .....	9-3

## Brooks® Expert Support Tool

Figure 10-1 Device Connection Menu.....	10-1
Figure 10-2 Device Connection Window, with No Devices Attached.....	10-1
Figure 10-3 No Device Connected Message .....	10-1
Figure 10-4 Connection Window, with a Device Attached.....	10-2
Figure 10-5 Fix Model Code Window.....	10-4
Figure 10-6 Terminal Window with a read operation.....	10-6
Figure 10-7 Terminal Window with a write operation.....	10-7
Figure 11-1 Device Config Menu (Quantim).....	11-1
Figure 11-2 Device Config Menu (SLA Rev A).....	11-1
Figure 11-3 Device Config Menu (SLA Rev A, Delta Lite).....	11-1
Figure 11-4 BEST Control Message .....	11-2
Figure 11-5 Dump File Window, SLA Rev A Delta .....	11-2
Figure 11-6 Dump File Window, Select Pages Form.....	11-3
Figure 11-7 Device Info Window .....	11-4
Figure 11-8 Model Code Window.....	11-4
Figure 11-9 RT Control Mode Window.....	11-5
Figure 11-10 Meter Simulate MFC Window .....	11-6
Figure 11-11 Alarm Settings, SLA Rev A/Delta Lite/Smart II Class Devices .....	11-7
Figure 11-12 Alarm Behavior Settings, SLA Rev A/Delta Lite/Smart II class devices.....	11-8
Figure 12-1 Device Control Menu .....	12-1
Figure 12-2 Reboot Device Window .....	12-1
Figure 12-3 Valve Control Window .....	12-2
Figure 12-4 Delta Device Services.....	12-3
Figure 13-1 Calibration Menu .....	13-1
Figure 13-2 Pressure Controller Setup Diagram .....	13-2
Figure 13-3 Flow Sensor Zero Window.....	13-3
Figure 13-4 Pressure Sensor Zero Window .....	13-5
Figure 13-5 Typical Analog Output Calibration Setup, Voltage .....	13-6
Figure 13-6 Typical Analog Output Calibration Setup, Current.....	13-6
Figure 13-7 Analog Output Calibration Window .....	13-7
Figure 13-8 Analog Output Check Window.....	13-7
Figure 13-9 Analog Output Cal, Low Point.....	13-8
Figure 13-10 Analog Output IO Cal RevA Entry Form.....	13-8
Figure 13-11 Analog Output Cal, Select Analog Output Window .....	13-9
Figure 13-12 Primary Analog Output Cal Window.....	13-9
Figure 13-13 Secondary Analog Output Cal Window .....	13-10
Figure 13-14 Typical Setup for Calibrating an Analog Input for Voltage .....	13-11
Figure 13-15 Typical Setup for Calibrating an Analog Input for Current .....	13-11
Figure 13-16 Analog Input Calibration Window.....	13-12
Figure 13-17 Analog Input Entry .....	13-13
Figure 13-18 RT Pressure Sensor Attribute Entry Window .....	13-13
Figure 13-19 Cal Pages Window, for Flow Devices .....	13-14
Figure 13-20 Cal Pages Window, for Flow Devices, .....	13-15
Figure 13-21 Cal Pages Window, for Pressure Devices.....	13-16
Figure 13-22 Create Default Page Window, for Pressure Devices.....	13-17
Figure 13-23 Flow Calibration Window (Pre-Cal tab selected).....	13-19
Figure 13-24 Flow Calibration, Calibration Tab.....	13-21
Figure 13-25 Edit Setpoints Window.....	13-22
Figure 13-26 Calibration Tab (filled out).....	13-23
Figure 13-27 Flow Cal, Meter Setpoint Prompt .....	13-23
Figure 13-28 Flow Calibration, Linearization Tab.....	13-24

## Brooks® Expert Support Tool

Figure 13-29 Flow Calibration, Validation Page (filled out).....	13-25
Figure 13-30 Flow Cal, Cert Sheet Preview Page.....	13-27
Figure 13-31 Flow Cal, Cert Sheet.....	13-28
Figure 13-32 Valve Tuning Window.....	13-30
Figure 13-33 Auto Tuning Parameters Window.....	13-34
Figure 13-34 Auto Tuning In Progress, Course Adjust.....	13-34
Figure 13-35 Auto Tuning In Progress, Cycling.....	13-35
Figure 13-36 Auto Tuning Complete.....	13-35
Figure 13-37 Flow Valve Tuning Setup Window, SLA Rev A.....	13-37
Figure 13-38 Flow Valve Tuning Setup Window, Quantim.....	13-37
Figure 13-39 Flow Valve Tuning Operation.....	13-38
Figure 13-40 Valve Tuning, Kp Value Is Too High, or Ki Is Too Low.....	13-38
Figure 13-41 Valve Tuning, Kp and Ki Values Too Low.....	13-39
Figure 13-42 Original PID Settings.....	13-39
Figure 13-43 Valve Tuning, Increase Kp Value.....	13-40
Figure 13-44 Valve Tuning, Overshoot.....	13-40
Figure 13-45 Valve Tuning, Overshoot.....	13-41
Figure 13-46 Pressure Valve Tuning Setup Window (SLA Rev A).....	13-42
Figure 13-47 Top Label.....	13-44
Figure 13-48 Print Top Label Window.....	13-44
Figure 14-1 Control->Response - Flow.....	14-1
Figure 14-2 Control->Response - Pressure.....	14-2
Figure 14-3 Control->Config-Flow.....	14-2
Figure 14-4 Control->Config-Pressure.....	14-3
Figure 14-5 Device->Device Info.....	14-4
Figure 14-6 Device->Misc Configuration.....	14-4
Figure 14-7 Filters.....	14-5
Figure 14-8 Flow Sensor->Flow Calibration.....	14-5
Figure 14-9 Flow Sensor->Cal Conditions.....	14-6
Figure 14-10 Flow Sensor->TruCal.....	14-6
Figure 14-11 Flow Sensor->Custom.....	14-7
Figure 14-12 Flow Sensor->Zero.....	14-7
Figure 14-13 Flow Sensor->Response.....	14-8
Figure 14-14 Flow Sensor->Corrections.....	14-8
Figure 14-15 Flow Sensor->Scaling.....	14-9
Figure 14-16 Outputs.....	14-10
Figure 14-17 Pressure Sensor.....	14-11
Figure 14-18 Setpoint->Flow.....	14-11
Figure 14-19 Setpoint->Pressure.....	14-12
Figure 14-20 Valve-> Adjust-Flow.....	14-12
Figure 14-21 Valve->Adjust-Pressure.....	14-13
Figure 14-22 Valve->Config-Flow.....	14-13
Figure 14-23 Valve->Config-Pressure.....	14-14
Figure 14-24 Valve->Adaptive Control - Flow.....	14-15
Figure 14-25 "Live" Variables.....	14-16
Figure 15-1 Units of Measure.....	15-1
Figure 15-2 Alarms->Diagnostic.....	15-2
Figure 15-3 Typical Alarm Settings (Density Alarm Shown).....	15-3
Figure 15-4 Alarms->Configuration (On = Enable, Off = Disable).....	15-4
Figure 15-5 Control->Response-Flow.....	15-5
Figure 15-6 Control->Config-Flow.....	15-5
Figure 15-7 Device->Device Info.....	15-6

## Brooks® Expert Support Tool

Figure 15-8 HART Protocol.....	15-7
Figure 15-9 Outputs->Primary Output.....	15-8
Figure 15-10 Outputs->Secondary Output.....	15-8
Figure 15-11 Sensor->Zero .....	15-10
Figure 15-12 Sensor->Flow Calibration .....	15-10
Figure 15-13 Sensor->Density Cal.....	15-11
Figure 15-14 Sensor->Status.....	15-11
Figure 15-15 Setpoint->Flow .....	15-12
Figure 15-16 Valve->Adjust - Flow.....	15-13
Figure 15-17 Valve->Config - Flow .....	15-13
Figure 15-18 Valve->Adaptive Control - Flow .....	15-14
Figure 15-19 Variables->Mass Flow .....	15-14
Figure 15-20 Variables->Volumetric Flow .....	15-15
Figure 15-21 Variables->Temperature .....	15-15
Figure 15-22 Variables->Density .....	15-16

Tables

Table 2-1 System Requirements .....2-1

Table 2-2 Features Requiring a License for SLA Rev A and Quantim Products.....2-2

Table 2-3 FloCom Recommended Versions Installed with BEST 5.14.0.0 .....2-4

Table 15-1 Affected by Alarm Disable Options.....15-4

## Chapter 1 Introduction

### 1.1 Description

The Brooks' Expert Support Tool is a Windows®-based application that provides expanded monitoring & control of the Brooks' digital thermal mass flow controller/meter, flow controller/meter, pressure controller and remote pressure transducer (RT), and pressure-based flow controller modes for servicing tasks that include setup, configuration, calibration, tuning, control, monitoring, and troubleshooting. For device troubleshooting information, refer also to the device's Installation and Operations Manual.

BEST is a direct replacement for the obsolete BSS/BST software. BEST adds support for Quantim and SLA Rev A devices. It does not add support for model 4800 devices.

Use of some features requires a Pro software license which is obtainable on a subscription basis. Contact Brooks Instrument to obtain a license. See **Table 2-2** for a list of which features require a license.

Note that this user manual covers only the use of BEST with SLA Rev A ("Legacy") and Quantim B devices. BEST also supports SLA Rev B ("Enhanced"), PC1xx, VDM300, GF40, GF1xx, and GP200 devices. Those products are covered by a separate BEST user manual for those products.

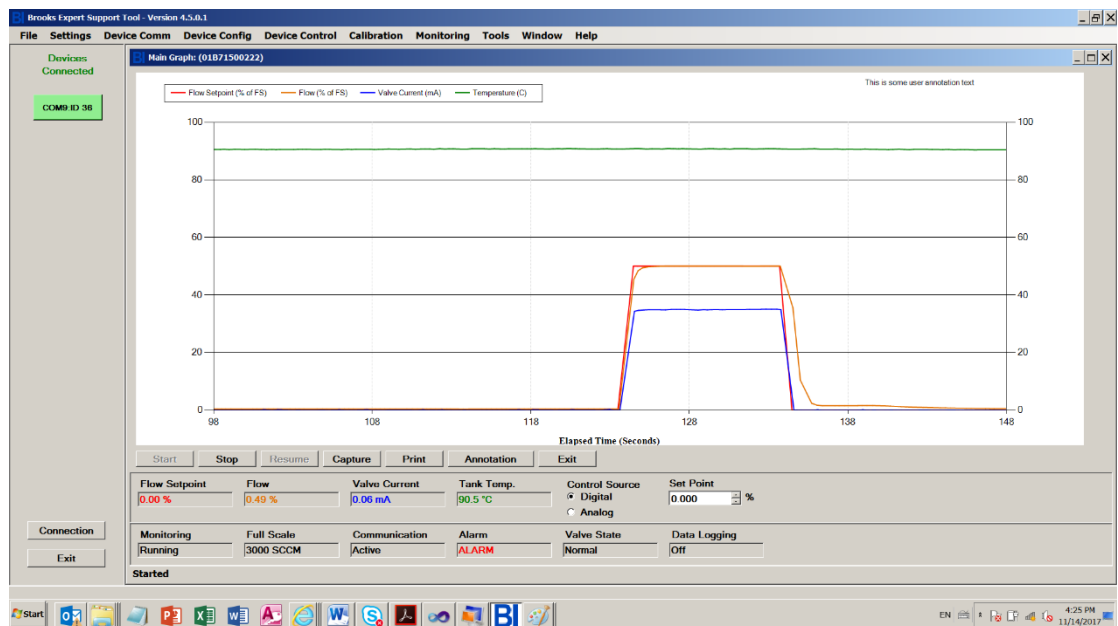


Figure 1-1 BEST Main Screen

Note that the Brooks Expert Support Tool is meant to be used as a startup and troubleshooting tool. It is not intended to be permanently connected to the device in your system/application.

## 1.2 How to Use This Manual

It is recommended that you read the device Installation & Operations Manual (IOM) prior to reading this manual. Read this manual in its entirety before installing or using the Brooks Expert Support Tool.

Note that the illustrations of screens from BEST are illustrative – the exact appearance on your computer screen may vary slightly. Also, if software versions are shown on the illustrations, your versions may vary slightly.

**Note:** For device troubleshooting information, refer to the device's Installation and Operations Manual.

## 1.3 Integrated Help

This user manual (which is searchable) can be accessed directly from the software, on the About->User Manual menu item. See **Section 5.2**.

## 1.4 Theory of Operation

A typical mass flow measurement and control system consists of two components:

- **Mass flow meter.** A mass flow meter incorporates a sensor that measures the amount of mass flow and generates an electrical output signal directly proportional to the mass flow rate.
- **Control valve.**

Mating a control valve with a mass flow meter provides a mass flow controller (MFC).

Implementing a mass flow controller requires using the mass flow output signal as one input and a user-supplied setpoint signal as another input into a comparator circuit. These two signals are then compared and a control signal is generated to operate the opening or closing of the valve. The setpoint signal is, in effect, a request that the mass flow controller maintain a fixed mass flow rate.

BEST, which communicates with the device through an RS-232 connection (or RS232/USB adapter) between the PC and the device's service port connector, uses a digital signal based on a proprietary protocol. The Service Tool has two operating modes:

- **Indicator**, in which the Service Tool is reporting on the data sent to it from the device, which is being controlled by the normal setpoint source.
- **Control**, in which the Service Tool user specifies the setpoint, overriding the normal setpoint source.

In either arrangement, the device will attempt to manage the opening and closing of the control valve to maintain the amount of mass flow as requested by the setpoint source.

Note that BEST is meant to be used as a startup and troubleshooting tool. It is not intended to be permanently connected to the device in your application.

## Chapter 2 Installation

This chapter describes the system requirements, how to install the BEST software onto a personal computer (PC), and how to connect the PC to the device.

### 2.1 Hardware Requirements

BEST communicates with Brooks SLA Rev A and Quantim devices via a service port connector (or “diagnostics port”) that is accessed by removing the device cover (see also [Section 2.6.1](#)). See also the device installation manual.

This port is connected to the computer via a serial port or a standard USB port with USB to serial adapter. This requires the following cabling as follows:

- 1.) 3-wire communications cable, Brooks part# S778D023ZZZ
- 2.) RS232 to TTL communications interface adapter
- 3.) USB to RS232 communications interface adapter (optional, for USB port connection)

This equipment may be purchased either along with the Brooks Expert Support Tool software or separately from Brooks Instrument. Contact the factory or your local representative for details.

**\*NOTE:** No “license dongle” is required, but a software license is required for Pro features of BEST.

### 2.2 System Requirements

This chapter describes system and software requirements to use the Brooks Expert Support Tool application on a personal computer (PC).

The Brooks Expert Support Tool application can be installed on a Windows PC with the following requirements:

Table 2-1 System Requirements

Component	Minimum Requirements
Operating System	Microsoft Windows 11 Microsoft Windows 10 Microsoft Windows 8 – BEST has not been formally tested with Windows 8
COM Port	One dedicated serial port or USB port with USB/serial adapter, and RS232 to TTL adapter
Software License	Required for Pro Features (Calibration) See <a href="#">Table 2-2</a> below for specifics

Table 2-2 Features Requiring a License for SLA Rev A and Quantim Products

Feature	Standard (No license)	PRO License
Connection	✓	✓
Terminal Commands	X	✓
Device Info	✓	✓
Model Code Editing <sup>1</sup>	X	✓
Dump File	✓	✓
Wake Up State	✓	✓
Protocol Settings	✓	✓
Get Firmware Revision	✓	✓
Meter Simulate MFC <sup>1</sup>	X	✓
Reboot/Power Cycle	✓	✓
Control Source/Valve Control/Set Point	✓	✓
Gas Page Creation <sup>2</sup>	✓	✓
Calibration <sup>2</sup>	✓	✓
Graph/Basic Status/Meters	✓	✓
Warning Status	✓	✓
Alarm Status	✓	✓
Data Logging	✓	✓
Sensor Zero	✓	✓
Tuning	✓	✓
Calibrate input and output signals	✓	✓
Guided Flow Calibration (SLA Rev A Delta/Smart II only)	X	✓
Manual Calibration (SLA Rev A Delta only)	✓	✓
Graph Settings	✓	✓
Warning Settings	✓	✓
Alarm Settings	✓	✓
Calculators	✓	✓
Top Label Printing	✓	✓

1 Model code editing Not supported for Quantim B

2 SLA only, where supported

## 2.3 Installing the Brooks Expert Support Tool Application

This Chapter describes how to install the Brooks Expert Support Tool application onto a personal computer (PC).

Uninstallation of existing versions of BEST prior to installation is not required, but recommended. See [Section 2.5](#) for more details about uninstallation.

## Brooks® Expert Support Tool

To install the Brooks Expert Support Tool application, download the BEST installer file from the Products/Software Chapter of the Brooks Instrument website ([www.brooksinstrument.com](http://www.brooksinstrument.com)). Once the installation file is downloaded, decompress if necessary.

Before installing, open and read the Readme file for last-minute updates and helpful notes that may not be included in this user manual.

Before starting the BEST installer, it is recommended to disconnect or power down any mass flow devices connected to the computer's serial ports or USB ports.

Run the setup.exe file - it is recommended to run this file as an administrator. Right click on the file and a pop-up menu appears. (See **Figure 2-1**). Click "Run as administrator."

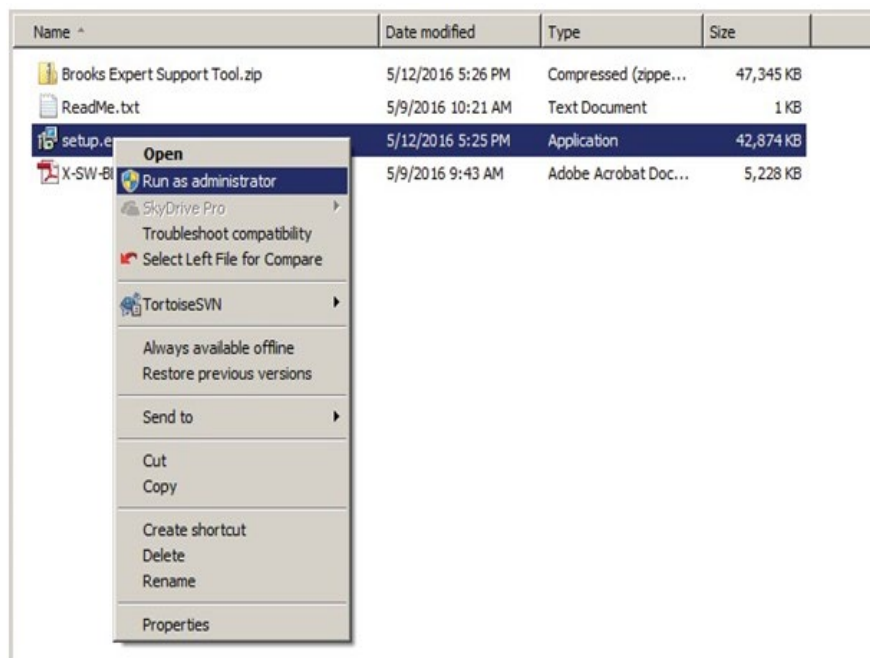


Figure 2-1 Running Setup.exe as an Admin

Next, follow the installation instructions provided by the software. It is recommended to install BEST and its components in the default folders provided by the installer.

The installer will install BEST and its required software components, including versions of FloCom, FloComPlus and the FloCom databases.

For users who require a specific version of the FloCom database component, during the installation, the user will be presented with a software component selection menu (See **Figure 2-2**). Uncheck the item FloCom Databases to preserve the currently installed version/not install the version from the installer.

**\*NOTE:** It is recommended to run this version of BEST with certain versions of FloCom, FloComPlus, and FloCom database – these should be installed for maximum functionality. If you do not install the database version from the installer you must ensure that the desired version of FloCom database is installed separately from the BEST installer.

Table 2-3 FloCom Recommended Versions Installed with BEST 5.14.0.0

Program	Required Version
FloCom	6.20
FloComPlus	2.04
FloCom Database	20240405

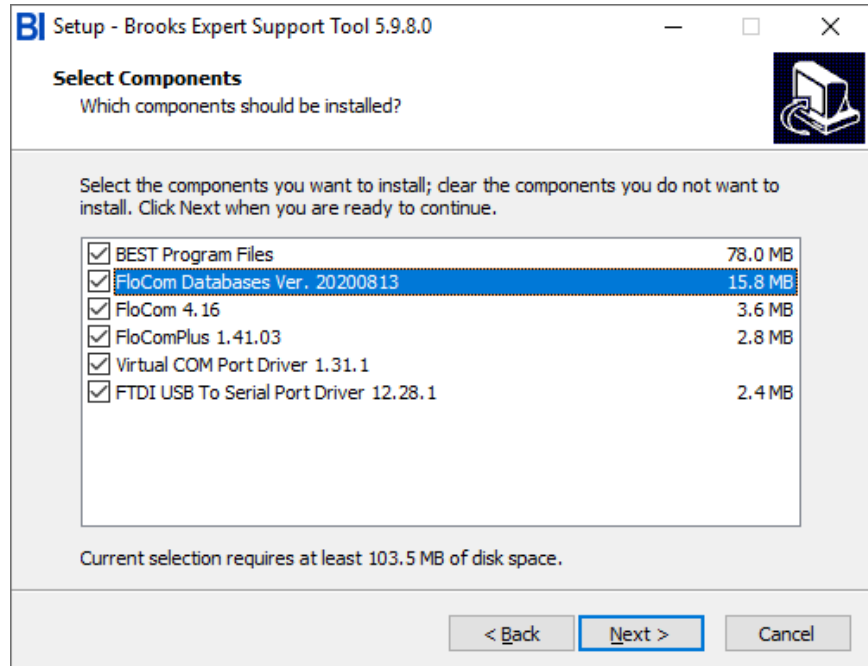


Figure 2-2 Installer Software Component Menu  
(Your versions may vary)

**Virtual COM Port Driver:** To use BEST with the VDM300 device it is necessary to install the virtual COM port (serial port/USB) driver. This driver is normally installed via the BEST installer. Make sure that the Virtual COM Port Driver check box is checked (see **Figure 2-2**).

See also the ReadMe file for more information about the Virtual COM port driver.

**USB to Serial Port Driver:** To use BEST with the USB to RS485 adapter, this driver is needed.

During installation, if it is installing a software component that already exists, the installer may present you with the options of Modify, Repair, or Remove, or similar: typically, choose repair. If it presents you with the options Complete or Custom, choose Complete.

The installer will optionally create an item in the Brooks Instrument program group and a shortcut icon on the Windows desktop.

Upon completion of installation, a software license must also be installed for access to Pro features of BEST. Contact Brooks Instrument to obtain a license. License installation instructions are covered in **Section 5.1.2**.

## 2.4 License Installation

To obtain a license, the user must contact Brooks Instrument to obtain a yearly license subscription. The user will receive a license key (a number), then enter it in the License Key text block.

\*NOTE: After receiving your license key, store it in a secure location (backed up and secure from unauthorized use) for later retrieval.

Normally, the license installation process requires an Internet connection. A license can be installed without an Internet connection – contact Brooks Instrument for details.

To install a license, click on the menu Help->License->Install License. The window in **Figure 2-3** will appear.

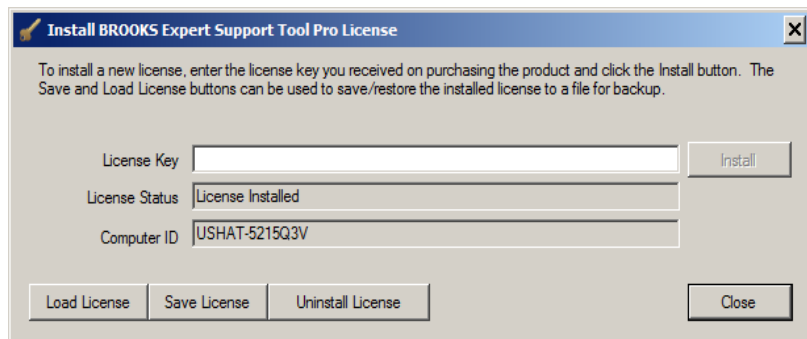


Figure 2-3 License Installation Window

Copy and paste your license key text into the License Key text box. Then click Install. The software will attempt to use an Internet connection to contact Brooks Instrument to verify the license. Then the license will be installed on the local computer. You will receive a message when it is finished. To view the installed license, click the menu item Help->License->Info. See also **Section 5.1.1**.

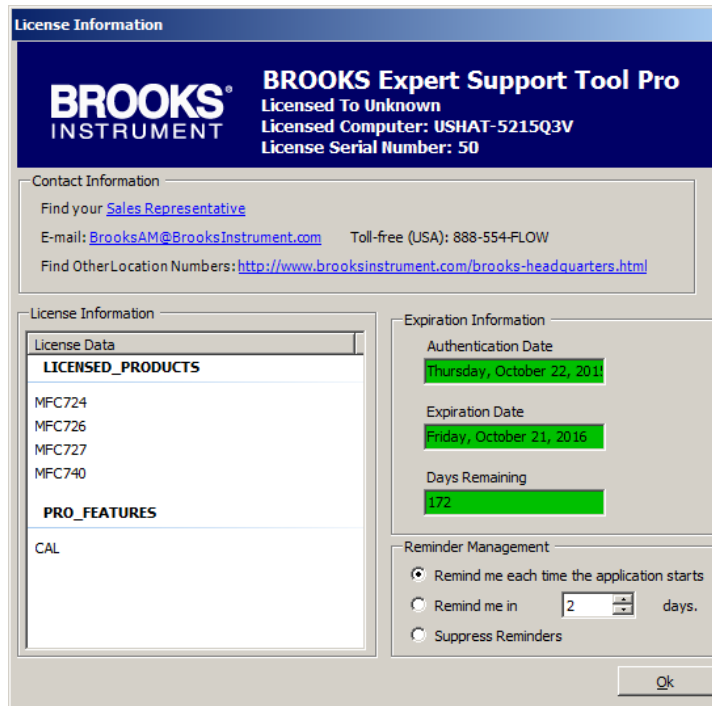


Figure 2-4 License Information Window

## 2.5 Uninstalling the Brooks Expert Support Tool Application

To uninstall BEST, go to the Windows Control Panel -> Programs and Features. Look for any items entitled “Brooks Expert Support Tool”. Right click the item and select Uninstall. Follow the onscreen instructions.

Repeat for any items with the title “Brooks Expert Support Tool”.

**\*NOTE:** The uninstallation does not uninstall any of the auxiliary components such as FloCom or FloCom databases, installed with BEST. These do not necessarily need to be uninstalled, but to uninstall, repeat the above paragraph for the items “FloCom”, “FcPlus”, etc.

## 2.6 Connecting the PC to the Device

This Chapter describes the procedure for connecting the PC running BEST to the device’s service port, for both the SLA Rev A and Quantim devices.

### 2.6.1 Connection Hardware Requirements

The following tools and cables are required to connect the PC serial port to the device's service port:

- 3-wire communications cable (between the interface connector and the device's service port connector)
  - Brooks part# S778D023ZZZ
- RS-232 to TTL communications interface adapter.
- USB to RS-232 to TTL communications interface adapter (optional for use with USB port)
- Phillips headscrewdriver



RS-232 to TTL adapter

3-wire cable

Figure 2-5 3-Wire Communications Cable and Adapter

## 2.6.2 Connection Procedure

To connect the PC to the device's service port:

### ⚠ CAUTION

The electronics within this device are Electrostatic Discharge (ESD) sensitive. Be sure to follow proper ESD precautions at all times while the service port connector is exposed. The unit chassis should be adequately grounded. The operator should also be grounded (via wrist/ankle strap) when contacting the device while the service port is exposed. Failure to follow these precautions may void your device warranty.

1. Turn off power to the device.
2. Remove the standard cable from the device's 15-pin D-connector.
3. Remove screws from the top cover.
4. Remove the cover.


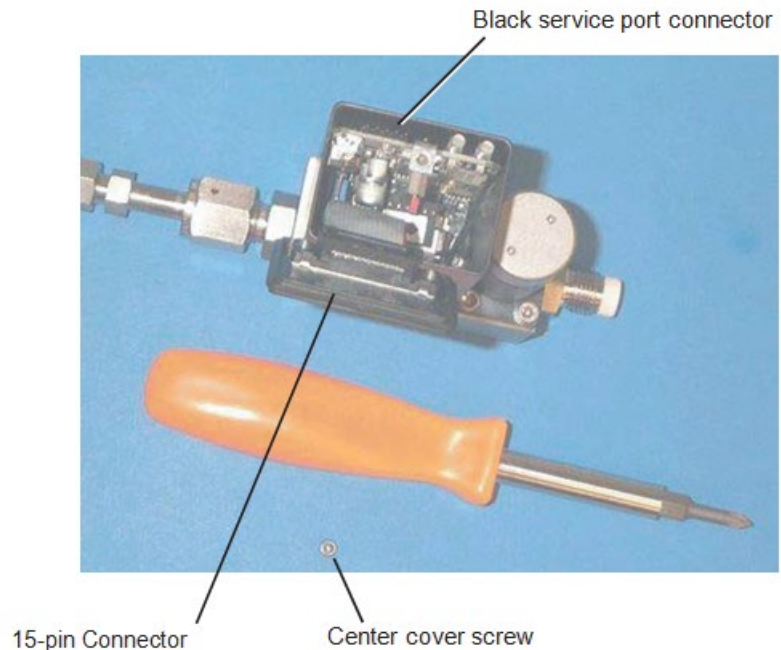


Figure 2-6 SLA Rev A Device with Cover Removed

5. Connect the 3-wire communications cable to the device's service port, the black connector located behind the D-connector. Align the communications cable's 5-pin connector with the **black wire** towards the **center** of the device (towards the LEDs), as shown in the following illustration.

3-wire communications cable attached; black wire toward LEDs

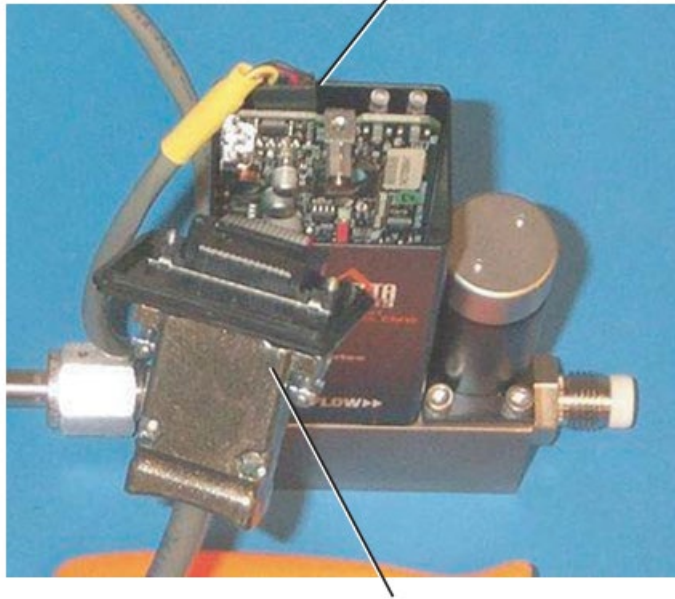

Standard cable connected to D-connector

Figure 2-7 3-wire communications cable attached; black wire toward LEDs

6. Connect the RS232 to TTL communications adapter to the D-Connector of the 3-wire communications cable. Make sure to connect the end labeled TTL to the cable.
7. If you are using your PC's serial port, connect the RS232 to TTL adapter directly to a serial port on your computer. Make sure to connect the end labeled RS232 to the serial port.

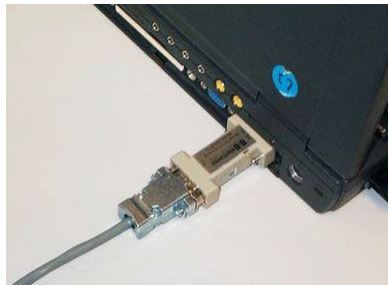


Figure 2-8 Cable/Adapter Connection to PC

8. If you are using your PC's USB port, connect the USB to RS232 communications adapter's D-connector to the RS232 to TTL adapter's end labeled RS232. Then connect the other end of the USB to RS232 adapter to the computer's USB port.
9. Reconnect the standard cable to the device's D-connector. This connection is used to apply power and the analog setpoint to the device while using the Service Tool.
10. Turn on power to the device.

### 2.6.3 Disconnecting the PC from the Device

When you are done using the Service Suite, you should disconnect the PC from the device and reinstall the device's cover.

To disconnect the PC from the device's service port:

1. Detach from the device using BEST.
2. Exit from BEST software, optionally.
3. Turn off power to the device.
4. Disconnect the standard cable and the 3-wire communications cable from the device.
5. Disconnect the interface adapter from your PC.
6. Place the cover onto the device, and reattach it using the screws.
7. Reconnect the standard cable to the device's 15-pin D-connector.

You can now reapply power to the device and begin using it in a process application.

## Chapter 3 Basic Operations

This Chapter gives a general introduction to the basic operation of BEST, including starting BEST, the main screen, establishing communications with a device, viewing the main graph window, detaching from a device, and the menus.

### 3.1 Main Screen

To start BEST, select BEST from your **Start** menu, or double-click its application shortcut. The main window displays, with no devices connected.

Title Bar->

Menu Bar->

Devices Panel->

Status Bar->

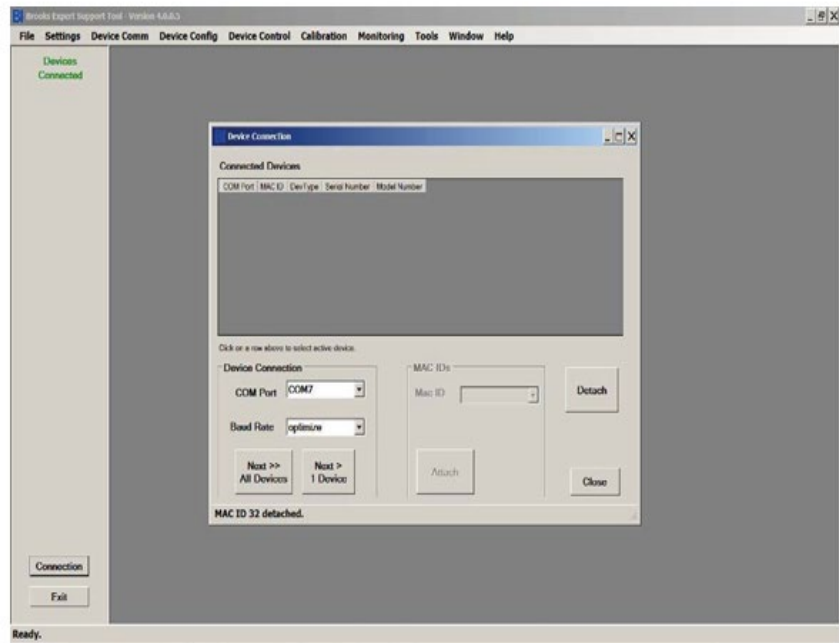


Figure 3-1 Main Screen with Device Connection Window

The **Title Bar** shows the name and current version of the software. The title bar can also be used to select, move, and maximize the window, according to Windows conventions.

The **Menu Bar** is where most functionality of BEST is accessed. BEST windows are opened from the menu bar. Menu items are typically accessed from left to right and top to bottom.

**The BEST desktop** is where all opened BEST windows exist. This is similar to the Windows desktop, except that this desktop contains only BEST windows. See **also Chapter 6**.

The **Status Bar** shows useful instructions and messages about the current status of the software and its processes.

If the user is using dual monitors, the user may gain additional space for windows by dragging the edge of main screen across to the additional monitor.

When the software first starts, it shows the device connection window in the center of the Window Background. To use most features of BEST, you must first “attach” (or establish communication with) a device using the connection window. See **Section 10.1** for more details about the Connection Window.

### 3.2 Attaching to a Device

The first thing to do is to establish communications with (or “attach” to) a device.

When BEST software starts, no devices are attached. Devices are attached via the device connection window. For convenience, the software opens the device connection window for you upon startup.

First, in the Device Connection/Port drop-down list (See **Figure 3-2**), select the COM Port you are using to connect to your device.

Next, select the desired Baud rate from the Device Connection/Baud rate drop-down list. Most users will choose optimize, which will automatically select the fastest baud rate that successfully communicates with the device. If you have trouble attaching to a device, you can try a lower baud rate to troubleshoot. Your selected port and baud rate selections will be retained by BEST for your convenience.

Click the **Next > 1 Device** button to find the connected MAC address. After a few moments, if a device is located, its MAC ID (or “address”) is listed in the Mac ID drop-down list. Note that for SLA Rev A and Quantim devices, the MACID will always be 0.

Once a device’s MAC address is located, click on the Attach button. After a few moments, if it is attached, a row appears in the connected devices box, as shown in **Figure 3-2**.

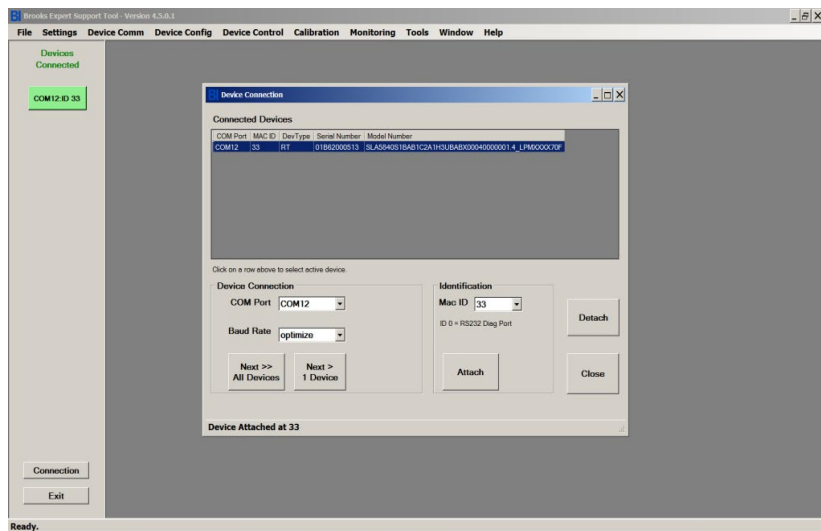


Figure 3-2 Device Connection Window, Device Attached

If a device has DeviceNet, Ethercat, or FieldBus, a window will pop up asking if you want to place the device in the executing state.

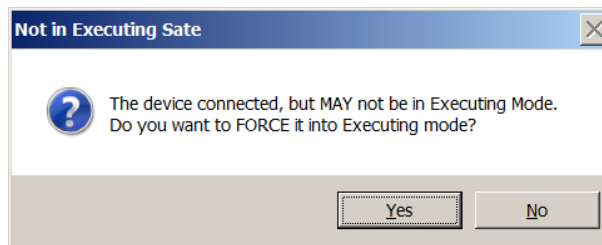


Figure 3-3 Executing Mode Window

If you need to control the device's setpoint with BEST, click Yes.

Once the device is attached, close the Device Connection window.

Likewise, when detaching from a device, it may ask you if you want to place the device in the idle state.

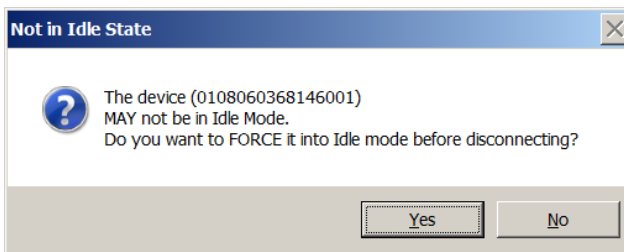


Figure 3-4 Idle Mode Window

See also [Section 10.1](#) for more details about device connections.

## 3.3 Main Graph

Once a device is attached, you can run the main graph to watch the behavior of the device. Click on the green button in the upper left corner of the Devices Connected block. The main graph window will open, then Click Start.

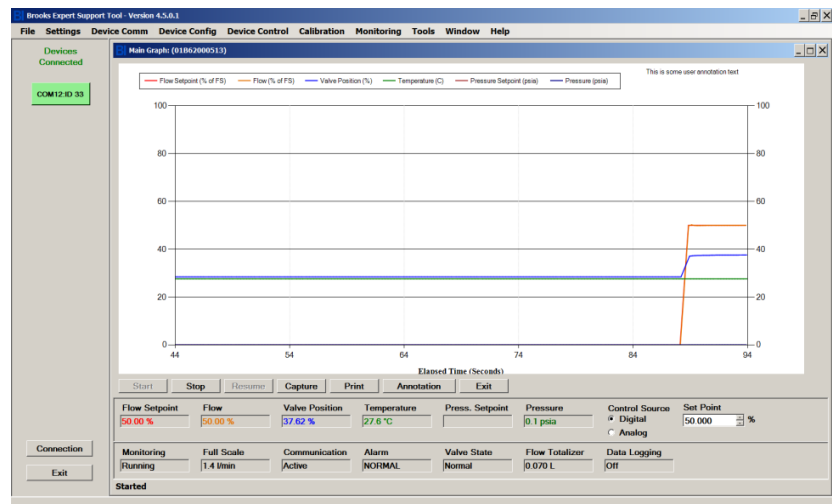


Figure 3-5 Graph Window

See [Section 8.4](#) for more details about the graph window.

### 3.4 Closing the Session with the Device and Exiting BEST

To close the communication session with a device and exit the software, open the File menu and choose Exit, or click the window's close button (the X in the upper right corner). Exiting the software automatically closes all communications with the device.

Alternatively, the user may close the communications with (or “detach” from) the device, by opening the Device Comm->Connection menu. Then click Detach. The user may attach to another device, if desired.

### 3.5 Brooks Expert Support Tool Conventions

The Brooks Expert Support Tool was designed to remain consistent with regard to how the user interacts with the application across all functions and features. It is also generally consistent with Windows user interface conventions.

The following text field conventions apply throughout the software:

Text fields with a gray background display a read-only value (such as the Current Position (%) in **Figure 3-6**).

Text fields with a white background are editable (such as Set Valve Position (%) in **Figure 3-6**).

Usually, editable text fields update the software or device either when the user clicks the Enter button, when the focus moves to another field by using the Tab key or mouse, or when a separate apply button is clicked (see each Chapter in the manual for specific instructions).

If a text box contains “NaN” or “n. def.” it means “Not a Number”, not defined, or invalid calculation result.

Many windows also require numeric input from the user. This type of window is also called a “form”. For numeric input, forms often feature numeric up/down controls. See **Figure 3-6** for an example of a numeric up/down control (circled).

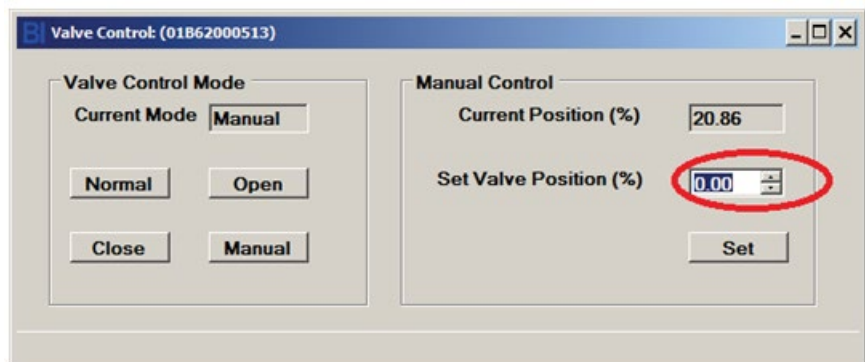


Figure 3-6 Example Numeric Up/Down Control

Up/down controls help prevent invalid numeric data entry. Click the up arrow to increment the numeric value, or the down arrow to decrement. Up/down controls also have maximum and minimum values. You may also type in a number directly, but it won't allow non-numeric entry. Also, in some cases, it won't accept a thousands separator character (for example, “,” in English culture). In most forms, you may also click enter to accept the entered value, or move the focus off the control to another control on the form.

## Brooks® Expert Support Tool

**Data Entry and International Locales:** While BEST doesn't translate all words from the English language, BEST supports various number and date formats for data entry and display, according to the user's computer settings for that region (see Control Panel->Region and Language on your computer). BEST uses the user's Windows settings for region and locale for most numeric data, except where noted in this manual. For example, when entering a decimal number in English a user might type 1.234 into a text box, but for German culture, one would enter 1,234 because in that culture the comma is the decimal separator.

**\*NOTE:** In some BEST windows you must always enter English formatted numbers (because that is what the device expects). For example, in the terminal window, you must use English decimal number formats because the commands that a device accepts require English. In those types of windows, a statement will be present on the form as a reminder.

For most windows in BEST, for data entry, you must use the format of your region, except where noted in this manual. Likewise, most windows will display numbers in the format of your region, except where noted in this manual.

The sample illustrations in this manual are shown using the English region formatting.

### 3.6 Menu Bar

The **Menu Bar** (see **Figure 3-1**) is where most functionality of BEST is accessed. BEST windows are opened from the menu bar, and then those windows will exist on the BEST Desktop. Menu items are typically accessed from left to right and top to bottom.

Note that this manual shows all menu items. Certain menus may not appear if the features of those menus are not supported by the currently selected device.

Subsequent chapters of this manual describe each of the menus in detail.

## Chapter 4 File Menu

The **File Menu Item** contains a place to exit the program. See **Figure 4-1** below. (You may also exit the program via the “X” in the upper right of the title bar, according to Windows convention).

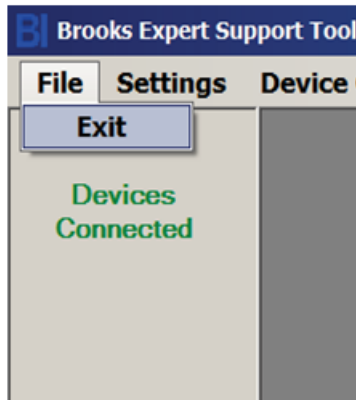


Figure 4-1 File->Exit Menu

## Chapter 5 Help Menu Item

The **Help Menu Item** is where information about the BEST software can be accessed, including the current version of BEST, licensing options, and user help. A device connection is not required to access these menu items.

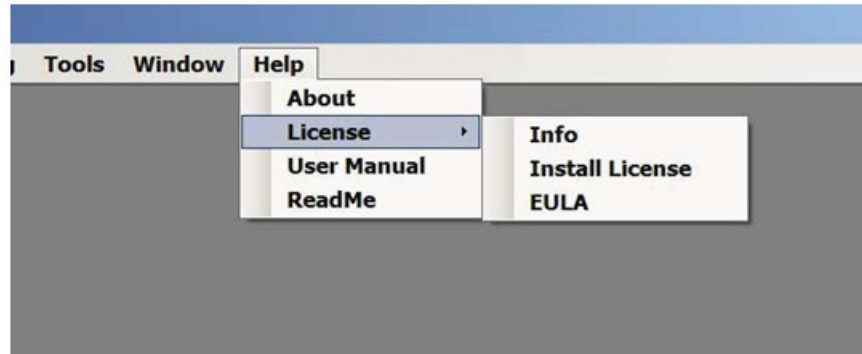


Figure 5-1 Help Menu

### 5.1 About Window

The **About-> About Menu Item** is where information about the current version of BEST and its software components can be viewed. Information provided includes the current version of BEST and its software components. (The current version of BEST is also always visible in the main screen's title bar.)

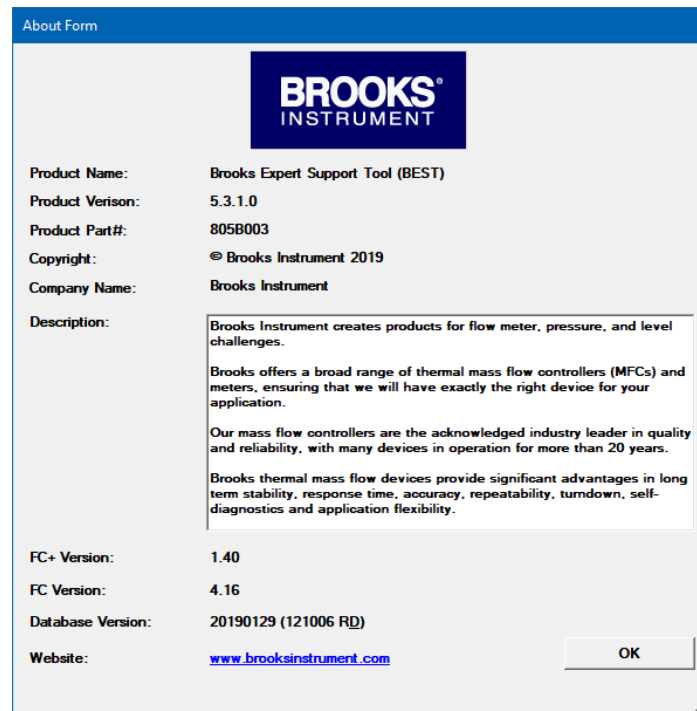


Figure 5-2 About Window  
(Your versions may vary)

## 5.1.1 License Info Window

The **License Info Menu Item** is where information about installed licenses for the current version of BEST can be viewed (but not updated). The user may also set options about when to be reminded of license expiration.

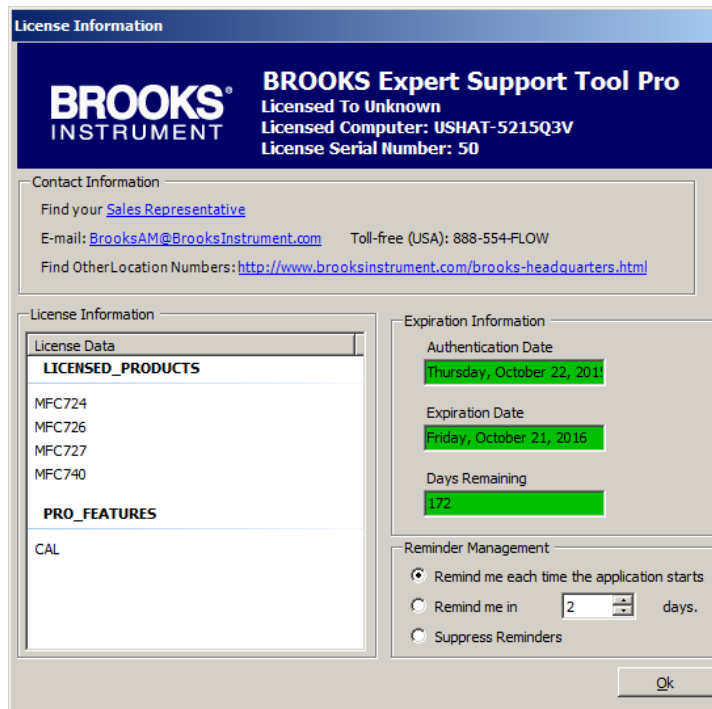


Figure 5-3 License Information Window (Your versions may vary)

## 5.1.2 Install License Window

The **Install License Menu Item** is where licenses may be installed (and uninstalled). The user must contact Brooks Instrument to obtain an annual license subscription, if desired. The user will receive a license key (a number), then enter it in the License Key text block.

\*NOTE: After receiving your license key, store it in a safe location (backed up and secure from unauthorized use) for later retrieval.

Normally, the license installation process requires an Internet connection. A license can be installed without an Internet connection – contact Brooks Instrument for details.



Figure 5-4 License Install Window

## 5.1.3 EULA Window

The EULA is where the user may view the End User License Agreement (EULA).

## **5.2 User Manual Menu**

The BEST user manual (which is searchable) can be accessible directly from the software under the About->Help menu. A PDF file reader (such as Adobe Reader or Microsoft Edge) must be installed on the computer to read this file.

## **5.3 ReadMe Menu**

The user may view last-minute updates as well as technical and useful troubleshooting information from this menu.

## Chapter 6 Window Menu

The **Window Menu Item** is where BEST windows can be accessed and controlled.

A note about BEST Windows and the BEST desktop: BEST windows exist on the BEST desktop (see **Figure 3-1**). This is similar to the Windows desktop, except that the BEST desktop contains only BEST windows.

BEST windows are sized and closed in a similar way as in the Windows. Most BEST windows can be sized, minimized, maximized, restored. Some BEST windows have minimum and/or maximum sizes. Multiple windows may be opened with some exceptions. Some windows, such as calibration windows, when they are open, do not allow access to other windows until they are first closed. (These are called “modal” windows). A modal window cannot be minimized or maximized, but may be resized by dragging the sizing handle in the lower right corner of the window (if the windows is not maximized).

Note also that the title bar of each BEST window shows the serial number of the device associated with that window.

If any windows are open in the BEST desktop, they will be listed in the Window menu under the Arrange (See **Figure 6-1**). Clicking one of those menu items will activate that window.

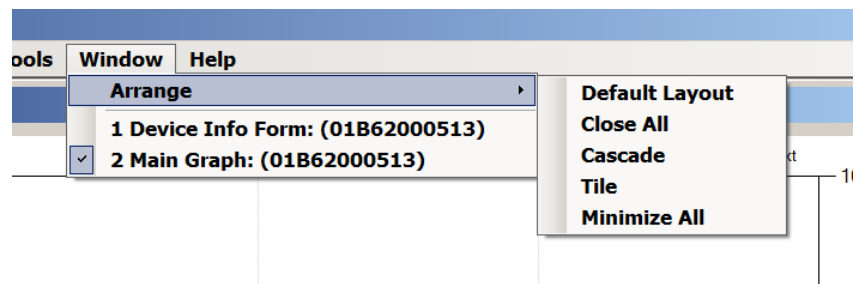


Figure 6-1 Window Menu

The **Close All** Window menu item closes all windows (for all devices).

The **Cascade** Window menu item, arranges all open windows in a “cascade” arrangement from the upper left corner of the windows. See **Figure 6-2** below.

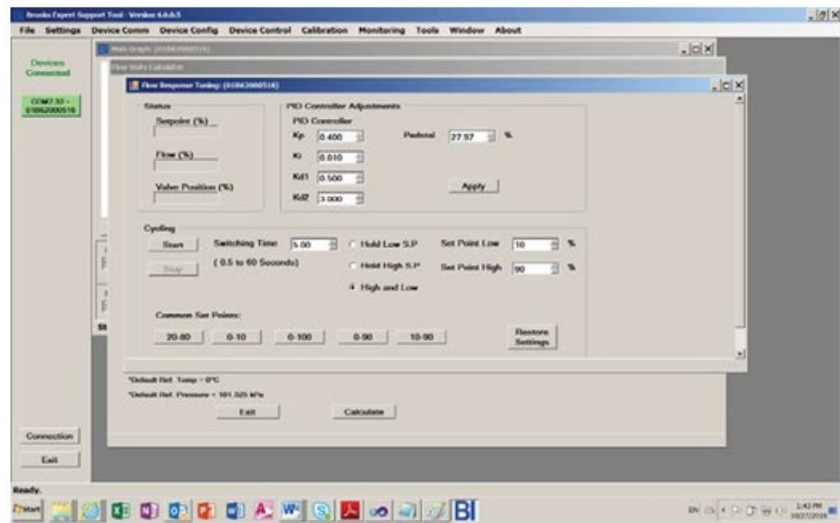


Figure 6-2 Cascaded Window Layout

**Tile** will arrange all open windows in a “tile” arrangement. See [Figure 6-3](#) below.

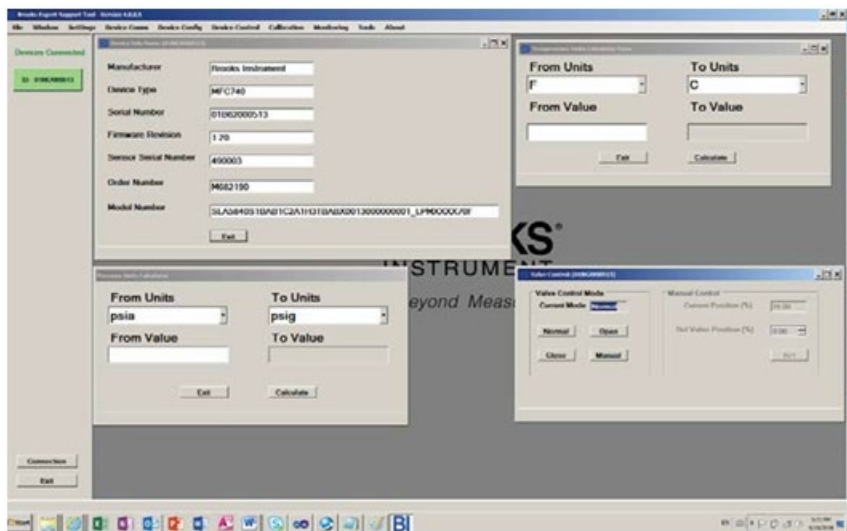


Figure 6-3 Tiled Window Layout

**Minimize All** minimizes all windows to an icon representation. See [Figure 6-4](#) below.

**\*NOTE:** If a modal window is minimized, it will disappear into an icon at the bottom of the screen. To restore it, click on the icon.

## Brooks® Expert Support Tool

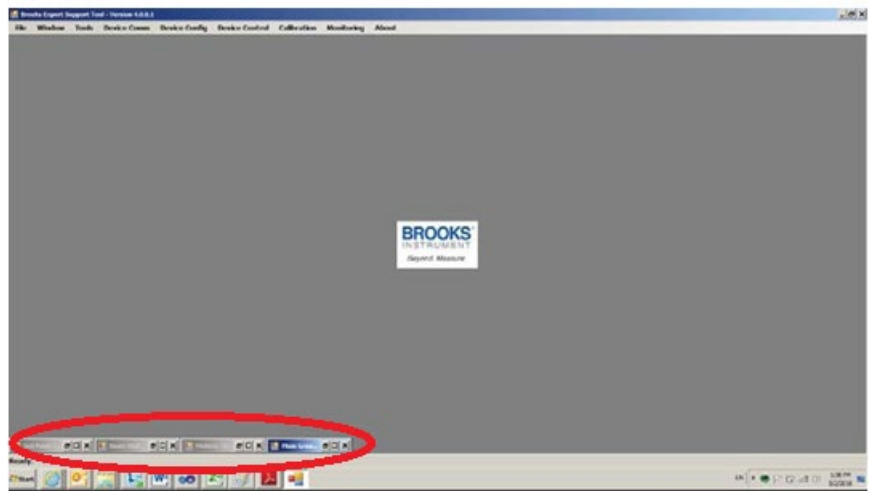


Figure 6-4 Minimized Windows

## Chapter 7 Settings

The **Settings Menu Item** is where BEST software options can be changed to the user's preferences. These are software options, not device options. Most of the features in this menu do not require a device connection. Menu items shown depends on device type.

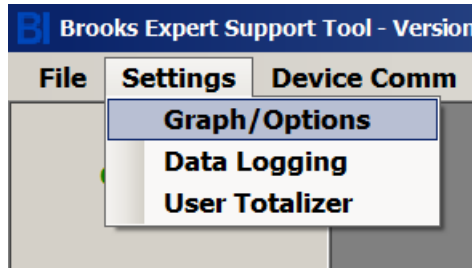


Figure 7-1 Settings Menu

### 7.1 Graph Options

The Graph Options is where the user can select options and preferences for the operation of the main graph window. Here the user can select the data units, scaling, and graph legend options. See **Figure 7-2** for the Graph Options window.

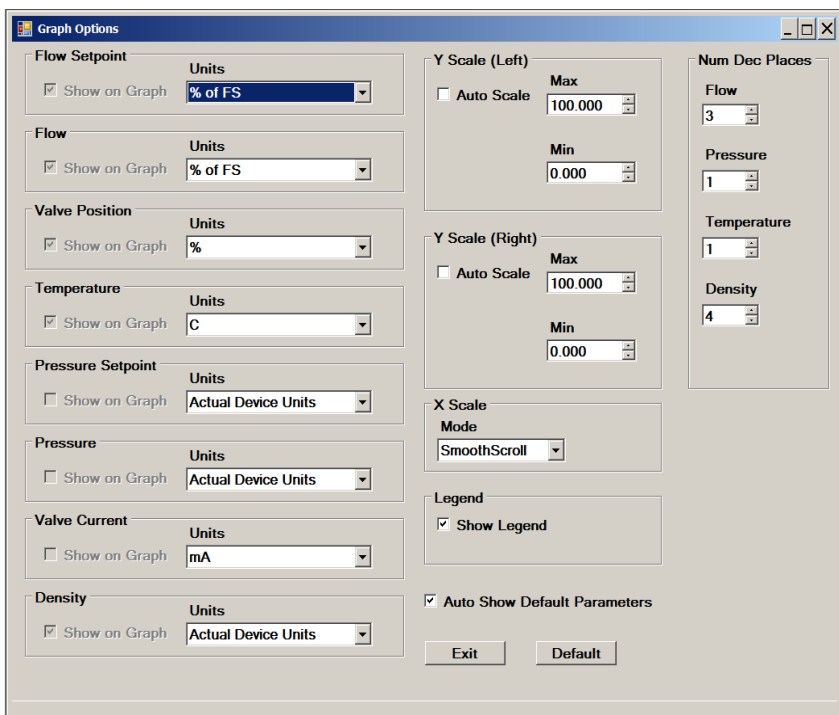


Figure 7-2 Graph Options Window

For each graph parameter (flow, pressure, temperature, etc.), the user can choose which parameters to show on the graph, legend, and meters panel (See **Section 8.4** for more information on the meters panel of the main graph window).

## Brooks® Expert Support Tool

The user can also choose to allow the software to determine which parameters to show automatically by choosing to select **Auto Show Default Parameters**, in which case the software will show only the parameters relevant for the device type (for example, an MFC device will not show pressure or pressure setpoint). If **Auto Show Default Parameters** is checked, the individual parameters' **Show on Graph** check boxes will be disabled – if it is unchecked they will be enabled. For most usages, leave Auto Show Default Parameters checked.

**\*NOTE:** If you need a higher data sample rate on the main graph, such as with response tuning, uncheck the **Auto Show Default Parameters** check box and select only the parameters you need to view. Unchecking the Valve Position parameter can yield significant increases in sample rate

For each parameter, the user can choose “device units” in which case the units stored in the device are automatically chosen for display.

The graph Y axis scaling for both the left side Y axis and the right side Y axis can adjusted by the user. The left side axis is for flow, flow setpoint, pressure, and pressure setpoint. The right side axis is for valve position, valve current, temperature, and density.

The **Num Dec Places** block sets the number of decimal places displayed for flow and pressure across the software.

Valve current is for VDM300 devices only.

**NOTE:** For some parameters, changing graph settings while the graph is running may require the graph to be closed and re-opened for the changes to take effect.

### 7.2 Reset All User Options

Reset All User Options is where the user can reset all BEST software user settings to their factory default settings. Use with caution.

### 7.3 Data Logging Options

The **Data Logging Options Menu Item** is where the user can set preferences as to whether data from the main graph window is to be saved to file as it monitors. Check the check box Save Data To Log to save data to file. Files can be saved in either text or csv format. The file name will be created automatically. The folder is listed in the Data Log File Path text box. The user can also conveniently open saved files from the path by clicking a single button, the Open File button. See **Figure 7-3** for the Data logging options window.

The data logging status (on or off) is shown at the bottom of the main graph window.

The user may also have some control over the sample rate (of both the graphical display and the recorded data). Under the units drop-down, select Maximum to obtain the maximum sample rate on your system. Otherwise, select SamplesPerSecond or SecondsPerSample, then set the Target rate. The target rate is not a guaranteed rate, nor is the rate guaranteed to be precise.

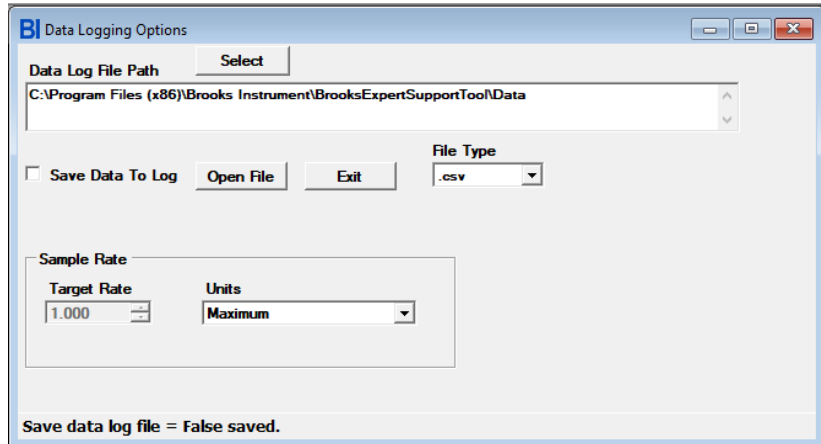


Figure 7-3 Data Logging Options

## 7.4 User Totalizer Options

The **User Totalizer Options Menu Item** is where the user can set preferences for the user totalizer for devices that support a totalizer. (NOTE: the user totalizer is different than the device's hardware totalizer. See [Section 8.3](#) for more details on the user totalizer). The user can set preferences as to how often to update the user totalizer window and can reset the user totalizer. See [Figure 7-4](#). The user totalizer units are always the same as the device's setting for totalizer units.

A device must be attached to use this window.

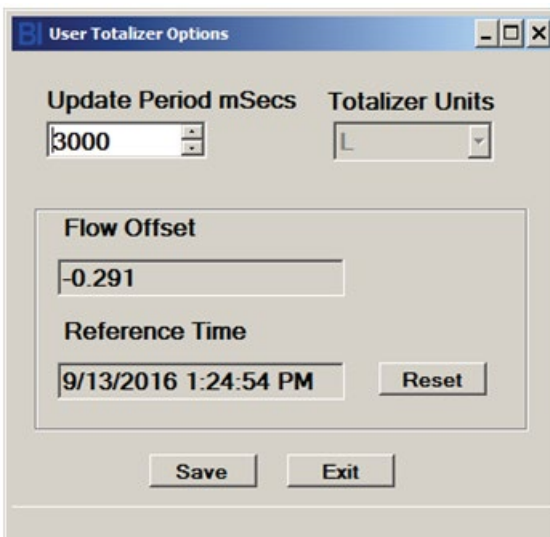


Figure 7-4 User Totalizer Options

## Chapter 8 Monitoring Menu

The **Monitoring** menu gives the user the ability to monitor various aspects of the device. Each of the windows accessible through the Monitoring menu, when opened, shows a live status of various parameters of the device. This includes alarms, warnings, flow, pressure, control, and other status parameters.

A detailed description of the main graph window is given in [Section 8.4](#).

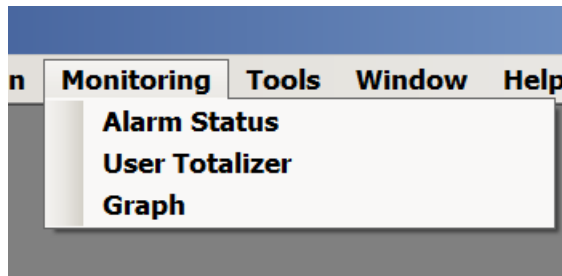


Figure 8-1 Monitoring Menu (not all devices support all menus)

Except for the graph window ([Section 8.4](#)), these windows are monitoring if they are open. These windows update typically at about once per second. These windows are read-only windows and can access and display these parameters whether the device is in digital or analog control mode.

Most Monitoring menu windows can be resized by using the mouse to grab an edge or corner of the window and dragging.

### 8.1 Warning Status

For SLA Rev A and Quantim devices, the warning status is integrated with the alarm status window. See [Section 8.1](#) for a detailed description of warning status monitoring features.

### 8.2 Alarm Status

The **Alarm Status** window shows detailed alarm and warning status for various alarms. The screen is updated about once per second. An alarm is indicated by a red square, a warning is indicated by a yellow square, and a normal condition is indicated by a green square. The Flash Code is the number of times the red LED on the devices flashes to indicate an alarm. Clicking the clear button will clear any latched alarms.

The alarm status window can be resized by dragging a corner or edge of the window.

The exact alarms and warnings supported/visible may vary depending on the device type and alarm settings. Alarm settings are described in [Section 11.8](#). Alarm Status is only supported for Delta Lite Smart II devices and Quantim devices.

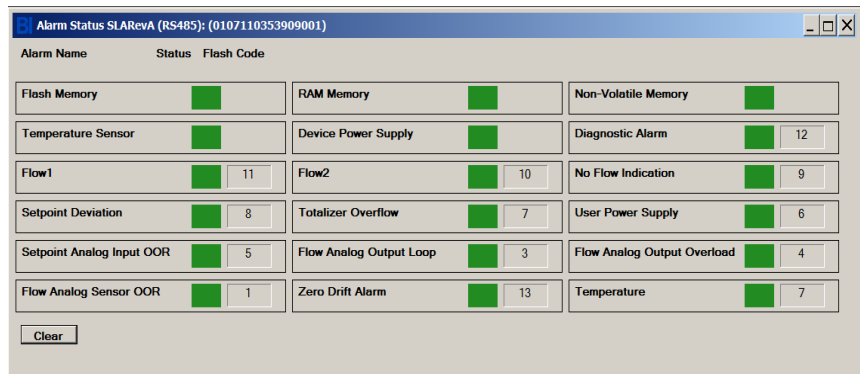


Figure 8-2 Alarm Status Window, Delta Lite/Smart II Device  
(Note: exact alarms visible may depend upon device type)

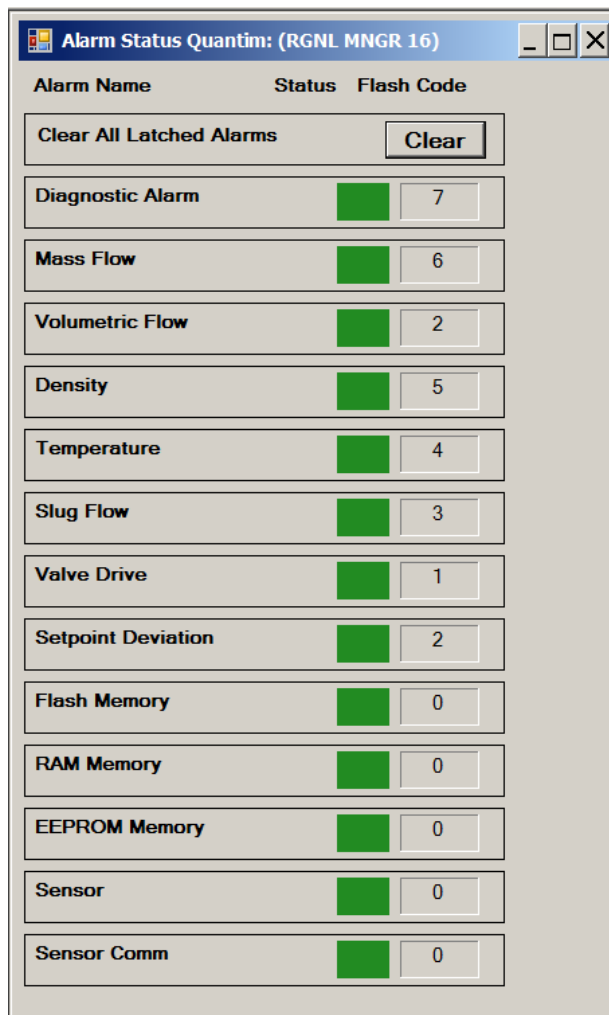


Figure 8-3 Alarm Status Window, Quantim Device  
(Note: exact alarms visible may depend upon device type)

### 8.3 User Totalizer Window

The **User Totalizer** allows a user to track the total flow of a device over time from a user reference point in time. The User Totalizer is only supported if the device supports a hardware flow totalizer.

**\*NOTE:** The User Totalizer is different from the hardware totalizer. The hardware totalizer is a totalizer that exists in the device firmware. The hardware totalizer cannot be reset, as it is for maintenance purposes. The user totalizer, however, is based on the hardware totalizer.

The User Totalizer may be reset by clicking the Reset button in the window. The window's update rate and flow units displayed may be set by the user (See [Section 7.4](#)). The window shows the total elapsed time since the last reset.

The User Totalizer window is shown in [Figure 8-4](#).

User totalizer options are set via the User Totalizer options (see [Section 7.4](#)).

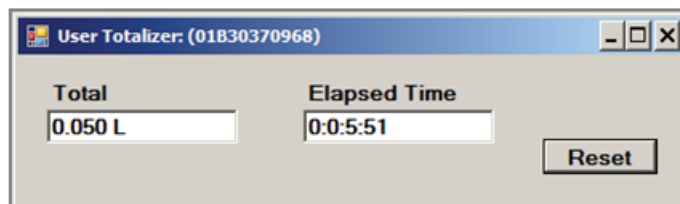


Figure 8-4 User Totalizer Window

### 8.4 Graph Window

The **Main Graph** window shows device measurements such as flow, flow set point, pressure, pressure set point, temperature, and valve position, over time. It also features some commonly used control functions.

Legend->


Main Graph->

Control Buttons->

Meters Panel->

Status Panel->

Graph Status Panel->

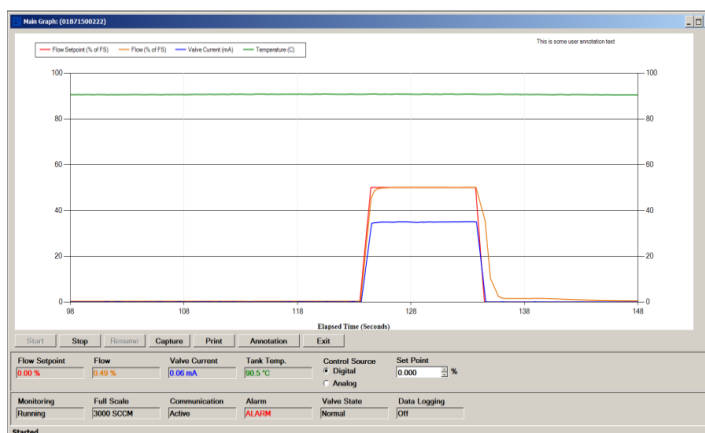

<-User Annotation

Figure 8-5 Main Graph Window  
(actual appearance may vary depending on device type)

When the main Graph window is opened it does not start monitoring automatically. To start monitoring, click the Start button. Click Stop to stop monitoring. Click Start to re-start or Resume to resume monitoring.

There are a number of options of the graph that the user can select. They can be selected in the Tools->Options->Graph menu (See [Section 7.1](#)).

## Brooks® Expert Support Tool

The parameters that are graphed on the window, the units used for the parameters, X scale, Y scale, and legend are all user options.

The left side Y axis is for flow, flow setpoint, pressure, and pressure setpoint. The right side Y axis is for valve position, valve current, temperature, and density.

The **Meters Panel** shows important device measurements. (The name “meters” was chosen because a flow meter measures flow, a temperature meter measures temperature, etc.). The exact parameters that are shown may change depending on the user graph settings and the type of device (See [Section 7.1](#)). The Meters Panel is also where the user selects the control source and set point.

The **Control Source** can be either Digital (BEST Software) or Analog (External) for control of the set point. If the control source is set to digital, the user controls the set point via BEST software via the diagnostics port (see Section Set Point control below). If analog is selected, the software no longer controls the set point, (but can still monitor the set points) – the set point is control by an external controller physically connected to the device on its normal control port (and not via the Diagnostics port). Selecting analog disables BEST software’s set point up/down control. Selecting digital control re- enables it. Changing the Control Source from analog to digital will cause the software to change the device’s set point to 0 for safety.

The **Set Point Control** allows the user to set the device’s set point via BEST software (if Control Source is set to digital). The units for the set point are displayed next to the numeric up/down control. These units are the same as set by the graph options for set point (flow or pressure set point depending on the type of device ). If the user changes the units options under the graph options menu, the units here will be updated to match and the numeric value will be updated to the equivalent units.

The **Basic Status Panel** shows some basic status parameters. The displayed parameters are:

Monitoring: Whether the main graph is currently Running or Stopped.

Full Scale: Displays the full scale flow or pressure range of the active device (value and units).

Communication: Will show “Active” or the last error message, if any.

Alarm: Will show “Alarm”, “Warning” or “Normal”. Alarm will show if any alarm is active. To see which alarm is occurring, open the Alarm Status window (See [Section 8.2](#)). If there is no alarm, but a warning is occurring, this will show “Warning”. To see which warning is occurring, open the Alarm Status window (see [Section 8.2](#)).

Valve State: Will show the valve control state: Manual, Normal, Open, or Closed. Manual means manual control, normal means set point control of the valve. Open means valve override open. Closed means valve is forced closed.

Control Source: Analog or Digital.

Flow Totalizer: The value of the hardware totalizer (See also [Section 8.4](#)).

Data Logging: On Or Off.

Totalizer: The value of the hardware totalizer

## Brooks® Expert Support Tool

There is a user **Text Annotation** block that can be used for labeling purposes. The text can be edited, moved, and resized. To edit the text block, click on the text block, type in the new text, then click off the block. To move the text block, click on the text block and a frame will appear – then drag the box to the desired location. To resize the text block, click on the text block and a frame will appear – then drag one of the handles (sides or corners). To clear the text, select the text and edit it to an empty text string. If the text is hidden, click Find Annot. Double click the text box to edit the text.

**Screen Capture:** The graph can be saved to a graphics file by clicking Capture. Supported graphics file format are jpg, bmp, gif, png, and tiff.

**CAUTION:** The default file path for the capture file after installing or updating BEST will be set to a subfolder of the BEST folder. **After installing or updating BEST, these folder path should be changed to a folder on your personal computer or network (preferably on a backed-up folder location).**

**Print Screen:** The graph can also be printed. Click Print.

**Cursor:** The user can display a cursor on the graph. A cursor is cross-hair that can pin point a location on the graph. To activate a cursor, click anywhere on the graph with the mouse. A crosshair appears and in the lower right corner of the graph, a box appears with the X and Y location of the cursor (see **Figure 8-6**). To move the cursor click on another location in the graph and the location of the cursor is updated in the box. To remove the cursor, right click on the graph. A context menu appears – click Clear Cursor (see **Figure 8-7**).

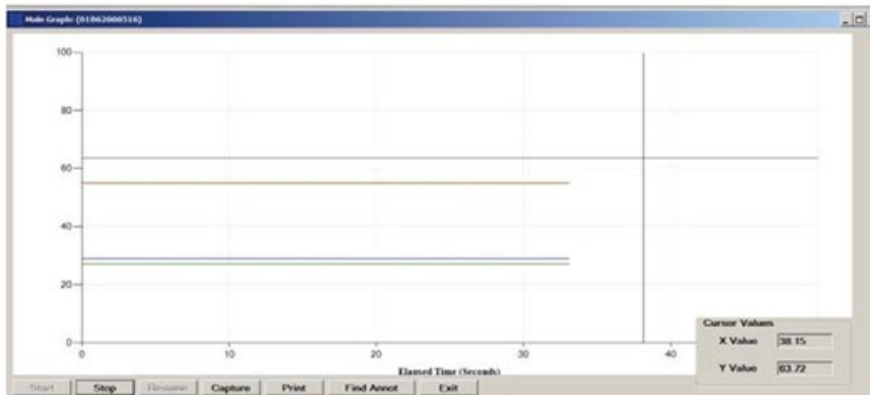


Figure 8-6 Main Graph Window with Cursor

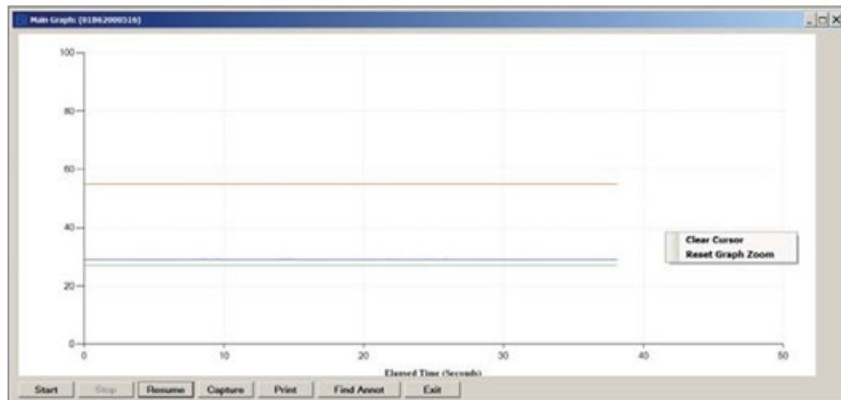


Figure 8-7 Main Graph Window with Context Menu

**Zoom:** The user can zoom in on a portion of the graph. To zoom in, click anywhere on the graph with the mouse, then drag to form a rectangle, then release the mouse. The graph shows a zoomed area of the graph and scroll bars appear (see [Figure 8-8](#)). To remove the zoom effect, right click on the graph. A context menu appears – click Reset Graph Zoom (see [Figure 8-7](#)).

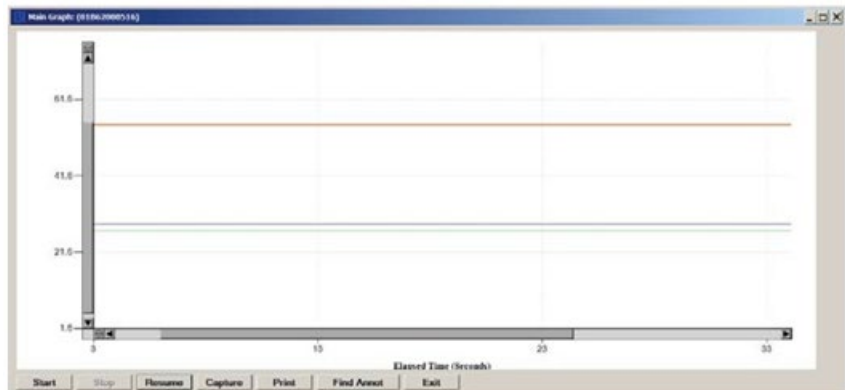


Figure 8-8 Graph Window Zoomed

**NOTE:** For some parameters, changing graph settings while the graph is running may require the graph to be closed and re-opened for the changes to take effect.

## Chapter 9 Tools Menu

The **Tools Menu Item** features some convenient utility tools (for reference only). Most of the features in this menu do not require a device connection.

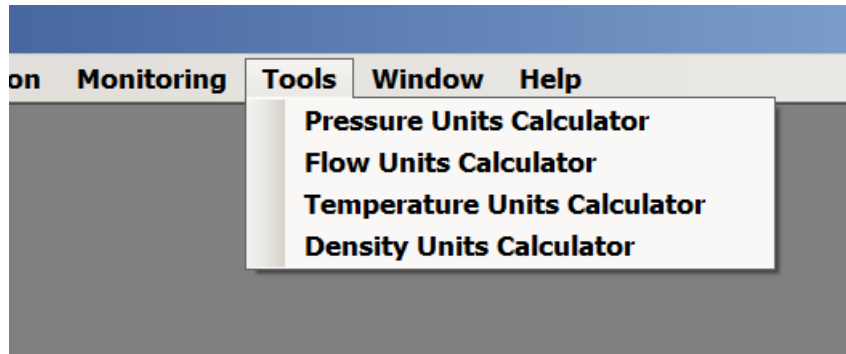


Figure 9-1 Tools Menu

### 9.1 Pressure Units Calculator

The **Pressure Units Calculator Menu Item** opens a convenient utility that can convert a pressure value from one unit to another.


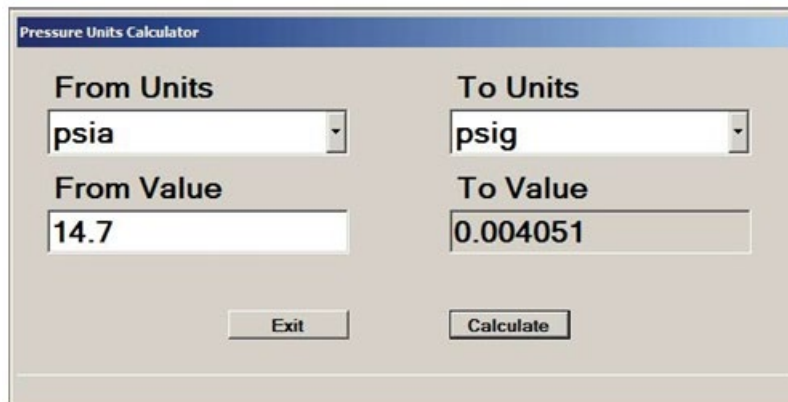


Figure 9-2 Pressure Units Calculator

### 9.2 Flow Units Calculator

The **Flow Units Calculator Menu Item** opens a convenient utility that can convert a flow value from one unit to another. The user can optionally factor into the conversion the reference temperature, and pressure.

Conversions involving mass-based units require a gas symbol in both drop-down controls.

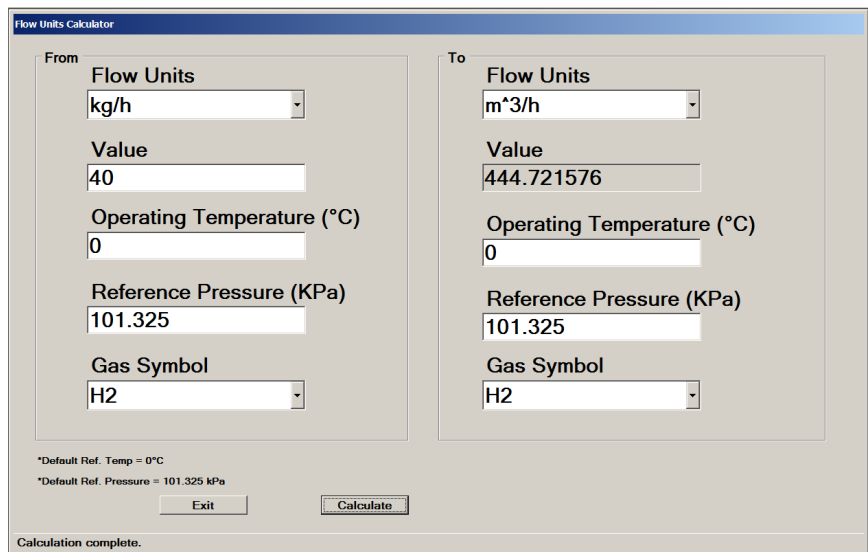

The Flow Units Calculator dialog box is titled "Flow Units Calculator". It is divided into two main sections: "From" and "To".

**From Section:**

- Flow Units:
- Value:
- Operating Temperature (°C):
- Reference Pressure (KPa):
- Gas Symbol:

**To Section:**

- Flow Units:
- Value:
- Operating Temperature (°C):
- Reference Pressure (KPa):
- Gas Symbol:


At the bottom, there are two buttons: "Exit" and "Calculate". Below the buttons, it says "Calculation complete."

\*Default Ref. Temp = 0°C  
\*Default Ref. Pressure = 101.325 kPa

Figure 9-3 Flow Units Calculator

### 9.3 Temperature Units Calculator

The **Temperature Units Calculator Menu Item** opens a convenient utility which can convert a temperature value from one unit to another.

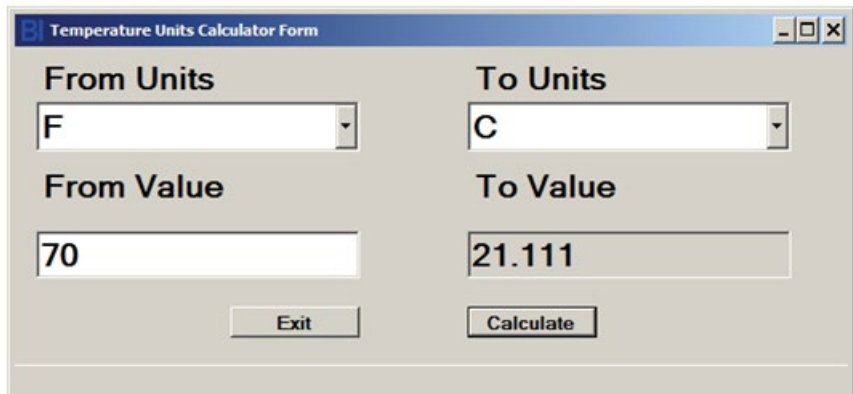

The Temperature Units Calculator Form dialog box is titled "Temperature Units Calculator Form". It is divided into two main sections: "From Units" and "To Units".

**From Units Section:**

- From Units:
- From Value:

**To Units Section:**

- To Units:
- To Value:

At the bottom, there are two buttons: "Exit" and "Calculate".

Figure 9-4 Temperature Units Calculator

### 9.4 Density Units Calculator

The **Density Units Calculator Menu Item** opens a convenient utility that can convert a density value from one unit to another.

Lookup Gas Density will calculate and show the density of the gas based on the reference temperature and pressure using the FloCom gas database.

The screenshot shows a software window titled "Density Units Calculator". It is divided into two main sections: "From" and "To".

**From Section:**

- Density Units:** A dropdown menu showing "kg/m<sup>3</sup>".
- Value:** A text input field containing "1".
- Operating Temperature (°C):** A text input field containing "0.00".
- Reference Pressure (KPa):** A text input field containing "101.325".
- Gas Symbol:** A dropdown menu showing "N2".
- Lookup Gas Density:** A button located below the Gas Symbol dropdown.

**To Section:**

- Density Units:** A dropdown menu showing "lb/in<sup>3</sup>".
- Value:** A text input field containing "0.000036".
- Calculate:** A button located below the Value field.

**Footer/Status Area:**

- \*Default Ref. Temp = 0°C
- \*Default Ref. Pressure = 101.325 kPa
- Exit:** A button.
- Calculation complete.** A status message at the bottom of the window.

Figure 9-5 Density Units Calculator

## Chapter 10 Device Comm Menu

The **Device Comm Menu Item** is where BEST software performs communication tasks with a device. The **Connection** menu item establishes communication with a device. The **Terminal menu** item provides low-level communication (sending commands) with a device.

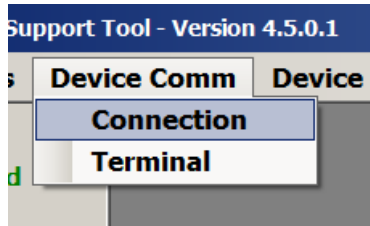


Figure 10-1 Device Connection Menu

### 10.1 Device Connection Window

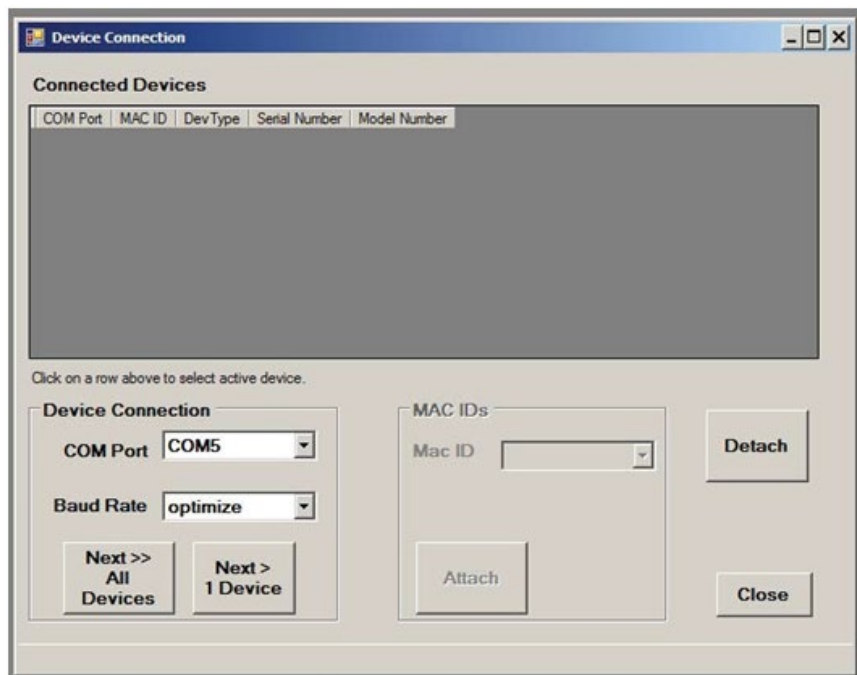


Figure 10-2 Device Connection Window, with No Devices Attached

Most features of BEST software require a connection to a device. If you attempt to access a feature that requires a device connection and you are not connected to a device, you will see a message box like the following:

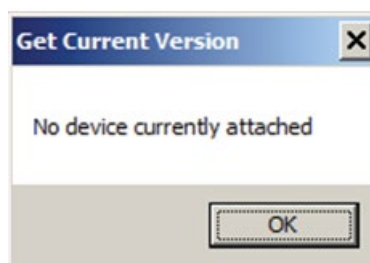


Figure 10-3 No Device Connected Message

## Brooks® Expert Support Tool

When BEST software starts, no devices are attached. Devices are attached via the device connection window. For convenience, the software opens the device connection window for you upon startup.

You can close this window if you wish. If it is closed, you may re-open the window via the Device Comm->Connection menu or the Connection button in the devices panel (See [Figure 3-2](#)).

For Rev A and Quantim devices, BEST supports only one device connected at a time on a given COM port. The Next >> All Devices button and BaudRate drop-down controls are not used for Rev A and Quantim devices.

First, in the Device Connection/Port drop-down list (See [Figure 10-2](#)), select the COM Port you are using to connect to your device.

Your selected port selection will be retained by BEST for your convenience.

Click the **Next > 1 Device** button to find the connected device. After a few moments, if a device is located, MAC ID 0 is listed in the Mac ID drop-down list.

Click on the Attach button. After a few moments, if it is attached, a row appears in the connected devices box, as shown in [Figure 10-4](#).

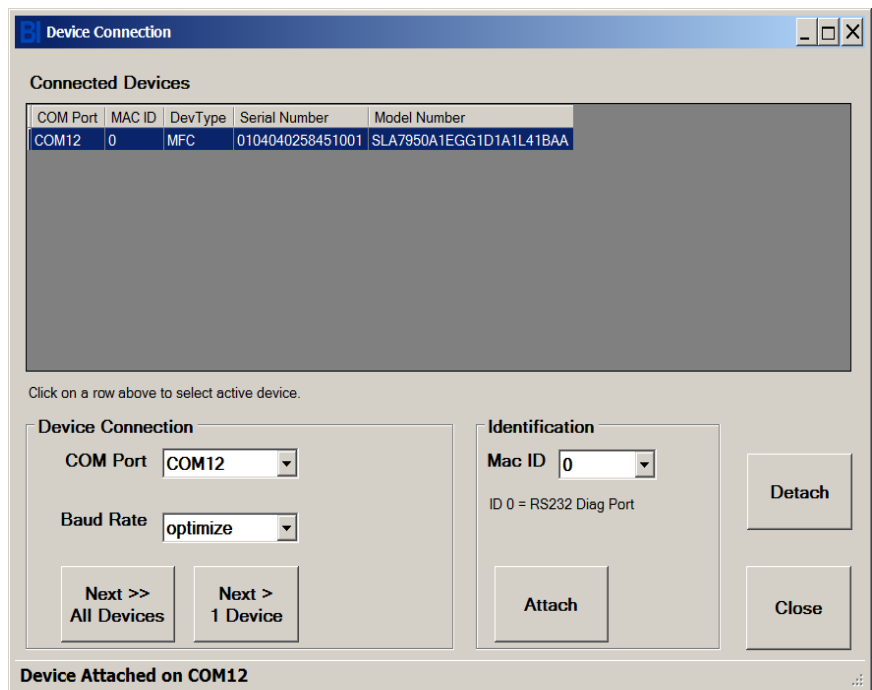


Figure 10-4 Connection Window, with a Device Attached

### Device Type Codes

In the Connected Devices box, under the Dev Type field, the possible values are:

- MFC Mass Flow Controller
- MFM Mass Flow Meter
- PC Pressure Controller
- RT Remote Transducer Device

### Attaching Multiple Devices Simultaneously:

BEST supports connecting to multiple devices simultaneously. There are two methods of doing this:

- 1.) Connecting devices to a single COM ports.
- 2.) Connecting using multiple COM ports.

Connecting multiple devices to BEST requires a custom splitter cable between a single COM port on the computer and multiple devices. (This type of cable is not supplied by Brooks Instrument).

When using SLA Rev A or Quantim devices, only one device may be connected to a given COM port at a time. However, you may attach both SLA Rev A/Quantim devices and RS485 devices, if the FloCom and non-FloCom devices are on separate COM ports.

**\*NOTE:** You may not attach both FloCom and non-FloCom devices on the same COM port (examples FloCom devices are SLA Rev B, PC1xx, GF40, GF1xx, VDM300 and GP200 devices. Non-FloCom devices are SLA Rev A, and Quantim devices.).

(see the separate BEST manual for SLA Rev B, PC1xx, GF40, GF1xx, VDM300 and GP200 devices.

### Detaching a Device:

To detach a device, make sure that device is selected as the active device (by the blue highlight bar), then click the Detach button. The device will be removed from the Connected Devices list and from the devices panel. This will also close any windows open for that device.

**\*NOTE:** clicking the Detach button detaches the device highlighted in blue in the Connected Device list, NOT the device select in the Mac ID drop-down box.

**\*NOTE:** If you change physical connections to the device or computer while the software is running, you may need to exit the software and restart it for it to recognize the new connection.

You may close the Device Connection window with the Close button or clicking the "X" in the upper right of the Device Connection window's title bar.

When you exit the BEST program, all devices are detached automatically.

### 10.1.1 Connecting to an Unconfigured Device

BEST can be used to attach to and set up devices (and "blank" boards) that have not yet been configured, or have an invalid/unsupported model code attribute. If you try to attach to such a device, and BEST does not recognize the device's model code, it will display the Fix Model Code window (see **Figure 10-5**).

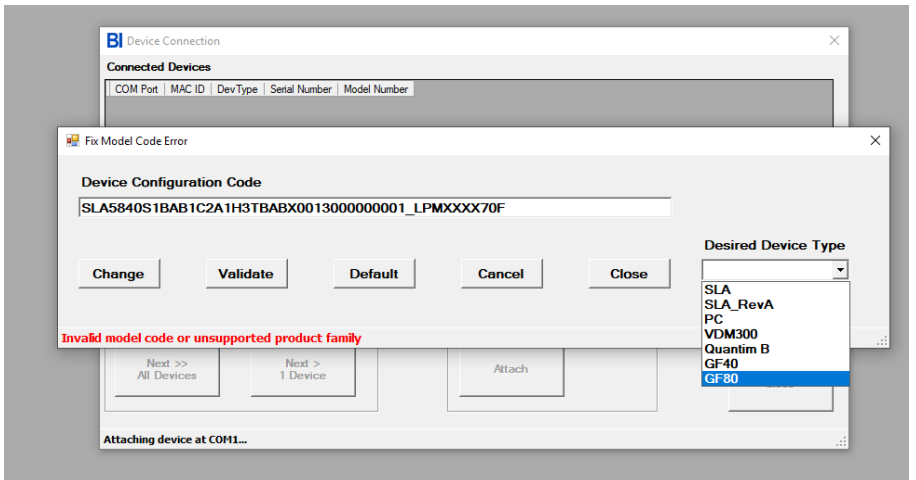


Figure 10-5 Fix Model Code Window

The Fix Model Code window gives the user an opportunity to fix or set up the model code. The user may fix the model code in one of two ways, as explained below.

The Device Configuration Code text box shows the current model code of the device. The user must select the Desired Device Type (SLA = SLA Rev B). Then they may use either method below.

1. Manually type in the model code, if the user knows the correctly formatted model code, then validate the code.
2. Set the model code to a default value, then use the model code window to set up the individual fields of the model code. This is the preferred method.

**\*NOTE:** The model window is not editable for SLA Rev A and Quantim devices. So, the correct full model number would need to be entered at the fix model code window.

To use method 1:

1. Select the Desired Device Type.
2. Manually type in the model code.
3. Click Validate. If the validation is bad, check the model code, re-type, and try again.
4. Click Change.
5. The status bar will inform you if the change was successfully applied.
6. Close the Fix Model Code Window.

To use method 2:

1. Select the Desired Device Type.
2. Click Default. The default model code for the selected device type will be shown in the Device Configuration Code text box.
3. Click Change.
4. The status bar will inform you if the change was successfully applied.
5. Close the Fix Model Code window.
6. Open the Model Code window (under the Device Config->Model Code menu) (see **Section 11.3**) and set the fields to match your device's hardware.

After setting the model code correctly, the user should continue setting up other attributes as necessary.

## 10.2 Terminal Window

The **Terminal** provides low level communication access with a device. A connection to a device is required for this feature. This feature is for advanced users. A software license is required for this feature.

**\*NOTE:** All numeric or date information entered this window must be in English culture format. Likewise, any numeric or data information displayed in this window are in English cultureformat.

Unlike for FloCom devces (such as SLA RevB/PC1xx/VDM300, etc. devices), commands are typed in as numbers, not names, as shown below.

The terminal window also features a Continuous button to continuously measure (once per second) a device attribute. This is convenient for troubleshooting.

To read an attribute value, type the number of the attribute and Click the Send Command button.

## Brooks® Expert Support Tool

Device Terminal: (0107110353911002)

**Command** Read Command syntax: Attribute  
Set Command syntax: Attribute=value

127

**Command Response**

0107110353911002

**Send Command** **Continuous**

\* All numeric and date information is/must be in English formats/units.

**Exit**

**Command Sent**

Figure 10-6 Terminal Window with a read operation

To write an attribute value, type the number of the attribute, followed by the = sign, and then the new value. Then click the Send Command button. The value will be written to the device and respond with the updated value from the device.

## Brooks® Expert Support Tool

Device Terminal: (0107110353911002)

**Command** Read Command syntax: Attribute  
Set Command syntax: Attribute=value

127=0107110353911002

**Command Response**

0107110353911002

**Send Command** **Continuous**

\* All numeric and date information is/must be in English formats/units.

**Exit**

**Command Sent**

Figure 10-7 Terminal Window with a write operation

## Chapter 11 Device Config Menu

The **Device Config** Menu provides functionality to help a user configure a device with settings such as model code, control mode, alarm settings, and protocol settings. Access to individual settings is device- and license-specific. Functions that are not supported for a particular device will not be visible.

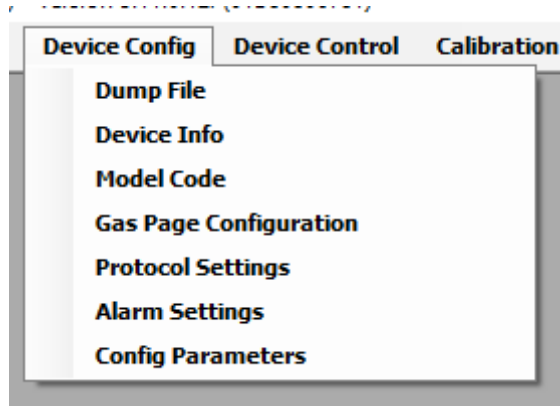


Figure 11-1 Device Config Menu (Quantim)

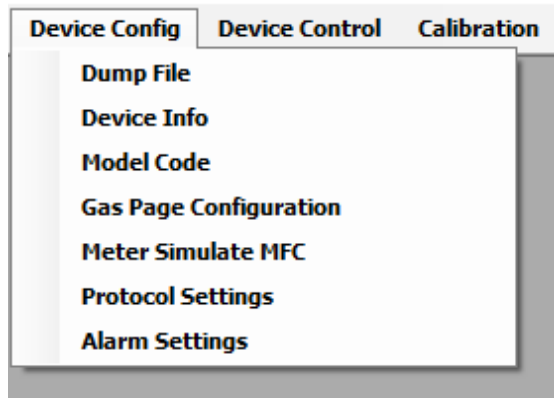


Figure 11-2 Device Config Menu (SLA Rev A)

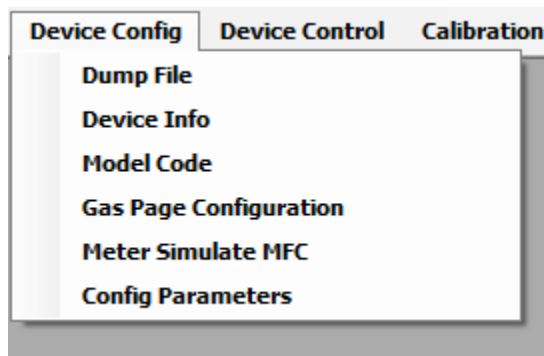


Figure 11-3 Device Config Menu (SLA Rev A, Delta Lite)

A device connection is required to use most of the config functions.

Also, for some menu functions, if device control source is set to external (analog) control, the software may first ask if the user wants to set control to digital/ BEST control (required for most config functions).

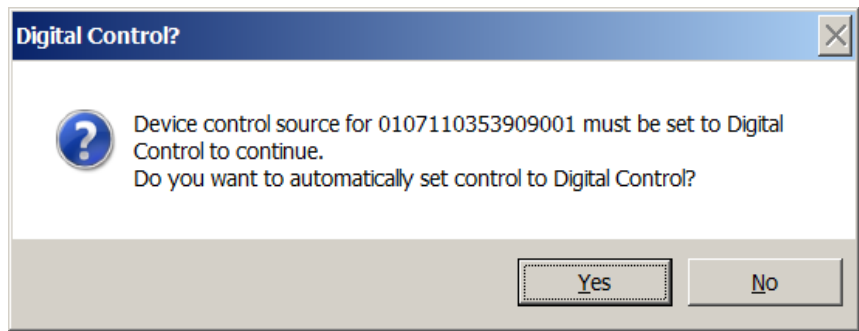


Figure 11-4 BEST Control Message

## 11.1 Dump Files

BEST software allows the user to save and reload a (virtually) complete set of device settings in a file. Access to this feature may be dependent upon device type and software license level. This type of file is called a dump file.

**\*NOTE:** It is strongly recommended that when you first receive a new device, to immediately save the settings in a dumpfile as a backup for future reference.

BEST dump files are saved in an encrypted format. Quantim and SLA Rev A Delta class devices use \*.dat format. SLA Rev A DeltaLite/Smart II devices use \*.cal format. (Both formats are encrypted).

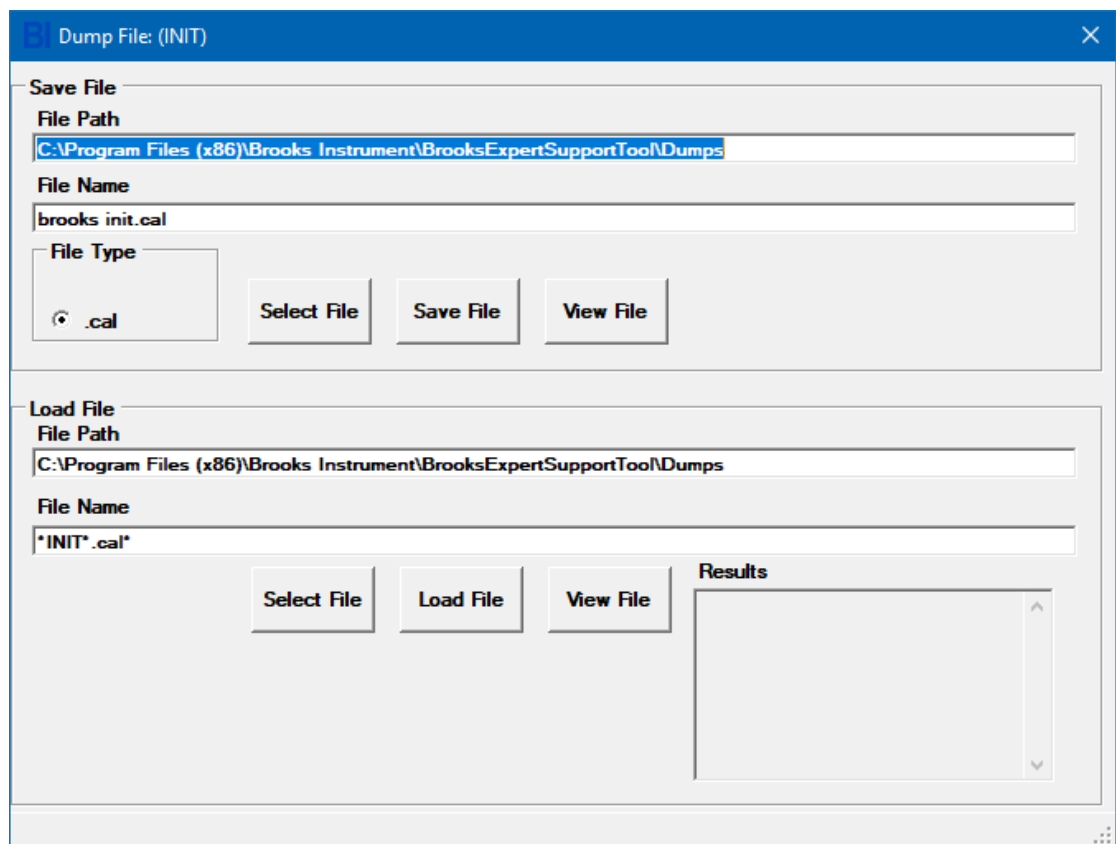


Figure 11-5 Dump File Window, SLA Rev A Delta

## Brooks® Expert Support Tool

File names are coded using the device serial number.

When the Dump File window opens, it shows a coded dump file name for the current device serial number and selected dumpfile type. To select a different file name, edit the file name/path, or select a new file by clicking Select File.

To save a dump file, first select a file type under the Save File block, then click Save File. If a file already exists, saving a file again will not overwrite any existing file. It may take a few minutes to complete the save operation.

For some older devices (SLA Rev A devices with firmware rev. <= AE), when saving a dumpfile, the user will see an additional screen to select which pages they want to save in the file.

**Dump File Select Pages Form**

Select Flow Calibrations (Pages) to be Saved

<input type="checkbox"/> Calibration 1	<input type="checkbox"/> Calibration 6
<input type="checkbox"/> Calibration 2	<input type="checkbox"/> Calibration 7
<input type="checkbox"/> Calibration 3	<input type="checkbox"/> Calibration 8
<input type="checkbox"/> Calibration 4	<input type="checkbox"/> Calibration 9
<input type="checkbox"/> Calibration 5	<input type="checkbox"/> Calibration 10

Select Pressure Applications (Pages) to be Saved

<input type="checkbox"/> Calibration 1	<input type="checkbox"/> Calibration 6
<input type="checkbox"/> Calibration 2	<input type="checkbox"/> Calibration 7
<input type="checkbox"/> Calibration 3	<input type="checkbox"/> Calibration 8
<input type="checkbox"/> Calibration 4	<input type="checkbox"/> Calibration 9
<input type="checkbox"/> Calibration 5	<input type="checkbox"/> Calibration 10

**Caution**

Selecting Calibrations or Applications that do not already exist will result in the creation of those pages.

Figure 11-6 Dump File Window, Select Pages Form

An existing dumpfile may be used to reload settings into a device. The file path of the last used dumpfile path is displayed in the File Path text box on the form. To change the file click, click Select File or type in the file path directly.

**\*NOTE:** Take caution to load only a dumpfile specified for the current device (same serial number). Prior to loading a dumpfile, the software will check the serial number of the device and compare it to the serial number in the dumpfile. If they don't match, a warning will be displayed. It is **STRONGLY** recommended that you do NOT ignore this warning.

To reload a dumpfile, first select a file by clicking the Select File button. Then click Load File. A series of warnings will be displayed. A reload may take a minute or two. After reloading, the device will be automatically rebooted if the device supports rebooting. Then, the results text box will show any attributes from the dumpfile that were not able to be loaded. It is not unusual for a few attributes from the file to fail to load.

## 11.2 Device Info

The **Device Info** menu item allows a user to view selected information about a connected device. This window is read-only, except for the device serial number (useful for advanced users when rebuilding to new device). The device serial number and sensor serial number are only writable if the user has the Pro license and the device type is Quantim B.

The screenshot shows a window titled "Device Info Form: (0111120482076001)". It contains several text input fields with labels to their left:

- Manufacturer:** (empty field)
- Device Type:** (field containing "MFC")
- Serial Number:** (field containing "0111120482076001")
- Firmware ID:** (field containing "Quantim B")
- Firmware Revision:** (field containing "AD")
- Sensor Serial Number:** (field containing "1")
- Order Number:** (empty field)
- Model Number:** (field containing "QMBC2L1B2A1A1A1LA1K7A1AA")

At the bottom of the form are two buttons: "Exit" and "Write".

Figure 11-7 Device Info Window  
(the selected information shown may vary depending on device type)

## 11.3 Model Code Window

The model code window allows the user to view (and edit with a license) the device's model code. The model code is read-only for Quantim devices. The model code (also called the Product Data Code or "PDC") is stored in a device and identifies the type and options of a device. The model code is a formatted string of text characters with coded fields representing various device options.

Viewing the model code can provide key information for the user about a device. The model code window can assist the user in decoding the fields.

The screenshot shows a window titled "Model Code SLA Rev A Form". It contains the following elements:

- Full Code:** A text field containing "SLA7950D1NGG1A2A1H4MBAA".
- Parameter:** A dropdown menu currently showing "Valve Type".
- Possible Values:** A dropdown menu currently showing "1".
- Description:** A text area containing "Normally Closed".
- Buttons:** "Update" and "Exit" buttons are located at the bottom right.

Figure 11-8 Model Code Window

## 11.4 Gas Page Configuration

The Gas Page Configuration menu item allows the user to do a configuration of the settings for a device for a single gas “page”. This menu item merely opens the Calibration window with the Customer Page tab pre-selected. See Section 13.9 for more details.

## 11.5 Protocol Settings Window

The Protocol Settings menu only applies to the Quantim device. This menu takes the user to another screen for setting the parameters for the Hart protocol used by the Quantim device. See Section 15.5 for more details.

## 11.6 RT Control Mode

The RT Control Mode window is used to change the current control mode of an RT device between Flow control and Pressure control modes. This window is only available for SLA Rev A RT devices.

**\*NOTE:** the changes won't be applied unless the user clicks Change.

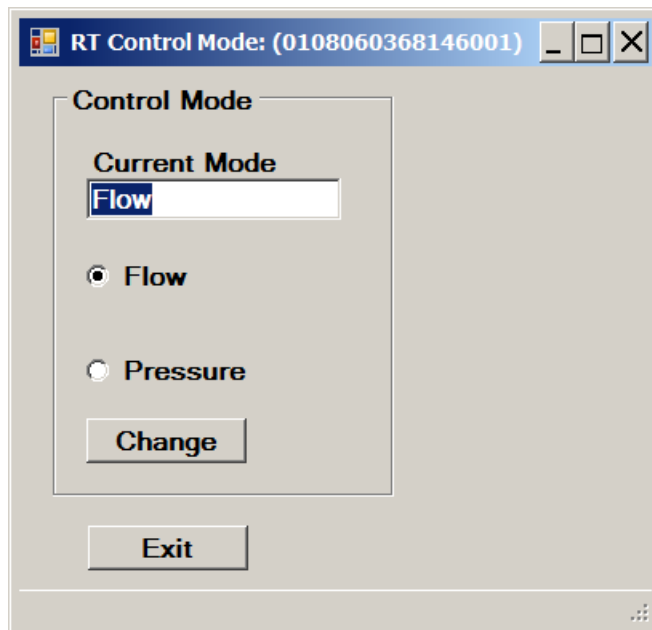


Figure 11-9 RT Control Mode Window

Changing the Control mode will require a device reboot for the change to take effect. The software will prompt and guide the user to do a reboot.

## 11.7 Meter Simulate MFC

The **Meter Simulate MFC** window is used to allow a meter device to simulate an MFC device. This mode is needed for specific calibration situations, such as when calibrating a meter device using a temporary external valve directly connected to a meter device's electronics.

A license is required for the use of this feature. This feature is supported only for SLA devices.

There are two ways of calibrating an SLA meter device using BEST:

## Brooks® Expert Support Tool

1. **Using the valve output of the meter.** Since the meter version of Brooks SLA products contains the same electronics circuitry as the controller version, it's possible to connect a standalone valve or a compatible valve from a Brooks SLA controller to the valve output of the electronics circuitry. If the Meter Simulate MFC window is used, the meter device will act as a controller and can be calibrated just like with any MFC controller. After calibration, the device type needs to be configured back to MFM. Note that this valve connected to the meter needs to be in the flow path during calibration (see also [Section 13.11](#) for full calibration instructions)
2. **Using an external valve.** In case it's not possible to connect a standalone valve or a compatible valve from a Brooks SLA controller to the valve output of the electronics circuitry, it's possible to put an external valve in the flow path and regulate flow using this external valve. Note that the device type needs to be configured to MFM. During the calibration, the user will be prompted to manually adjust the flow indicated in the pop-up window (see [Figure 13-27](#)), to a certain percentage by using the external valve (see also [Section 13.11](#) for full calibration instructions).

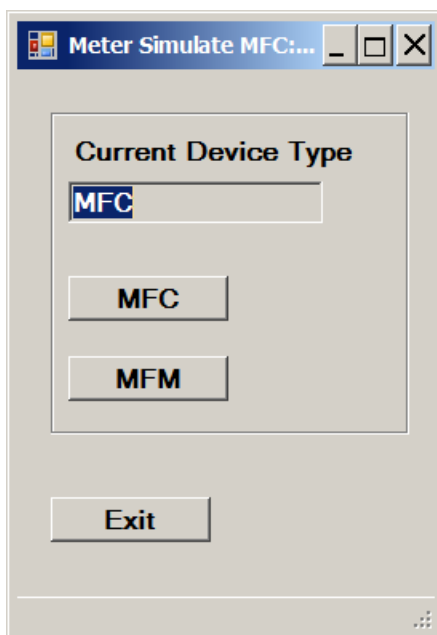


Figure 11-10 Meter Simulate MFC Window

To use this feature on meter device:

1. Click the menu item Device Config->Meter Simulate MFC.
2. Click MFC.
3. Perform calibration as with an MFC device.
4. Click the menu item Device Config->Meter Simulate MFC.
5. Click MFM.

**\*NOTE:** Changing the device type with this feature will also change the model code and other attributes accordingly, so remember to change this back to MFM device type when finished.

## 11.8 Alarm Settings

The software supports configuration of warnings and/or alarms for the device. The exact alarm and warning settings supported depends on the device. Pressure-related warnings and alarms, for example, will only be supported by the PC and RT models. Configurable alarm settings typically include alarm/warning/off, latching enable, contact enable, limits, and delay time. If the device supports flash codes, the ALARM LED will flash the specified number of times if a certain alarm or warning is raised.

For more specific information on alarms and warnings, reference the specific device installation & operations manual and/or supplemental manuals for your device type.

For the SLA Rev A/Delta Lite/Smart II class devices, alarm windows are shown in **Figure 11-11** and **Figure 11-12**.

For the SLA Rev A Delta Class, alarms are not configurable via BEST.

For the Quantim device, this menu opens the alarm settings window described in **Section 15.2**.

Alarm Name	Off	Warning	Alarm	Latching Enable	Contact Enable	Flash Code	Low Limit (%/*K/V)	High Limit (%/*K,V)	Delay (Secs)	Actual (V/*K)
Diagnostic	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	12				
Flow Alarm 1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	11	10.0	120.0	1.0	
Flow Alarm 2	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	10	10.0	120.0	1.0	
No Flow Indication	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	9	2.0		1.0	
Setpoint Deviation	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	8	-10.0	10.0	1.0	
Totalizer Overflow	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	7				
User Power Supply	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	6	13.5	30.8	1.0	23.55
Setpoint Analog Input Out of Range	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	5			1.0	
Flow Analog Output Out of Range	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	4			1.0	
Flow Analog Output Loop Open	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	3			1.0	
Flow Analog Sensor Out of Range	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	1			1.0	
Zero Drift Alarm	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	13		1.0	1.0	
Temperature	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>	7	273.15	373.15	1.0	299.0
Flow Alarms When Setpoint Is Zero	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>							
Flow Alarms During Valve Override	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>							

Figure 11-11 Alarm Settings, SLA Rev A/Delta Lite/Smart II Class Devices

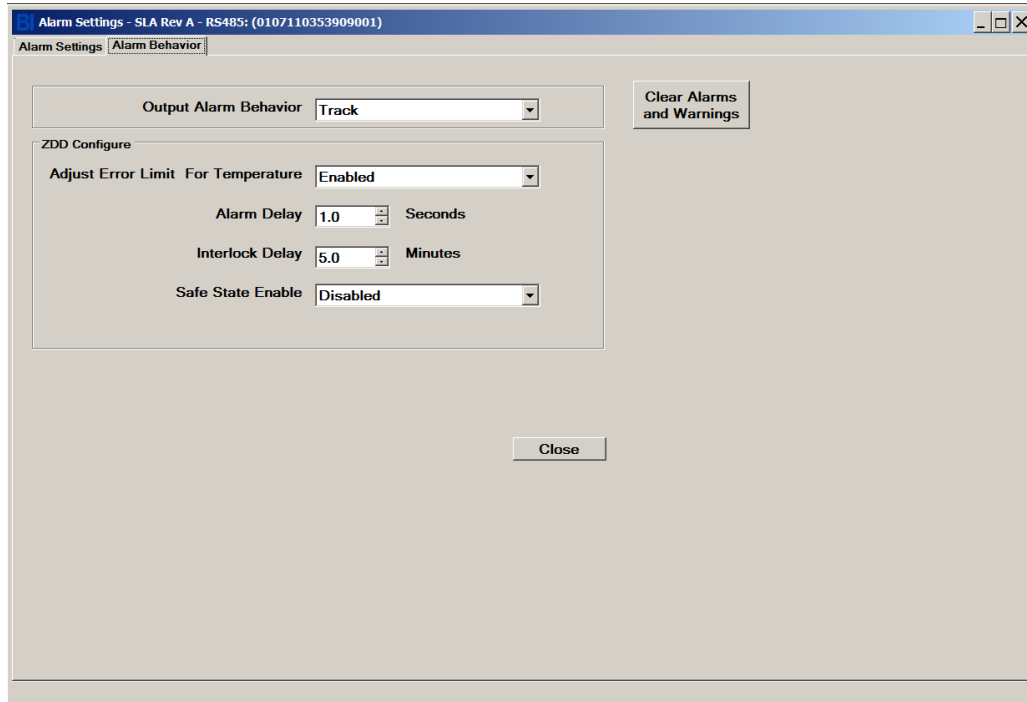


Figure 11-12 Alarm Behavior Settings, SLA Rev A/Delta Lite/Smart II class devices

## 11.9 Config Parameters

The **Config Parameters** is where various configuration parameters are viewed and changed for some device types (for Quantim and SLA Rev A Delta Class devices, but not for SLA Rev A Smart/DeltaLite). The exact tabs and parameters that are visible depends on the device type.

For SLA Rev A Delta Class devices, see [Chapter 14](#).

For Quantim devices, see [Chapter 15](#).

## Chapter 12 Device Control Menu

The **Device Control** menu provides functionality to control a device with functions such as valve control, and rebooting a device. Menu items visible may vary depending on device type.



Figure 12-1 Device Control Menu

### 12.1 Reboot Device

This window will allow a user to reboot a device. A reboot is similar to cycling the power to the device. If the user clicks reset, and confirms, the device will be reset and the device will remain attached to the software.

Quantim devices do not support Reboot Device.

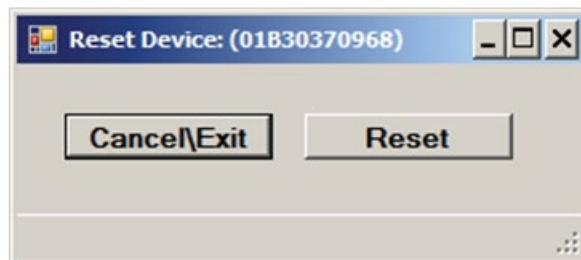


Figure 12-2 Reboot Device Window

### 12.2 Valve Control

The **Valve Control** menu provides functionality to directly control a device's valve. Normally, the device's valve may freely move up and down as needed to regulate the flow or pressure of the controller device. However, the **Valve Control** feature allows the user to directly take control of the valve position.

This is not available for meter (MFM) devices, as they do not have valves.

If control is set to Analog (external), the software will ask if the user wants to set control to Digital (BEST) control. See **Figure 11-4**.

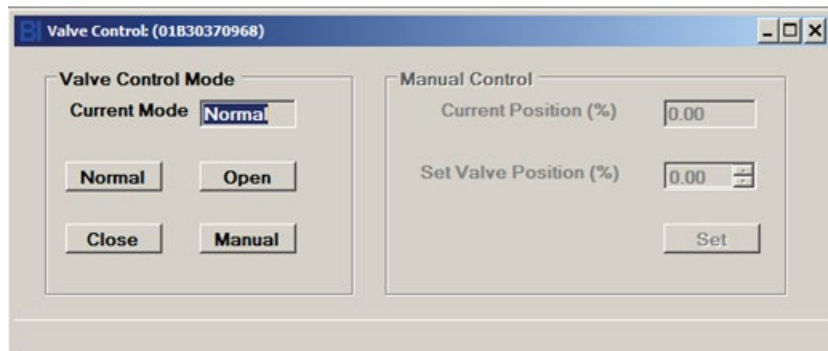


Figure 12-3 Valve Control Window

First, the user selects the desired valve control mode. The current valve control mode is shown in the Current Mode text box.

Normal mode is when the valve automatically moves up and down to regulate flow or pressure.

Open is when the valve is forced fully open. Closed is when the valve is forced fully closed.

Manual is when the user can select a valve position from 0 to 100%. When manual is selected, the Manual Control box on the right side of the form becomes enabled. The user can view and set the valve position (the user must click the Set button or click Set on the Up/Down numeric control). The valve will then be held at this position.

**\*NOTE:** if the user is using an external controller (such as the Brooks 0254) and that controller has its valve override enabled, BEST's valve control mode may not be able to change the mode or position.

When the user closes this window, if the mode is not in normal mode, the software will ask the user if they want to set the mode back to normal before leaving the window, as a reminder. Normal mode is required for most other functions.

## 12.3 Delta Device Services

For supported SLA Rev A Delta class devices only, the Delta Device Services menu provides special features to control a device.

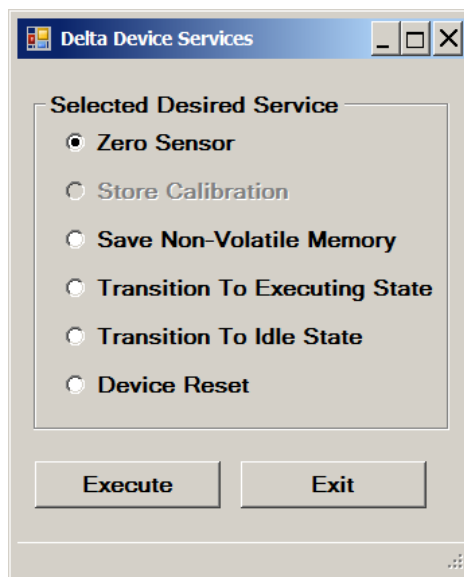


Figure 12-4 Delta Device Services

Zero Sensor performs the sensor zero operation on the flow sensor for MFC, MFM and RT devices (see also [Section 13.2](#)), or on the pressure sensor for PC devices (see also [Section 13.4](#)).

Transition to Executing State and Transition to Idle State change the device's state, for supported devices.

Device Reset performs the same function as the Device Reboot menu (see also [Section 12.1](#)).

## Chapter 13 Calibration Menu

The **Calibration** menu guides the user through the process of calibrating and tuning a device. Customer devices are usually calibrated from the factory. However, BEST allows an advanced user to calibrate a device themselves.

A software license is required for most calibration functions. Reference **Table 2-2** to determine if calibration features are supported on your device.

Both flow and pressure devices need to be calibrated for accurate control and measurement. The calibration menu includes functions for sensor zero, flow and pressure calibration, valve and response tuning, and analog input and output tuning.

**CAUTION:** Some of the features contained within the Calibration menu can be used to alter the performance of the device. It is recommended that you save the device configuration before proceeding with any calibration or tuning function. For instructions on how to save the device configuration, refer to **Section 11.1**.

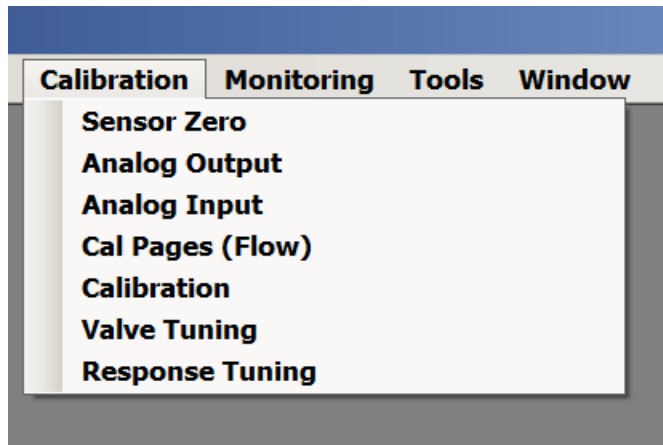


Figure 13-1 Calibration Menu  
(not shown: Pressure controller Setup Diagram, RT/Aux Calibration)

### 13.1 Pressure Controller Setup Diagram

The **Pressure Controller Setup Diagram** menu displays a basic setup diagram for pressure controller and RT devices. The diagram shows typical setups for an upstream and a downstream application. These diagrams are from the device manual but are available directly from the software as a convenience. These are merely suggested setups for reference – for detailed system analysis consult the device user manual or contact Brooks Instrument.

The form also indicates the configured direction (upstream or downstream) of the current device (See **Figure 13-2**).

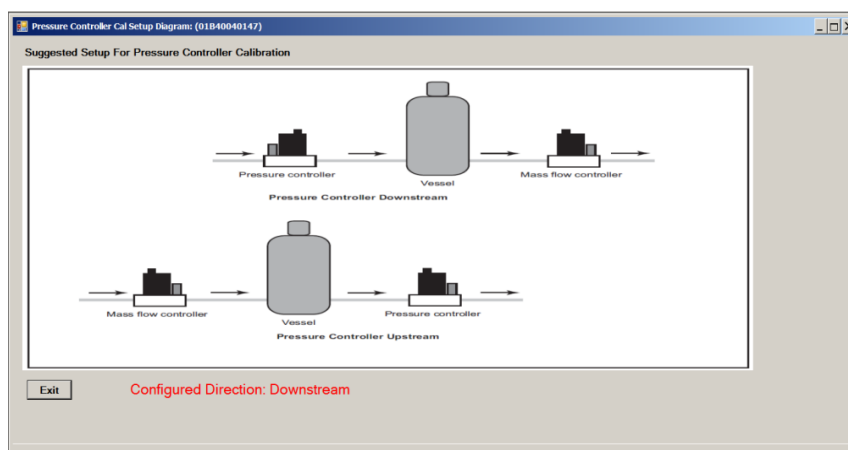


Figure 13-2 Pressure Controller Setup Diagram

## 13.2 Sensor Zero

The **Sensor Zero** menu guides the user through a sensor zero operation on either the device's flow sensor or pressure sensor. The software automatically detects the device type and sensor type, and displays the appropriate form and performs the corresponding routine. The exact procedure for zeroing the sensor differs according to device type, according to the following subsections.

A sensor zero operation should be performed prior to a full calibration. See the device user manual for device-specific additional information.

## 13.3 Flow Sensor Zero

A flow sensor zero operation is performed for a MFC, MFM, or RT device in flow control mode. For RT devices, this function zeroes the internal flow sensor, not the remote transducer pressure sensor.

During the flow sensor zero operation there must be no flow through the device. During the zero operation, with no flow, the operation reads the current sensor value, and offsets it so that the reading becomes zero.

**\*NOTE:** A flow device typically also includes a Zero pushbutton. Pushing that pushbutton performs the same function as the software operation.

Flow sensor zero operations instructions for two types of devices are described in the following subsections:

1. SLA Rev A
2. Quantim

### Zeroing a SLA Rev A Device:

**NOTE:** For SLA Rev A Delta Class devices, this same sensor zero feature is also accessible via the Device Control->Delta Device Service menu (see Section 12.3).

To zero the device's sensor:

1. Allow the device to be powered on a sufficient time so that it achieves its normal operating temperature (reference the device user manual).
2. Close any downstream shutoff valve.  
The device should be full of process gas with no pressure differential.

## Brooks® Expert Support Tool

3. Wait at least 30 seconds for the flow signal to drop to zero.
4. Using the device's Zero pushbutton or the BEST's software zero sensor function, zero the device:

If using the pushbutton, press the pushbutton until the device's Status LED flashes red, then release the pushbutton. A successful zeroing operation is indicated by the Status LED being a steady green.

If using the BEST software zero sensor function, choose BEST's Calibration->Zero Sensor menu item to display the Tuning dialog box.

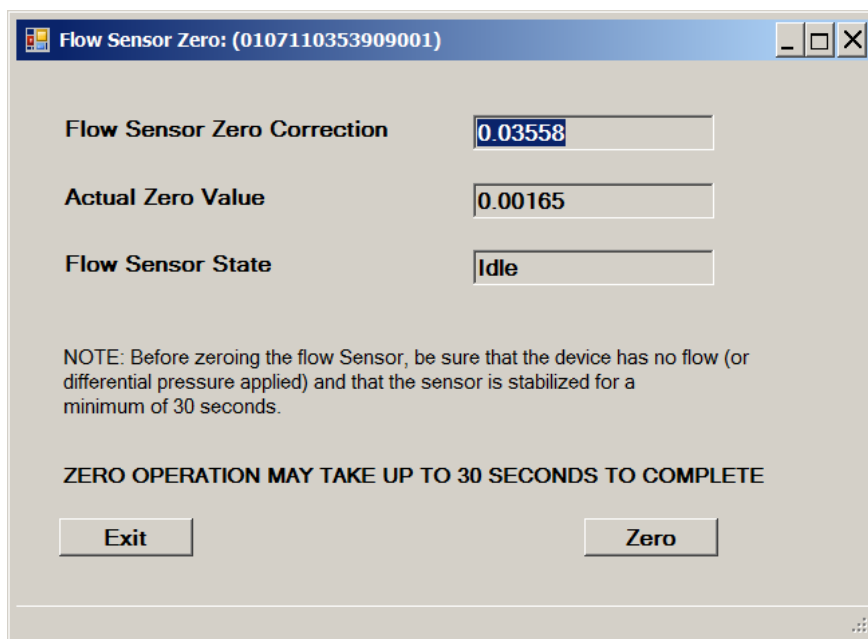


Figure 13-3 Flow Sensor Zero Window

Click the **Zero** button. A message displays when the zeroing operation is complete.

### Zeroing a Quantim Device:

1. Allow the device to be powered on a sufficient time so that it achieves its normal operating temperature (reference the device user manual).
2. Use the process gas or fluid.
3. Set the Valve Override to open to start flow through the device.  
For information on using the Valve Override, refer to [Section 12.2](#).
4. If the process fluid is liquid, allow it to flow long enough to purge any air or gas bubbles from the lines and device.

**\*NOTE:** It may be necessary to cycle the Valve Override from open to closed to clear entrapped air bubbles. If the Valve Override control is not available, then cycle the setpoint between 0 and 100%.

5. Close any downstream shutoff valve.
6. Wait one or two minutes for the flow signal to drop to zero.

## Brooks® Expert Support Tool

7. Set the Valve Override to closed, make sure the setpoint is zero, and wait again for the signal stabilization.

The device should be full of process gas or fluid with no pressure differential and no vibration.

8. Using the device's Zero pushbutton or BEST software's zero sensor function, zero the device:

If using the pushbutton, press the pushbutton until the device's Status LED flashes red, then release the pushbutton. A successful zeroing operation is indicated by the Status LED being a steady green.

If using the BEST software zero sensor function, click the Calibration->Sensor Zero menu. The Quantim Sensor Zero window displays. For advanced users, some related attributes are shown in the Configure panel and may be edited. Zero flow configuration values are shown in the read-only fields in the Results panel.

Clicking the **Start** button begins the zero sensor process. The process takes about half a minute. When the zeroing completes successfully, the **Status** field will display "Passed."

### 13.4 Pressure Sensor Zero

For pressure controller devices, the Zero Sensor function allows you to zero the device's internal pressure sensor when there is a no-flow condition. The device also includes a zero pushbutton that performs this same function.

A pressure sensor zero operation is similar to a flow sensor zero operation and is performed for a PC device only on its internal pressure sensor. For RT devices, the external remote transducer pressure sensor is not zeroed using BEST (however, BEST does provide a range calibration for this sensor - see [Section 14.6](#)).

**NOTE:** It is normally not necessary to zero the device's pressure sensor. However, if you decide that it is necessary, then you will need to pull a vacuum of less than 0.1 torr on the device to ensure actual zero pressure through it.

To zero the device's sensor:

1. Allow the device to be powered on a sufficient time so that it achieves its normal operating temperature (reference the device user manual).
2. Use the process gas.
3. Set the Valve Override to open to start flow through the device.  
For info on using the Valve Override, refer to [Section 12.2](#).

**NOTE:** It may be necessary to cycle the Valve Override from open to closed to clear entrapped air bubbles. If the Valve Override control is not available, then cycle the setpoint between 0 and 100%.

4. Make sure the device's valve-side connection is blocked (for example, by using a shutoff valve).
5. Pull a vacuum of less than 0.1 torr on the sensor side of the device.
6. Wait one or two minutes for the flow signal to drop to zero.  
The device should be full of process gas with no pressure differential and no vibration.
7. Using the device's zero pushbutton or the software sensor zero function, zero the device:

## Brooks® Expert Support Tool

If using the device pushbutton, press the pushbutton.

If using the software sensor zero function, open the Calibration->Sensor Zero menu and it will bring up the Pressure Sensor Zero window.

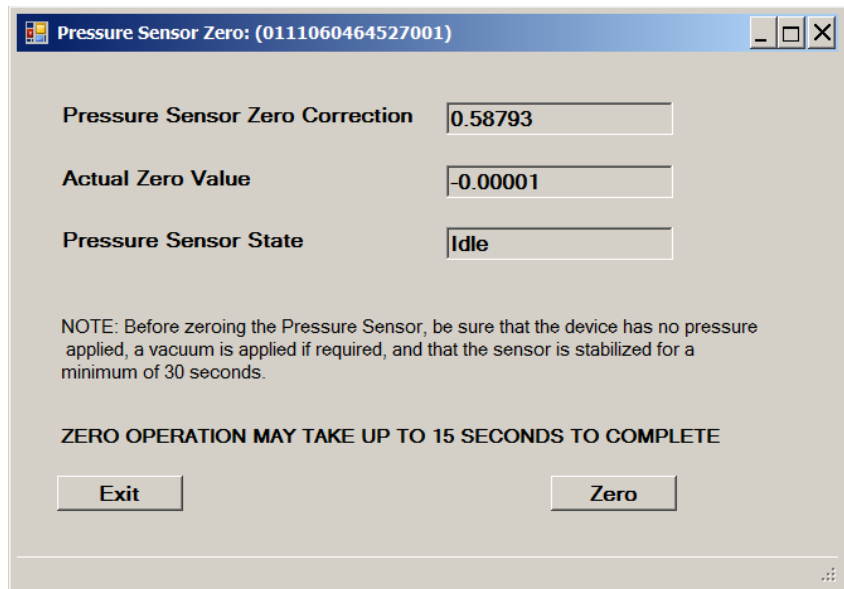


Figure 13-4 Pressure Sensor Zero Window

Click the Zero button, and the software will indicate when it has completed.

### 13.5 Analog Output Calibration

The **Calibration->Analog Output** menu allows the user to select the mode/range, check the adjustment, change the adjustment, and set some other related attributes. A license is required for this feature.

The **Analog Output Calibration** menu guides the user in verifying and calibrating (or “tuning”) the analog output of the device, if it has an analog I/O option. The analog output provides a DC voltage or current proportional to the flow or pressure reading of the device. The range and type of output is a device option.

A typical setup for calibrating an output voltage is shown in **Figure 13-5** and an output current in **Figure 13-6**. See your device’s user manual for specific information about your device. Contact Brooks Instrument to obtain a breakout board for easy connections. An alternative would be to use a device such as a Brooks Instrument Model 0254.

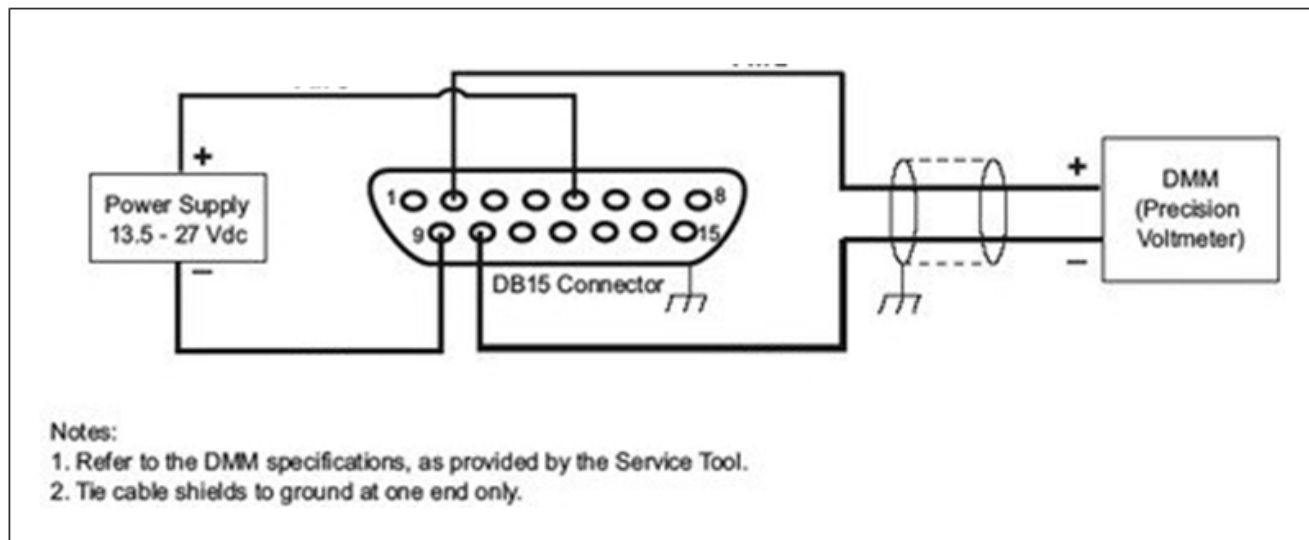


Figure 13-5 Typical Analog Output Calibration Setup, Voltage

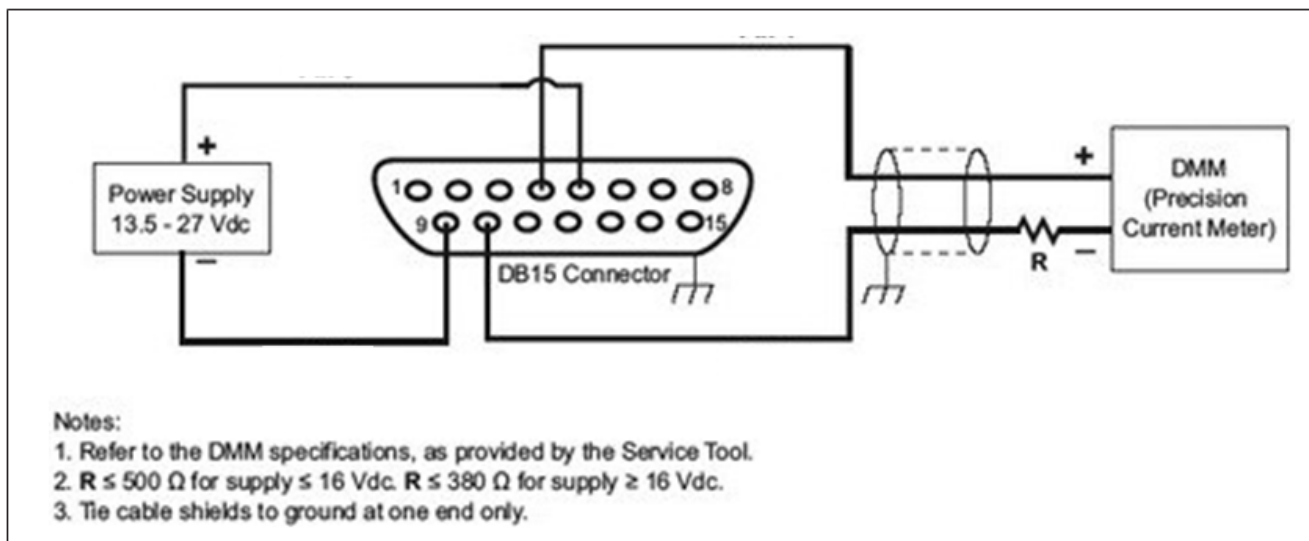


Figure 13-6 Typical Analog Output Calibration Setup, Current

The Low Output Cutoff is a percentage of full scale reading below which the analog output is forced to zero volts. For example, if the Low Output Cutoff is set to 5% and an MFC device is reading 4% flow, the analog output will put out 0 volts. To disable this feature, set Low Output Cutoff to 0%.

The other parameters can be changed here as well.

The user can change the Output Configuration mode (voltage or current) by clicking on one of the range buttons. The mode is shown in the Current Mode text box. (See [Figure 13-7](#))

The user can check the current analog output calibration by clicking on the Check button. Then the software will display another window (See [Figure 13-8](#)), asking the user to specify a voltage or current. Enter a voltage or current (within the range of the current analog output mode) and click Set. Then verify the voltage as read by an external measuring device (such as a multimeter or Brooks Instrument Model 0254 controller).

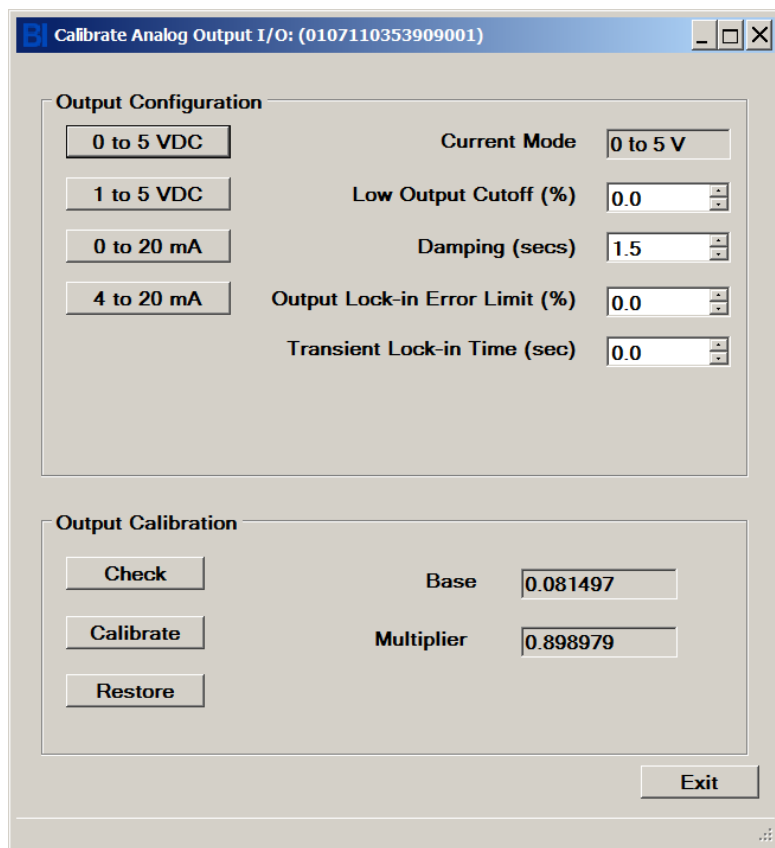


Figure 13-7 Analog Output Calibration Window


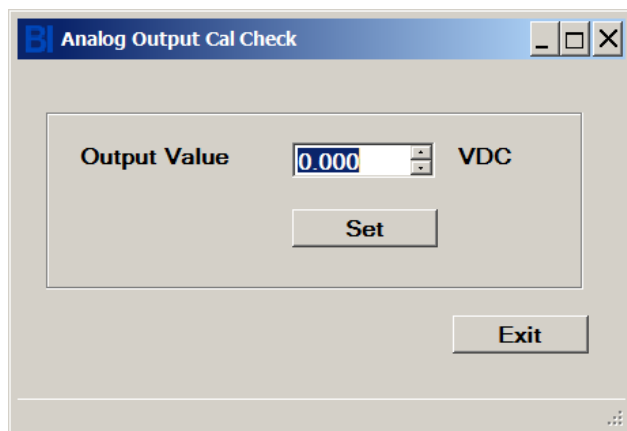


Figure 13-8 Analog Output Check Window

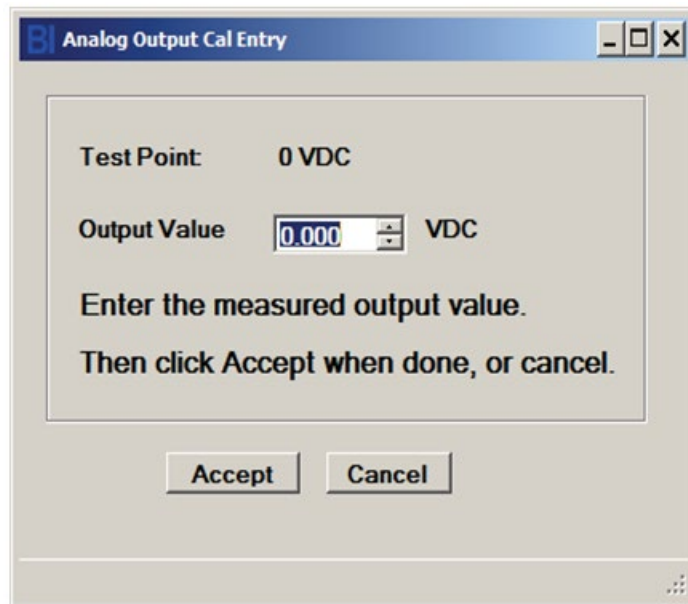


**Analog Output Cal Entry**

Test Point: 0 VDC

Output Value:  VDC

Enter the measured output value.  
Then click Accept when done, or cancel.

Figure 13-9 Analog Output Cal, Low Point

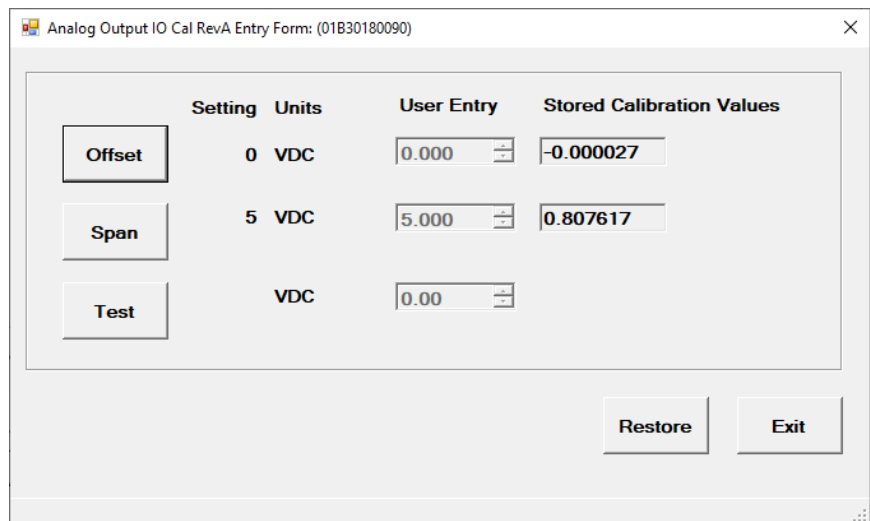

**Analog Output IO Cal RevA Entry Form: (01B30180090)**

	Setting	Units	User Entry	Stored Calibration Values
<input type="button" value="Offset"/>	0	VDC	<input type="text" value="0.000"/>	<input type="text" value="-0.000027"/>
<input type="button" value="Span"/>	5	VDC	<input type="text" value="5.000"/>	<input type="text" value="0.807617"/>
<input type="button" value="Test"/>		VDC	<input type="text" value="0.00"/>	

Figure 13-10 Analog Output IO Cal RevA Entry Form

The user can calibrate the analog output by clicking on the Calibrate button. This will open the Analog Output IO Cal RevA Entry Form (Figure 13-10).

Click the Offset button. The device will output a voltage or current at approximately 0. Enter the value of the voltage or current from the external meter in the User Entry text box for Offset and click enter.

Click the Span button. The device will output a voltage or current at approximately full scale analog output. Enter the value of the voltage or current from the external meter in the User Entry text box for Span and click enter.

Behind the scenes, the software performs an interpolation to calculate an offset and factor (or, “base” and “multiplier”) in the device.

The user may test the new analog output calibration by clicking the Test button. The user may then enter any value of voltage or current within the device's range and verify the out value on the external meter.

The user may revert back to the original values of all parameters (when the Analog Output form was last opened) by clicking the restore button (Figure 13-7).

**Quantim Devices:** The analog output calibration for Quantim devices is similar to the SLA Rev A device, except that the Quantim has two analog outputs, a primary a secondary. After the user clicks the Calibration->Analog Output menu, and before displaying the output cal window, BEST will display a choice for the user to select one or the other analog output.

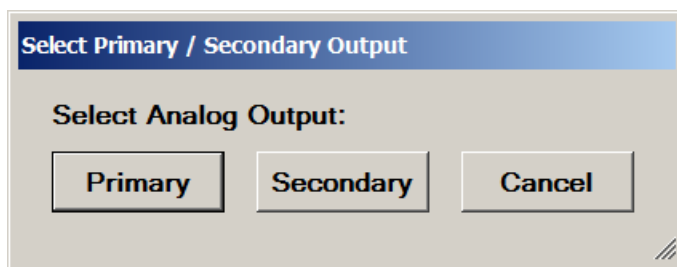


Figure 13-11 Analog Output Cal, Select Analog Output Window

After selecting primary or secondary, the user will see the primary or secondary analog output window.

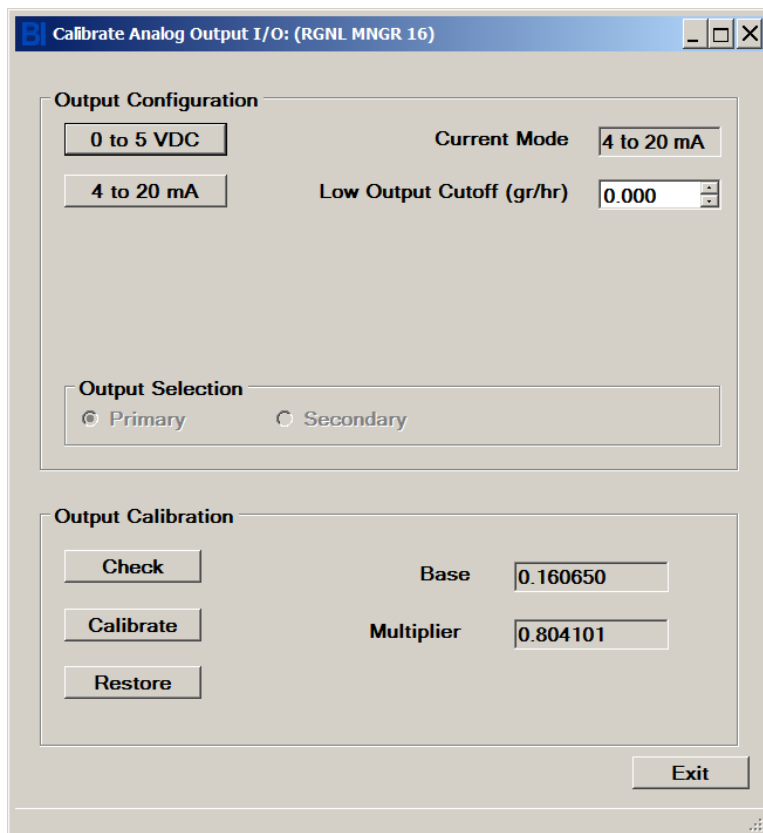


Figure 13-12 Primary Analog Output Cal Window

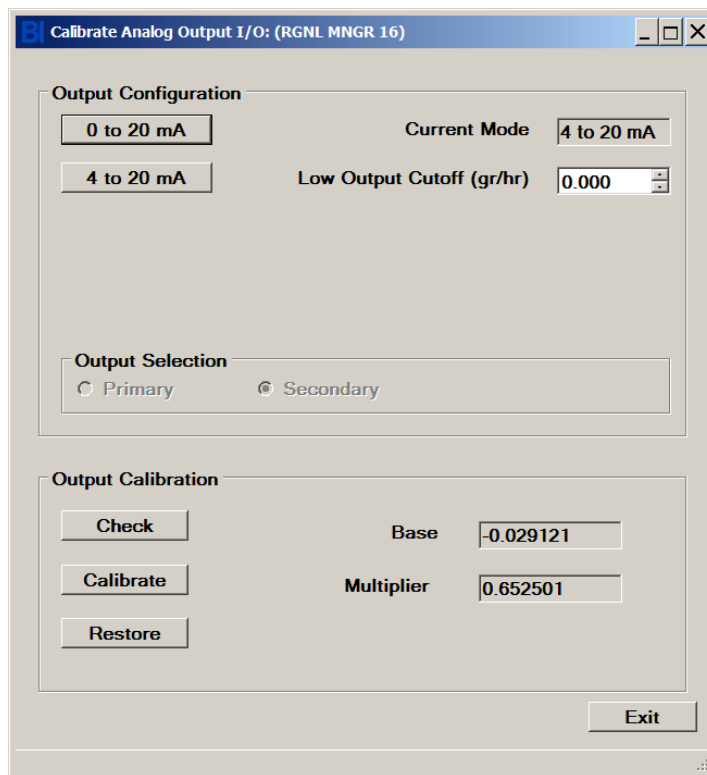


Figure 13-13 Secondary Analog Output Cal Window

## 13.6 Analog Input Calibration

The **Analog Input Calibration** menu guides the user in calibrating (or “tuning”) the analog input of the device, if it has the analog I/O option. If the device’s Control Source is set to External (See **Section 8.4**), the device responds to an analog input as either a DC voltage or current, changing its flow or pressure set point proportionally to the voltage or current. The range and type of input is a device option.

The **Analog Input Calibration** menu allows the user to select the mode and range, check the adjustment, change the adjustment, set the Low Input Cutoff and other attributes. A license is required for this feature.

The Input Adjust window allows you to select the analog input mode and set input configuration parameters. Before you begin, perform a sensor zero operation.

A typical setup for calibrating the analog input for voltage is shown below in **Figure 13-14** and for current in **Figure 13-15**. See your device user manual for specifics about your device connections. Contact Brooks Instrument to obtain a breakout board for easy connections. An alternative would be to use a device such as a Brooks Instrument Model 0254.

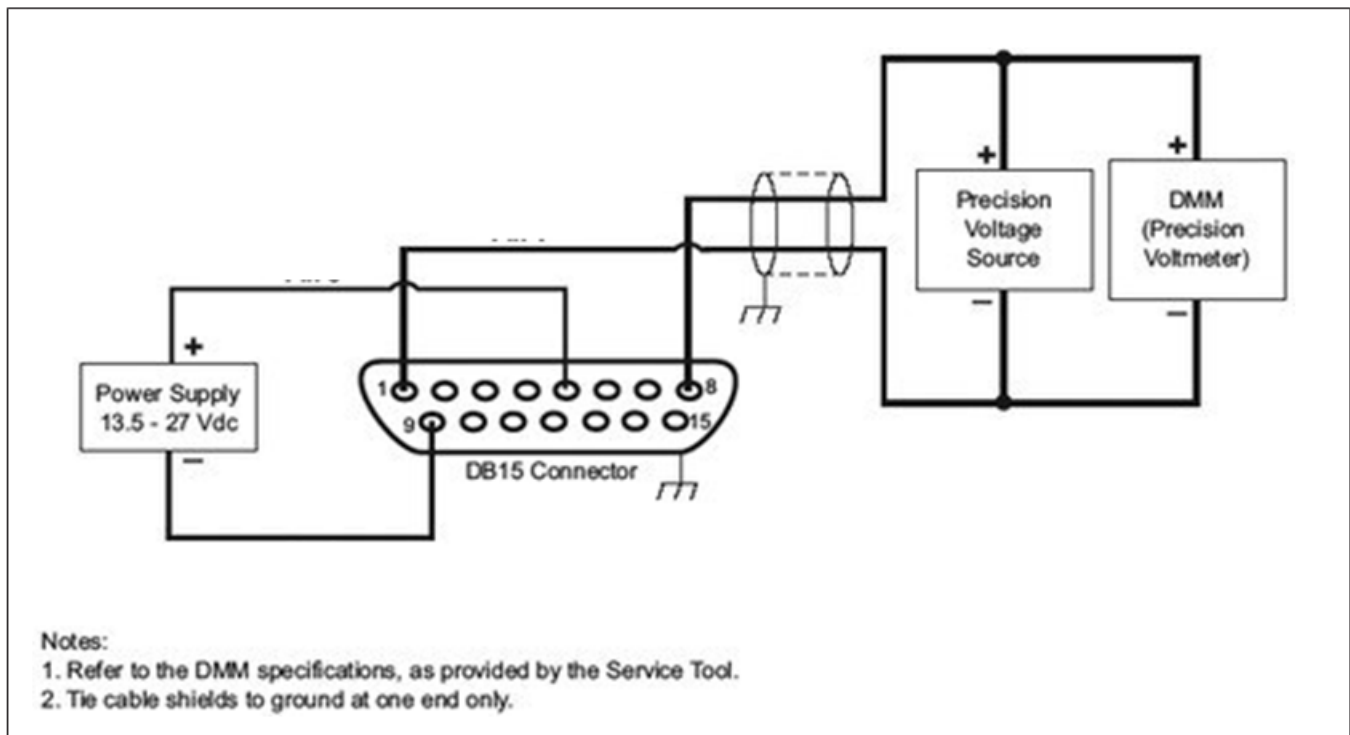


Figure 13-14 Typical Setup for Calibrating an Analog Input for Voltage

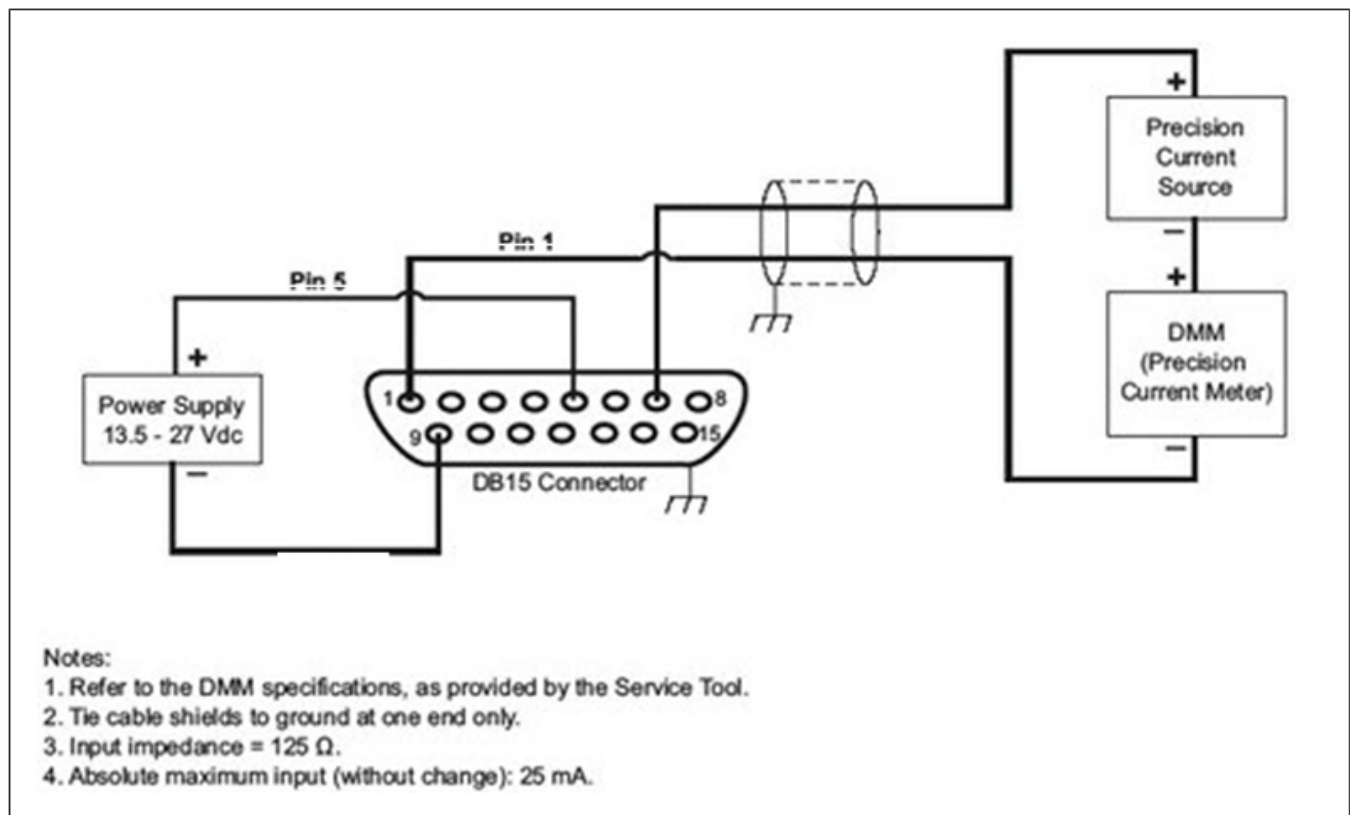


Figure 13-15 Typical Setup for Calibrating an Analog Input for Current

## Brooks® Expert Support Tool

The Low Input Cutoff is a percentage of full scale reading on the analog input below which the device set point is forced to zero. For example, if the Low Input Cutoff is set to 5% and the analog input is at 4%, the set point will be set to 0. To disable, set Low Input Cutoff to 0%.

The Softstart Ramp Time parameter allows user to ramp the set point in a certain time period specified in milliseconds (ms). For default behavior, set this parameter to 0 to allow for the fastest possible set point ramp time.

The user can change the Input Configuration mode by clicking on one of the five range buttons. The current mode is shown in the Current Mode text box.

The user can check the current analog input calibration by providing a voltage or current with an external source (such as a power supply or Brooks Instrument Model 0254 controller) to the device's analog input, then viewing the measured input "live" level in the Measured Input text box.

**\*Note:** Sometimes the valve may oscillate during the time between adjusting setpoint input base and multiplier. This is a normal event that will resolve itself immediately after setpoint input multiplier is adjusted.

The user can calibrate the analog input by clicking on the Calibrate button. The calibration process prompts the user to supply external voltages or currents to the device's analog input at two levels (high and low), then performs an interpolation to calculate an offset and factor (or, "base" and "multiplier").

At each of the two points (low and high), supply an external voltage or current as directed. The live voltage or current is shown in the Measured Input text box. Click Accept when ready each time.

Calibrate Analog Input I/O: (0107110353909001)

**Input Configuration**

0 to 5 VDC      Current Mode: 0 to 5 V

1 to 5 VDC      Low Input Cutoff (%): 1.00

0 to 20 mA      Softstart Ramp Time (mSecs): 500

4 to 20 mA      Softstart Ramp Slope (%/sec): 100.00

Softstart Mode: Off

**Input Calibration**

Calibrate      Base: 0.000000

Restore      Multiplier: 1.000000

Measured Input (VDC): 4.458

Exit

Figure 13-16 Analog Input Calibration Window

The screenshot shows a software window titled "Analog Input IO Cal RevA Entry Form: (0107110353909001)". It contains a table with calibration data and two buttons at the bottom.

	Setting	Units	Stored Calibration Values
Offset	0	VDC	0.000000
Span	5	VDC	1.000000
Measured Input (VDC)			4.458

Buttons: Restore, Exit

Figure 13-17 Analog Input Entry

The user may revert back to the original values of all parameters (when the Analog Input form was last opened) by clicking the restore button.

### 13.7 RT/Aux Input Calibration

For RT devices, the **RT/Aux Input Calibration** menu allows the user to enter scaling attributes for the remote transducer input. The auxiliary input of an RT device is normally connected to the external ("remote") pressure transducer sensor.

This operation adjusts the input sensitivity to the sensor's range (0 to 5V or 0 to 10V - see your device user manual for details).

When the user clicks on the Calibration->RT/Aux Input Calibration menu, it opens the Pressure Sensor tab of the Config Parameters window (see also [Section 14.6](#)). At this window, the user can view and modify attributes.

The screenshot shows the "Delta Configure Parameters" window with the "Pressure Sensor" tab selected. It contains various input fields for calibration parameters.

Linearization A4 Coeff.	0.14944	DeviceNet Units for FS Press	5
Linearization A3 Coeff.	0.00189	Pressure Sensor Gain	2.000
Linearization A2 Coeff.	-0.00234	Last Calibration Date	12/31/2001
Linearization A1 Coeff.	1.08073	Next Calibration Due Date	12/31/2001
Linearization A0 Coeff.	-0.00006	Calibrator's Name	Init
Remote Transducer Zero Corr	0.03829		
Pressure Sensor Zero	0.00000		
Full Scale Pressure Value	1000.00000		

Buttons: Read Continuous, Read Once, Write, Exit

Figure 13-18 RT Pressure Sensor Attribute Entry Window

## 13.8 Cal Pages

The **Cal Pages** menu is where the user can select the active calibration page, and create default pages. A “page” is a configured and calibrated set-up of the device. A page is created at the factory, via the calibration process (**Chapter 13**), or by creating a default page (from the Cal Pages form). A page is selected from the set of pages (the “calibration data set”) that have previously been created. For pressure controller devices, a page is also called a “pressure application.”

Typically, this menu item is of interest only to users who have a device with more than one calibration page stored in the device.

Quantim devices do not support cal pages, as they only have one “page”, the “active” page.

Flow devices and pressure devices each have a separate set of possible pages and thus, different Cal Pages windows. There are separate menu items for flow pages and pressure pages – Cal Pages (Flow) and Cal Pages (Pressure) - (see **Figure 13-19** and **Figure 13-20**).

MFC and MFM devices have flow cal pages, PC devices have pressure pages, and RT devices can have both types.

## 13.9 Flow Cal Pages

The Cal Pages window for flow devices is shown in **Figure 13-19**.

Figure 13-19 Cal Pages Window, for Flow Devices

The Process Gas Pages section of this form is where the user can view and select from the existing set of created calibration pages. To see the complete set of pages present in the device, click on the Process Gas Page drop-down box.

The active page is prefixed with an asterisk in the Process Gas Page drop-down box. Possible page numbers are 1 through 10. To activate a page, select one of the pages from the drop-down box, then click Activate. To view selected parameters of a page, select the page from the drop-down box, and the parameters are shown below the drop-down boxes.

Pages cannot be deleted.

## Brooks® Expert Support Tool

To create a new flow page: For Delta devices, click the Create Default Page button which will open another window to create pages. For Delta Lite/Smart II devices, the Create Default Page button will not appear: use the full calibration process, where supported.

Analog page selection (also called Analog Function Selection) is the feature where an analog input pin on the device's connector can be used to select the active page externally. If analog page selection is supported and is active, the external pin selects the active page and the page cannot be selected via BEST software – the selection controls will be disabled (see your device user manual for details for your device for Analog Function Selection).

If a device supports analog page selection, the Analog Page selection check box will be enabled. If analog page selection is currently enabled, the checkbox will be selected – if not, the checkbox will not be selected. The user may enable and disable analog page selection by checking and unchecking the Analog Page Selection checkbox.

For some older devices (SLA Rev A devices with firmware revision  $\leq$  AE), a simpler page selection window will appear. Note with these devices, note the warning that selecting a page number that doesn't currently exist will create that page.

The image shows a software window titled "Flow Cal Pages SLARevA (Old Firmware) Form: (0110040419689001)". The window has a standard Windows-style title bar with minimize, maximize, and close buttons. The main content area is titled "Flow Pages" and contains a "Page#" dropdown menu with the value "2" selected. To the right of the dropdown is an "Activate" button. Below the dropdown are four input fields: "Full Scale Value" with the value "30000" and units "cc/min", "Gas Name" with the value "Hydrogen", "Gas Identifier" with the value "H2", and "Reference Temperature" with the value "0.000" and units "°C". At the bottom left, there is a "Caution" section with a red heading and the text: "Activating a Page that does not already exist will result in the creation of that page." To the right of the caution text is an "Exit" button.

Flow Pages	
Page#	2
Full Scale Value	30000 cc/min
Gas Name	Hydrogen
Gas Identifier	H2
Reference Temperature	0.000 °C

**Caution**  
Activating a Page that does not already exist will result in the creation of that page.

Figure 13-20 Cal Pages Window, for Flow Devices, (legacy firmware)

### 13.10 Pressure Cal Pages

The Cal Pages window for pressure devices is shown in **Figure 13-21**.

Pressure Application Page: (1)

Pressure Application Pages

Pressure Application Page

3: \* 50 psia N2

Full Scale Value 50.000 psia

Gas Name N2

Gas Identifier 13

Activate

Create Default Page

Exit

Figure 13-21 Cal Pages Window, for Pressure Devices

The Pressure Application Pages section of this form is where the user can view and select from the set of created pressure calibration pages. To see the complete set of pages present in the device, click on the Pressure Application Page drop-down box.

The active page is prefixed with an asterisk. Possible page numbers are 1 through 10. To activate a page, select one of the pages from the drop-down box, then click Activate. To view selected parameters of a page, select the page from the drop-down box, and the parameters are shown below the drop-down boxes.

Pages cannot be deleted.

A license is not required to create pages. To create a default page, click Create Default Page. A new window appears as shown in **Figure 13-22**.

Pressure Cal Create Default Page: (0108060368146001)

**Existing Pressure Pages**

Existing Pressure Pages  
1: \* 1000 Torr N2

**New Pressure Page**

User Full Scale Value

User Pressure Units

**RT Transducer**

RT Transducer Full Scale Value

RT Transducer Pressure Units

New Pressure Page Number

Create Default Page

☐ Copy Current Cal/App

Exit

Figure 13-22 Create Default Page Window, for Pressure Devices

In this form, the Existing Pressure Pages section shows the existing pressure calibration pages, the same as in the previous form (but you can't change the active page this drop-down control, this is just for viewing purposes).

In the New Pressure Page section, it shows selected parameters that will be used in the new default page. For pressure controller devices, the Full Scale Range here must be  $\leq$  the internal transducer range.

Below that is the New Pressure Page Number drop-down box. The user can select a page number from 1 to 10 for the new page.

The RT panel is only shown for RT devices.

To create the new page, click Create Default Page. If the user selected a page number that already exists, the user will be prompted whether they want to overwrite the existing page. Note that the "default page" that is created is not a calibrated page. The calibration attributes must be entered in the Delta Config Parameters form.

Once the new page is created, it will appear in the list of process gas pages.

## 13.11 Calibration

SLA Rev A Delta and Quantim devices typically come from the factory pre-calibrated and thus do not normally need to be re-calibrated in the field. As of this release, BEST supports a semi-automated calibration only for SLA Rev A Delta Smart II devices. This requires a license. This is described in this chapter.

For other device types, flow control or pressure control calibration can be performed by manually calculating and entering calibration coefficients and other data using the Config Parameters window (see [Chapter 14](#) for SLA Rev A devices, or [Chapter 15](#) for Quantim devices). A license is not required for these adjustments.

### 13.11.1 Flow Calibration - SLA Rev A Delta Smart II Devices

BEST provides a semi-automated flow calibration for SLA Rev A Delta Smart II devices.

With supported devices, devices can create multiple flow calibrations in a device, stored in “pages” in the device. The user can then switch between calibrations by selecting pages.

The software automatically detects the device type and guides the user in the appropriate type of calibration to perform. The processes and windows that appear may be different depending on the device type and calibration type.

The calibration process typically involves the following steps: setting up a calibration, performing the calibration, validating the calibration, and producing a calibration report.

To perform a calibration, the following conditions are required:

- The device has been powered on for a sufficient time to be warmed up (reference device user manual).
- The sensor has been zeroed.
- There is a supply of gas.
- During the calibration process, the device must be in a thermally stable environment. Rapid or significant temperature changes during the calibration process will affect the device’s accuracy. See also the device user manual.

Calibrating a meter (MFM) device is very similar to calibrating a Mass Flow Controller (MFC). There are a few steps that are slightly different and are described in these instructions where needed. The main difference is to make sure you have a bench setup that can manually adjust the flow going through the meter device. See also [Section 11.7](#) for instructions for simulating an MFC device with a meter for calibration purposes.

**\*NOTE:** Make sure that the model code information is set correctly prior to starting calibration (see [Section 11.3](#)).

An example flow calibration window is shown in [Figure 13-23](#).

Flow Calibration (SLA RevA): (333916001RDSHOW)

**DUT Information**

Serial Number: 333916001RDSHOW

Device Type: MFC

Device Configuration: SLA5850S1BAB1C2A1E4LBAA

Exit

**Pre-Cal | Calibration | Linearization | Validation**

Process Gas Symbol: N2

Process Gas Code: 13

Ref. Temperature: 21.1

Ref. Temp. Units (°): C

Ref. Pressure: 101.325

Ref. Pressure Units: kPa

Process Flow Range\*: 120.000

Process Flow Units: cc/min

Process Gas Density\*: 1.160179

Gas Density Units: kg/m<sup>3</sup>

Gas Page #: 3

User: Default User

Cal Gas Symbol: N2

Cal Gas Code: 13

Cal Gas Correction Factor: 1.0000

Last Cal Date: 10/26/2018

Get Density

Set Default Parameters

Create Pre-Calibration Gas Page

\* @ref. temperature and ref. pressure

Figure 13-23 Flow Calibration Window (Pre-Cal tab selected)

At the top of the window is the DUT Information block. This information is read-only and is for informational purposes only. The Device Configuration text box is the model code.

Below that are four tabs: Pre-Cal, Calibration, Linearization, and Validation (See **Figure 13-23**). The user normally executes these tabs in order from left to right. Select each tab by clicking on it.

**Pre-Cal Tab:** The Pre-Cal tab is performed first. The Pre-Cal tab is shown selected in **Figure 13-23**.

Below the Pre-Cal tab are a number of user-editable entry fields. When the calibration window is first opened, these user-editable fields are initially populated from the current page of the device if it exists (except for reference pressure and units which are set to the last user-entered values).

Alternatively, the user may click Set Default Parameters which will fill all the fields with default values. This may be a good starting point for some users.

In most calibration scenarios, the user may need to change these values. For example, some users may perform calibration with a gas that is different than their process gas (for example, a user may have a process gas of Ar, but may calibrate with N2). BEST software can accommodate these scenarios. The Pre-Cal tab information is for the calibration gas, so if the user's calibration gas is different than their process gas, they will need to change this information to their calibration gas.

## Brooks® Expert Support Tool

When changing the parameters, the user typically changes the values from top to bottom (i.e., changes the Process Gas Symbol first, then Process Ref Temperature, etc.).

As the user changes these values (and moves the cursor off the text box), the Process Flow Range value is automatically re-calculated, taking into account the other parameters in order to convert the range to its equivalent. Finally, the user may manually change the range lastly, if they need to adjust the auto-calculated range value. In the Pre-Cal tab, usually this range value will be *the equivalent* of the full scale range from the model code.

Clicking Get Gas Density will look up the gas density for the entered process gas, adjust it for the entered reference temperature and pressure, and display it under the Process Gas Density box.

Cal Gas Correction Factor is the factor comparing the flow of the cal gas to the process gas.

Make sure to select the gas page number in which you want to store the resulting calibration.

The user may then click Create Pre-Calibration Gas Page.

**\*NOTE:** Always double check all user-entered values before clicking the create page button.

The software will warn the user that the create process will overwrite the target page if it already exists. After a few moments, the pre-cal page will be created. The status bar will indicate success or failure of the page creation process. The process will also make the selected page number the active page.

After you have successfully created the pre-cal page, you can proceed to the next tab, by clicking on the Calibration tab.

**Calibration Tab:** The Calibration tab is shown selected in **Figure 13-24.**

Flow Calibration (SLA RevA): (0107110353909001)

DUT Information

Serial Number: 0107110353909001

Device Type: MFC

Device Configuration: SLA5850S1EAG6C2A1E4HBAA

Exit

Pre-Cal | **Calibration** | Linearization | Validation

Set Point	Set Point	Actual Flow	Device Flow	MFC Output	Sensor Flow	Valve Pos	Temp	StartMeas
%	cc/min	cc/min	cc/min	Normalized		%	°C	
0	0.000							Click
10	5.000							Click
25	12.500							Click
50	25.000							Click
75	37.500							Click
90	45.000							Click
100	50.000							Click

Cal Points Profile (%)

0; 10; 25; 50; 75; 90; 100

Point Stabilize Delay (Secs)

1

Zero Sensor Set Point Zero Stop Meas Edit Points Optimize Sensor

Figure 13-24 Flow Calibration, Calibration Tab

The Calibration tab performs a calibration using the Pre-Cal page created in the previous subsection as a starting point.

The Zero Sensor button performs the same function as the Calibration->Zero Sensor menu item (**Section 13.2**). The sensor should be zeroed prior to starting the calibration on the Calibration tab.

Optimize sensor performs an automated adjustment for the sensor range. This is optional. It should be done before starting the grid measurements.

The Point Stabilize Delay value determines how much time delay occurs after clicking a set point button before the user may enter a flow value. This is to help prevent the user from entering a flow value before the flow has stabilized after changing a set point. The delay for the Calibration tab is always the same value as for the validation tab (see Validation Tab section below).

The grid in the center of the Calibration tab is the calibration grid. Each row of this grid represents a set point. Each column represents a measurement at the set point. A number of set points will be measured and characterized to provide a correction for accuracy.

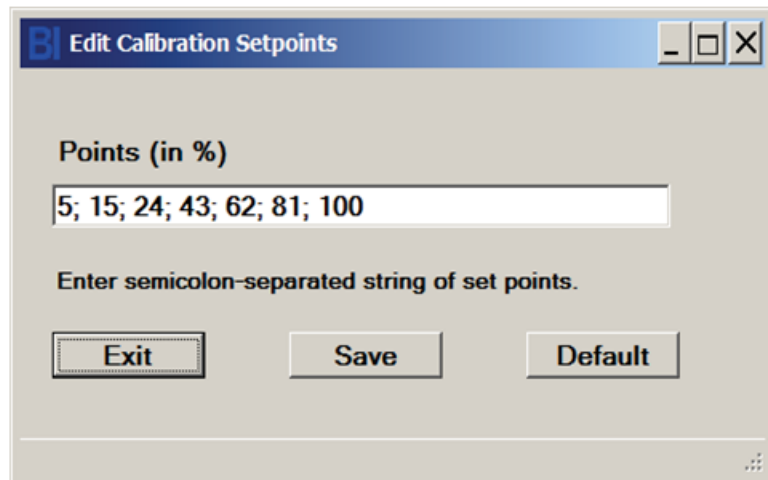


Figure 13-25 Edit Setpoints Window

The two set point columns represent the set point values in percentage (of full scale) and absolute flow units. The number and values of the set points are user- configurable.

To change the set points, click on the Edit Points button. The Edit Setpoints window appears, as shown in **Figure 13-25**.

Type in or edit a semicolon-separated list of set point percentages. Rules for the set point list are as follows:

- Must be a semi-colon-separated list.
- Number of points must be between 2 and 12.
- All fields must be a numeric integer or floating point.
- All numbers must be between 0 and 100.
- List may not contain duplicate numbers (duplicate numbers are allowed on the on the validation tab).
- Numbers must be incremental, left to right (non-incremental numbers are allowed on the on the validation tab).

To set the list to its default set, click Default.

When done, click Save, then Exit. The calibration grid now contains the new set of set points.

The first row of the grid contains the titles of the columns. The second row contains the units for each column.

The calibration of a setpoint is started by clicking on a Click button in one of the rows under the StartMeas Column. Clicking on one of these buttons starts a live measurement at the set point of the clicked row. The software will set the device's set point to the value in the set point column, and then continually read the device's output including flow, temperature, and valve position. See **Figure 13-26**.

Flow Calibration (SLA RevA): (0107110353909001)

DUT Information

Serial Number: 0107110353909001

Device Type: MFC

Device Configuration: SLA5850S1EAG6C2A1E4HBAA

Exit

Pre-Cal | Calibration | Linearization | Validation

Set Point	Set Point	Actual Flow	Device Flow	MFC Output	Sensor Flow	Valve Pos	Temp	StartMeas
%	cc/min	cc/min	cc/min	Normalized		%	°C	
0	0.000	0.02	0.063	0.0006	0.0001	10.00	30.08	Click
10	10.000	5.01	10.011	0.1001	0.0424	37.27	30.12	Click
25	25.000	12.56	24.972	0.2497	0.1058	39.00	30.15	Click
50	50.000	25.58	50.044	0.5004	0.2117	40.56	30.18	Click
75	75.000	39.40	74.983	0.7498	0.3175	41.54	30.20	Click
90	90.000	48.48	90.008	0.9001	0.3809	42.26	30.24	Click
100	100.000	54.92	100.026	1.0003	0.4230	43.13	30.27	Click

Cal Points Profile (%)

0; 10; 25; 50; 75; 90; 100

Point Stabilize Delay (Secs)

30

Zero Sensor Set Point Zero Stop Meas Edit Points Optimize Sensor

Figure 13-26 Calibration Tab (filled out)

**NOTE:** When performing this calibration with a meter type device, a pop-up window will appear, prompting the user to manually adjust the flow through the device (See [Figure 13-27](#)). Since meter devices do not have a valve, the user must adjust the flow manually in their system. Also, the Valve Position column will not show valid data for a meter device, of course.

Setpoint = 100%

Set Flow to 5,000.00 +/- 250.00 cc/min

OK

Figure 13-27 Flow Cal, Meter Setpoint Prompt

An external flow measuring instrument is required. The user will read the flow measurement from the external instrument and manually type it into the Actual Flow column.

**\*NOTE:** If the actual flow is not within 5% of the set point, the MFC output columns will turn red as a warning. When calibrating meters, take care to accurately manually adjust the flow rate (until the columns are no longer red).

To go to another row (another set point), click a Click button in one of the other rows under the StartMeas Column. All rows must be filled out to continue the calibration beyond this tab. Set points can be completed in any order.

To stop live measurements, click the Stop Meas button or click on another tab.

The Zero Set Point button changes the device set point to 0% (useful if the set point list does not contain 0%) and stops the live measurements.

## Brooks® Expert Support Tool

When you have filled out the grid info for all set point rows, you should click Stop Meas.

Then you can proceed to the next tab, by clicking on the Linearization Page tab.

**Linearization Tab:** The Linearization tab is shown in **Figure 13-28**.

Flow Calibration (SLA RevA): (0107110353909001)

DUT Information

Serial Number: 0107110353909001

Device Type: MFC

Device Configuration: SLA5850S1EAG6C2A1E4HBAA

Exit

Pre-Cal | Calibration | **Linearization** | Validation

Device Cal. Temperature (°C): 30.010

User: Default User

Polynomials

A0: 0.0001

A1: 1.1719

A2: 0.1529

A3: -0.2112

A4: 1.3156

Calculate Polynomials

Figure 13-28 Flow Calibration, Linearization Tab

The linearization tab process uses the calibration data from the Calibration Tab to calculate polynomials for a curve fit and then stores these coefficients in the device, upon clicking on Calculate Polynomials.

When finished, click on the Validation tab.

**Validation Tab:** The Validation tab is shown selected in **Figure 13-29**.

Flow Calibration (SLA RevA): (0107110353911002)

**DUT Information**

Serial Number: 0107110353911002

Device Type: MFC

Device Configuration: SLA5850S1EAG6C2A1G4QBAA

Exit

Pre-Cal | Calibration | Linearization | Validation

Set Point	Set Point	Actual Flow	Process Flow	Device Flow	MFC Output	Sensor Flow	Valve Pos	Temp	Error	Tol.	StartMeas
%	cc/min (N2)	cc/min (N2)	cc/min	cc/min	Normalized		%	°C	% ± % s.p.		
10	40.000	40.3	40.300	40.017	0.1000	0.0658	50.18	23.35	0.75	2.00	Click
25	100.000	99.9	99.900	99.965	0.2499	0.1627	51.32	23.32	-0.10	1.00	Click
50	200.000	200.5	200.500	199.957	0.4999	0.3286	52.62	23.26	0.25	1.00	Click
75	300.000	300.99	300.990	299.981	0.7500	0.4829	54.15	23.24	0.33	1.00	Click
90	360.000	359.9	359.900	359.964	0.8999	0.5718	55.30	23.18	-0.03	1.00	Click
100	400.000	404.5	404.500	400.007	1.0000	0.6255	55.61	23.20	1.12	1.00	Click

Validation Points Profile (%)

10; 25; 50; 75; 90; 100

Current Page

Page 3: N2 (400 cc/min @ 21.1 °C)

Zero Sensor

Set Point Zero

Stop Meas

Validate Accuracy

Create Cal Sheet

Point Stabilize Delay (Secs)

1

\*Make sure your ref. instrument ref. temp. is set to 21.1°C

Data reading for setpoint 10%

Figure 13-29 Flow Calibration, Validation Page (filled out)

The Validation tab performs a validation check of the calibration. The page verified is the current page.

The grid in the center of the Calibration tab is the validation grid. Like the calibration grid, each row of the validation grid represents a set point. Each column represents a measurement at a set point. A number of set points will be measured and checked for accuracy.

The set point columns represent the set point values in percentage and absolute flow units. The number and values of the set points are user-configurable. The set of validation points does not need to match the set of calibration points. To change the set points, click on the Edit Points button. The Edit Setpoints window appears, as shown in [Figure 13-25](#), the same way as for calibration set point selection.

The Point Stabilize Delay value determines how much time delay occurs after clicking a set point button before the user may enter a flow value. This is to prevent the user from entering a flow value before the device has stabilized (in terms of flow control) after changing a set point. The delay for the Validation tab is always the same value as for the Calibration tab (see Calibration Tab section above).

The first row of the grid contains the titles of the columns. The second row contains the units for each column.

## Brooks® Expert Support Tool

Like the calibration tab, the validation for a set point is started by clicking on a Click button in one of the rows under the StartMeas Column. The software will set the device's set point to the value in the set point column, and then continually read the device's output including flow, temperature, and valve position. See **Figure 13-29**.

**\*NOTE:** when performing this validation with a meter device (MFM), a pop-up window will appear, the same one that appears for the Calibration tab, prompting the user to manually set the flow through the device (See **Figure 13-27**). Since meter devices do not have a valve, the user must set the flow manually in their system. Also, the Valve Position column will not show a valid value for meter devices.

**\*NOTE:** If the actual flow is not within 5% of the set point, the MFC output columns will turn red as a warning. When calibrating meters, take care to accurately manually adjust the flow rate (until the columns are no longer red).

**\*NOTE:** The accuracy calculation is the comparison of the expected flow and external actual measurement. The pass/fail criteria (red or green) is based on the percentage of full-scale for all points.

Like the calibration tab, in the validation tab the user must enter the actual flow into the Actual Flow column, the column with a yellow background. An external flow measuring instrument is required. The user will read the flow measurement from the external instrument and manually type it into the Actual Flow column.

To go to another row (another set point), click a Click button in one of the other rows under the StartMeas Column. All rows must be filled out with valid numeric data to complete the validation and create a certification sheet (see section "Create Cert" below). Set points can be completed in any order.

Once a user types in an actual flow value, the error percentage is automatically calculated and updated for the current row.

Clicking the Validate Accuracy button stops live measurements and recalculates the accuracy for all set points (all rows). The accuracy calculation compares the target set point/flow rate to the (manually entered) external meter value.

At any time, to stop live readings, click the Stop Meas button.

The Zero Set Point button stops live measurement and changes the device set point to 0% (useful if the set point list does not contain 0%).

When you have filled out the grid info for all set point rows, you should click Stop Meas. Then, if desired, you can proceed to print a certification report (see next section).

**Create Cert:** Once the validation is completed, the user can print out a certification sheet (or "Cert"). This is a report showing the validation results data and some custom user information.

Click the Create Cert button. A window will open showing a pre-selected set of configuration data. It also allows the user to choose a set of custom configuration data items that will appear on the report, in addition to the calibration data. The user may select, edit, and save the set of custom configuration data for the report (See **Figure 13-30**).

## Brooks® Expert Support Tool

The fields with a white background are initialized with values from the device or software. Fields with a yellow background are initialized with values from a user profile. A user profile is a set of user-selected values that are stored so that the user does not have to repeatedly type in the same values. The user saves a set of values in a profile, creates a profile, and selects a profile. The fields with a gray background cannot be changed by the user. The user may also select the image that appears on the footer of the report. The user may choose the default, or may provide their own logo.

The user may also select the number of decimal places that appear in the tabular data on the report, via the Decimal Places box.

The screenshot shows the 'Cal Report Preview Form' interface. At the top, the 'Profiles' section has a dropdown menu currently set to 'Brooks Hatfield', with 'Save' and 'Save As' buttons to its right. The main 'Report Data' section contains numerous input fields organized in columns. Fields with a white background (e.g., Serial Number, Model Number, Customer, Calibration Inlet Pressure, Calibration Outlet Pressure, Calibration Fluid, Calibration Software Revision, Calibration Location, Calibration System ID, Calibration Date/Time, Calibration Procedure, Calibration ID) are initialized with values from the device or software. Fields with a yellow background (e.g., Calibration Inlet Pressure, Calibration Outlet Pressure, Calibration Fluid, Calibration Software Revision, Calibration Location, Calibration System ID, Calibration Date/Time, Calibration Procedure, Calibration ID) are initialized with values from a user profile. Fields with a gray background (e.g., Valve Type, Valve Seat Material, O-Ring/Seat Material, Mounting Attitude, Horizontal Bow Down, Power Supply, Reference Number, Alternate ID, Tag Number, Calibration Notes) are read-only. On the right side, the 'Decimal Places' section has a dropdown menu set to '2' and buttons for 'Set Point', 'Output %', 'Actual Data', and 'Error %'. At the bottom, the 'Footer' section includes an 'Image File Path' field with a 'Select' button. A status bar at the bottom indicates 'Yellow - saved in profile'. The 'Generate Report' button is located at the bottom right.

Figure 13-30 Flow Cal, Cert Sheet Preview Page

After this, click Generate Report and a preview of the report will be displayed.

**Calibration Report Display**

**Production Calibration Data Sheet**

Device Information		Calibration Information		Mechanical Information	
Serial Number	01B30370968	Calibration Inlet Pressure	30 PSIG	Valve Type	Normally Closed
Model Number	SLA	Calibration Outlet Pressure	0 PSIG	Valve Seat Material	Viton
Customer	Brooks	Gas Conversion Factor	1.0000	O-ring/Seal Material	Viton
Customer Fluid	N2	Calibration Fluid	N2	Mounting Attitude	Horizontal/BaseDown
Full Scale Flow	5000 cc/min	Calibration Software/Revision	4.0.0.1	Power Supply	24 Vdc
Reference Temp/Pressure	0 °C / 101.325 kPa	Calibration Location	Station 1	Reference Number	1213
Customer Inlet Pressure	30 PSIG	Calibration System ID	LSHAT-5215Q3V	Alternate ID	123
Customer Outlet Pressure	0 PSIG	Calibrator	D. Miller	Tag Number	222222
Input	4 to 20mA	Calibration Date/Time	5/9/2016 11:08:18 AM	Calibration Notes Testing BEST Softw are new	
Output	0 to 5 V	Calibration Procedure	T123		
Customer Part Number	SLA5850S1BAB1B2A1	Calibration #	1 of 1		

**Calibration Check Data**

Setpoint%	Output%	Flow	Error(%Rate)
5.00	5.000	250.00000	0.00
25.00	25.000	1250.00000	0.00
50.00	50.000	2500.00000	0.00
75.00	75.000	3750.00000	0.00
100.00	100.000	5000.00000	0.00

Setpoint vs. Error (%Rate) 0.5% Rate, 0.15% F.S. < 20%

Brooks Instrument  
407 West Vine Street  
P.O. Box 909  
Methuen, MA 01840-0903 USA  
T (215) 363-3700  
F (215) 363-3749  
www.brooks-instrument.com

Brooks Instrument  
Reconroad 3  
6718 9000 Rd. Northwinds  
T 31-318-549-300  
F 31-318-549-309

Brooks Instrument  
H-8000 Sakakuchi-cho  
Bardonia 22-100, Hungary  
T +36-22-543-775  
F +36-22-543-775

Brooks Instrument  
1-4-4 Katsuna Koto-Ku  
Tokyo, 135-0073 Japan  
T 81-3-5633-7109  
F 81-3-5633-7124

Approved by: \_\_\_\_\_  
This report shall not be reproduced, except in full, without written approval from Brooks Instrument. Ref: OPI004.1  
Page 1 of 1

**BROOKS**  
INSTRUMENT

Close Print Save

Figure 13-31 Flow Cal, Cert Sheet

From there, the user may view, print or save the report to file.

### 13.11.2 Pressure Controller Calibration

Pressure controller calibration is performed for SLA Rev A Delta class pressure controllers by manually calculating and entering calibration coefficients and other data using the Config Parameters window (see [Section 14.6](#)). A license is not required for these adjustments.

### 13.11.3 RT Device Calibration

Flow calibration is performed for SLA Rev A Delta class RT devices by manually calculating and entering calibration coefficients and other data using the Config Parameters window (see [Section 14.6](#)). A license is not required for these adjustments.

Pressure calibration is performed for an SLA Rev A Delta class RT device's remote transducer pressure sensor by manually calculating and entering calibration coefficients and other data using the Config Parameters window (see [Section 14.6](#)). A license is not required for these adjustments.

## 13.12 Valve Tuning

The **Valve Tuning** menu is whereby the user can check and optimize the range of the valve, as well as adaptive control, for MFC, PC and RT devices. (Valve Tuning is not to be confused with Response Tuning – see **Section 13.13**) MFM devices do not have a valve, so valve tuning is not applicable. Optimization can be done manually, or using an automated routine for some devices (auto valve tuning is not supported for the Quantim Device).

Valve Tuning function allows you to tune two valve parameters to optimize its performance:

- Valve offset (flow off, 0%)
- Valve span (at flow + span, flow is just at full-scale, 100%).

All valve offset values are calibrated at the factory at the conditions specified on the device's order. Device performance can be affected by contaminants or pressure changes. Tuning the valve offset and span can help to optimize the valve response.

At process conditions with process flow:

- The valve **offset** value corresponds to the valve position (measured as a percentage from fully closed to fully open) at which flow is off.
- The valve **span** value is used to determine the valve position— offset + span—at which flow is just at full-scale.

All valve offset values are calibrated at the factory at the conditions specified on the device's production order.

**\*CAUTION:** It is highly recommended that you save the device configuration using the save dump file feature to save the device's current configuration before making any changes to the valve offset and span. This will allow you to restore a working configuration if the valve tuning operation results in incorrect settings or faulty operation. For more information, refer to **Section 11.1**.

The Valve Tuning window is accessed by clicking the Calibration-> Valve Tuning menu. The Valve Tuning Window is shown below in **Figure 13-32**.

The screenshot shows the 'Valve Tuning Form' window. It is divided into several sections:

- Manual Tune:** Contains input fields for 'Offset (New)', 'Offset (Stored)', 'Offset (Actual)', 'Span (New)', 'Span (Stored)', and 'Span (Actual)'. Each field has a 'Save' button next to it. The 'Valve Type' is set to 'Normally Closed Coplanar Valve'.
- Valve Control:** Contains buttons for 'Normal', 'Open', 'Close', and 'Manual'. It also has a 'Valve Position' field showing '54.256 %'.
- Adaptive Control:** Contains a 'Control Mode Enabled' section with 'Enable' and 'Disable' buttons. Below it is a 'Current Control Mode' dropdown set to 'OffsetAndSpan'.
- Auto Tuning:** Contains fields for 'Low Setpoint' (10 %), 'Low Dwell' (25 Secs), 'High Setpoint' (95 %), and 'High Dwell' (25 Secs). There is a 'Start' button.
- Valve Drive:** Contains a 'Flow' field showing '89.131 %' and a 'Valve Drive' field showing '54.296 %'.

Figure 13-32 Valve Tuning Window

The Manual Tune panel is where the user can manually adjust the offset and span of the valve range. The Valve Control panel is where the user can manually control the valve position. Adaptive Control is where the user can control the adaptive control mode of the valve, where supported by the device. Auto Tuning is an automated algorithm that can assist the user is setting the valve range, depending on the device type.

### 13.12.1 Checking Offset and Span Values

#### To check the offset and span values:

1. The Valve Tuning window is accessed by clicking the Calibration-> Valve Tuning menu.
2. Set inlet and outlet pressure conditions to match those specified on the device's order or on its Calibration Report.
3. Click the Adaptive Control **Disable** button to make sure that Adaptive Control is not on.
4. In the Valve Control panel, click the **Manual** button to enable manual control of the valve.
5. Starting with 0, enter percentage values in the **Valve Position** field until the flow text box reports (1%) (do not reference an external flow measuring instrument here).

At this point, the value in the **Valve Position** field should be very close to the value shown in the **Valve Offset (Stored)** field. Some small difference between **Valve Position** and **Valve Offset (Stored)** is acceptable.

6. Continue to enter higher values in the **Valve Position** field until 100% flow is reached.

## Brooks® Expert Support Tool

At this time, the value in the **Valve Position** field should be very close to the sum of the values in the **Valve Offset (Stored)** and **Valve Span (Stored)** fields. Some difference in these values is acceptable.

You should adjust the offset and span values if one of the following are true:

- The process conditions are now different from that specified on the device's order.
- The valve position that produces a flow rate of 1% does not closely match the offset value in the **Valve Offset (Stored)** field.
- The valve position that produces a flow rate of 100% does not closely match the current offset + span values in the **Valve Offset (Stored)** and **Valve Span (Stored)** fields.

You can use either Manual or Automatic mode to adjust the offset and span values, as explained in the following two subsections. If the Automatic tune mode is not able to control the device, use the Manual method.

### 13.12.2 Adjusting Offset and Span Values - Manual Tuning - For MFC Devices

**To adjust the offset and span values manually for MFC (and RT) devices:**

1. Set inlet and outlet pressure conditions to your process or application specs.
2. Click the Calibration-> Valve Tuning menu.
3. Click the Adaptive Control **Disable** button to make sure that Adaptive Control is not on.
4. In the Adaptive Control panel, Enable Adaptive control if desired and set the adaptive Control mode.
5. Starting with 0, enter incremental values in the Valve Position field until flow just begins (press the Enter key after entering a value). Make sure you have stopped at 1% flow.
  - **NOTE:** Do not overshoot and then decrease the valve value to locate the offset position. Because of valve hysteresis, you must start at zero and find the offset value only by increasing up from zero.
6. Press the **Save Offset** button for the offset to save the new offset value.
7. Once the offset value is determined and set, continue to slowly increment the current valve value. As flow rate approaches 100%, enter values in smaller increments until 100% flow is achieved.
8. Allow the flow rate to stabilize. When the flow rate has stabilized, press the **Save Span** button to save the new span value.
9. Enter different values in the **Valve Position** field to determine whether or not the newly saved offset and span values produce the desired flow rates, that is, 1–2% with the valve drive at offset, and 100% with the valve drive at offset + span.
10. Click the **Normal** button in the Valve Control panel to return the valve to its normal operating state.

11. In the Adaptive Control panel, Enable Adaptive control if desired and set the adaptive Control mode.

### 13.12.3 Checking and Adjusting Offset & Span Values - Manual Tuning - For Pressure Devices

**\*NOTE:** It is normally not necessary to adjust the valve offset and span for a pressure controller. Valve offset and span adjustments need to be adjusted only if proportional and integral gain adjustments do not result in satisfactory performance.

When performing the valve tuning, it is important to note the distinction between the pressure controller being upstream or downstream of the pressure vessel. This can be checked on your device in BEST by the Calibration->Pressure Controller Direction menu, or by the Device Config-> Model Code menu.

To check and adjust the offset and span values:

1. Under Graph Options, change the pressure and pressure setpoint units to percent.
2. Start the main graph.
3. Establish full scale flow into (upstream) or out of (downstream) the pressure vessel by:
  - Set the pressure controller's valve override to Open. (Refer to **Section 12.2** for valve control).
  - Set flow to fullscale.
4. Establish a minimum pressure for the device:
  - **For a downstream pressure controller**, set the valve override to Closed.
  - **For an upstream pressure controller**, set the valve override to Open.
  - Wait for pressure to stabilize. The minimum pressure is the pressure reading + 2%. Note that for a downstream controller with the Valve Override closed, the pressure vessel should "empty" and thus the pressure should become 0 (assuming flow into a vacuum and no flow leak-by at the pressure controller).
  - Record the minimum pressure.
5. Set the valve override to Normal.
6. In the main graph window, enable the digital setpoint control, then enter the minimum pressure determined in step 4 in the setpoint field.
7. Determine the offset:
  - Wait for the flow to stabilize. The offset valve setting will be the Valve Output value – 5% (use the Valve Output value, not the Valve Drive value). Record this value.
8. Determine the span:
  - Set the setpoint to 100%.
  - Wait for the flow to stabilize. The span valve setting will be the Valve Output value. Record this value.

## Brooks® Expert Support Tool

You should go on to step 10 and adjust the offset and span values if one of the following are true:

- The process conditions are now different from that specified on the device's order.
- The valve value that produces a flow rate of 1–2% does not match the current offset value in the Direct Parameter Update panel's **Valve Offset** field.
- The valve value that produces a flow rate of 100% does not match the current offset + span values in the Direct Parameter Update panel's **Valve Offset** and **Valve Span** fields.

9. Open the **Tune** menu and choose **Valve**. The Valve Tuning window opens.

10. Enter the offset and span values:

- Enter the offset value determined in step 7 and click the **Save Offset** button.
- Enter the span value determined in step 8 and click the **Save Span** button.

11. Enter the offset and span values:

- Enter the offset value determined in step 4 in the **Offset (New)** box and click enter (do not click the Save Offset Button).
- Enter the span value determined in step 5 in the **Span (New)** box and click enter (do not click the Save Span button).


### 13.12.4 Adjusting the Offset and Span Values - Auto Tuning

The Auto Tune function determines the valve offset and span values automatically. The auto test takes several minutes to execute. Auto valve tuning is not supported for the Quantim Device or for pressure controller devices.

To adjust the offset and span values using the Auto Tune function:

1. Set inlet and outlet pressure conditions to your process or application specs.
2. The Valve Tuning window is accessed by clicking the Calibration-> Valve Tuning menu.
3. The step values (high and low) are shown in the Auto Tuning panel. These values define the low and high valve step values that will be used to adjust the valve during the second phase of the Auto Tune operation. These can be adjusted if desired. The Dwell values determine how long to maintain the step value before switching to the next value. These can also be adjusted if desired. Delay should be long enough for the flow to settle after changing setpoints during the auto test.

**\*NOTE:** It is recommended to keep the User Inputs parameters at their default settings.

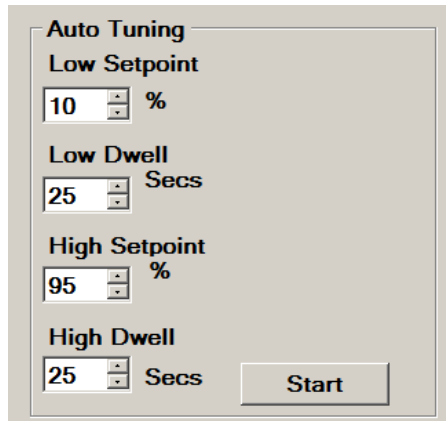

**Auto Tuning**

**Low Setpoint**  
10 %

**Low Dwell**  
25 Secs

**High Setpoint**  
95 %

**High Dwell**  
25 Secs

**Start**

Figure 13-33 Auto Tuning Parameters Window

- Click the Auto Tune button to start the auto tune operation. The Auto Tune operation starts.

In the first adjustment phase of the auto tune operation, the device valve is opened in gradual steps to determine an approximated rough valve offset and span.

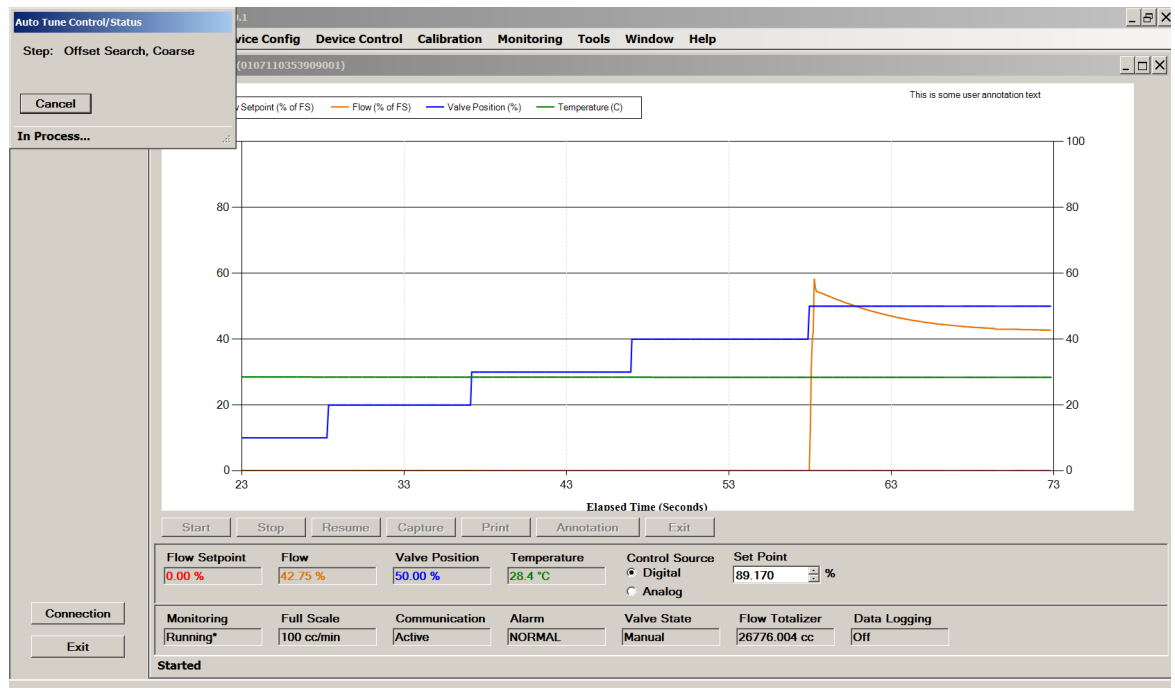


Figure 13-34 Auto Tuning In Progress, Course Adjust

In the second adjustment phase, the setpoint is repeatedly cycled (according to the setpoint cycling values that you specified) until offset and span differences are below an acceptable threshold, or for a maximum of six cycling periods. This adjustment process can take several minutes.

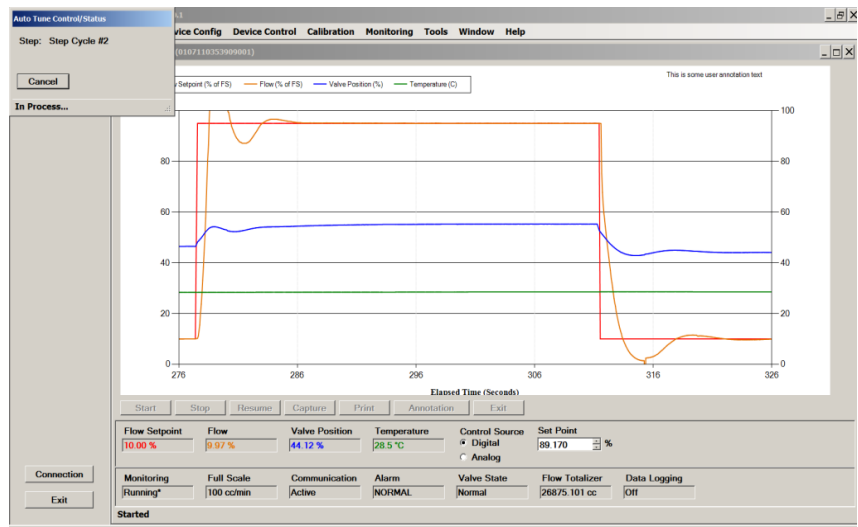


Figure 13-35 Auto Tuning In Progress, Cycling

When the Auto Tune operation is complete, a message box displays, and new offset and span values will be set.

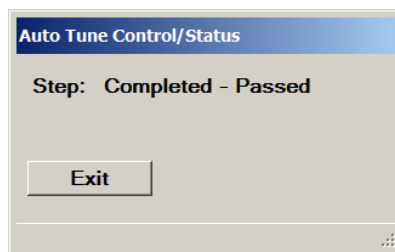


Figure 13-36 Auto Tuning Complete

## 13.12.5 Dynamically Adjusting the Offset and Span Values During Device Operation

The Valve Tuning Adaptive Control function, when supported by the device and enabled, causes the device to dynamically adjust valve offset and span, or just offset, while the device is operating.

If process conditions change significantly (such as moderate shifts in inlet or outlet pressure) while Adaptive Control is enabled, valve offset and span will dynamically self-adjust for optimum valve performance under the new process condition without requiring operator intervention.

To set Adaptive Control settings, click menu item Calibration->Valve Tuning under the Adaptive Control panel (see [Figure 13-32](#)), or alternatively, access it under the Device Config->Config Parameters menu under the Valve tab (see [Section 14.8](#) for SLA Rev A devices or [Section 15.12](#) for Quantim devices).

**NOTE:** When adaptive control is enabled, offset and/or span may change dynamically. However, these changes are not permanent, and the device returns to the stored offset and span after a power cycle or system reset.

## 13.13 Response Tuning

The **Response Tuning** menu is where the user can optimize the timing response in measuring changes in flow. (Response Tuning is different than Valve Tuning – see **Section 13.12**). Response tuning optimizes the dynamic response of the device to changes in set point. You can use this feature to eliminate undesired under-and overshoot.

MFM devices do not have a valve, so valve tuning is not applicable.

If the mass flow controller device supports the Improved Response and Control feature also PID Kd (derivative gain) value can be changed. If this feature is not supported by the mass flow controller device the PID Kd value cannot be changed.

Users can tune valves on either flow or pressure control devices. The process is very similar for both. Flow devices (MFC's) are tuned in flow control mode, and pressure devices (PC's) are tuned in pressure control mode. RT devices may be tuned in either mode: first select the mode (Device Control->RT Control Mode menu). This section describes the process for response tuning for flow controllers. The following section describes the process for response tuning for pressure controllers.

**\*Note:** For devices calibrated at the factory, response tuning adjustments should typically not be necessary, as calibrations are performed to the device's specified process conditions. If you do want to adjust the response tuning, it is strongly recommended that you only adjust the PID Kp and Ki (proportional and integral gain). Only in rare occasions the Kd1 and Kd2 (derivative gain) values might improve performance. Do not adjust the Flow Control

**K-up and K-down** values. For Service Suite training, which includes training for response tuning, contact your local Brooks service representative.

**\*NOTE:** Make sure that you have saved the device configuration in a dump file prior to adjusting these values.

The valve tuning process typically involves cycling the flow or pressure between a high and a low set point value, while watching and adjusting the parameters that control the response of the valve. The objective is to minimize overshoot and undershoot.

To tune the device's response, you will set up a square wave for the set point. You will then make adjustments to tuning parameters to make the actual flow graph match the set point's square wave.

### 13.13.1 Response Tuning (Flow)

The user will open the main graph window (See **Section 8.4**) and start the monitoring. For valve tuning, it is recommended that you choose % as your units of display for setpoint, pressure and flow. Make sure the graph can display your range of flow values (Settings->Graph Options menu).

Then the user will open the Calibration->Valve Tuning menu and make adjustments there while watching the performance on the main graph. Position the Graph window so that you can see the Tuning and Graph windows at same time.

The flow controller valve response tuning setup window is shown in **Figure 13-37** and **Figure 13-38**, and the pressure controller valve response tuning setup window is shown in **Figure 13-46**.

Figure 13-37 Flow Valve Tuning Setup Window, SLA Rev A

Figure 13-38 Flow Valve Tuning Setup Window, Quantim

Set up the set point square wave in the Cycling block of the Tuning window. Pick high and low set points that are at the expected range of your process application.

The Cycling block in this window allows the user to select parameters determining the high and low set point of the cycling. The Switching Time determines how often the set point changes state during the cycling. Choose a switching time that allows enough time for the flow response to settle after the setpoint changes. The Start button starts the cycling and the Stop button stops the cycling.

**\*Note:** If you are adjusting a meter model (MFM), use a separate flow controller to regulate the set point cycling.

Make sure that the **Adaptive Control Enable** option is disabled.

Apply gas flow to your device.

Click the Start button to begin the cycling.

## Brooks® Expert Support Tool

Observe how closely the actual flow matches the set point square wave. Start making adjustments using the PID Kp and Ki (proportional and integral gain) values. In general, flow response should be as fast as possible with minimum overshoot (less than 5%).

Start making adjustments using the PID **Kp** and **Ki** (proportional and integral gain) values. (Do not adjust the Flow Control **K-up** and **K-down** values.) The Adjustments block is where the adjustments are made during the cycling. When changing values, always remember to click Apply.

If you are having difficulty getting the actual flow graph to look like the setpoint square wave, you can restore the initial settings that were in effect when the window was opened by clicking the **Restore Settings** button.

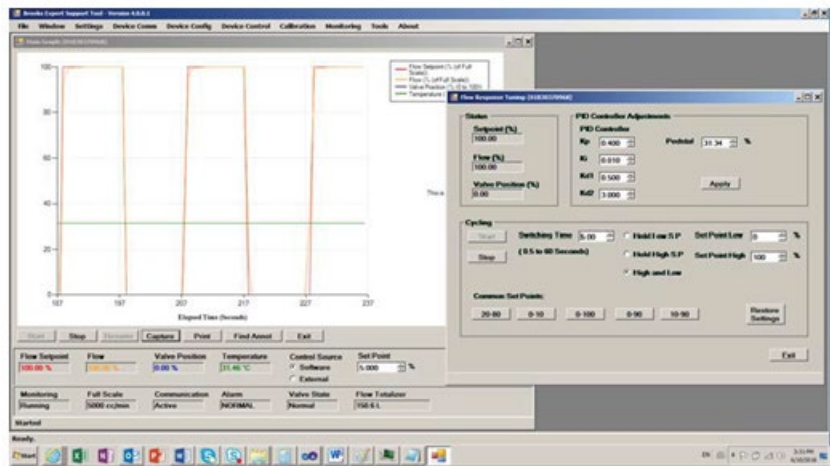


Figure 13-39 Flow Valve Tuning Operation

**Effect of Kp and Ki Values on Flow Control:** The following screens show some examples of what the flow graph looks like when Kp and Ki values are too high or too low.

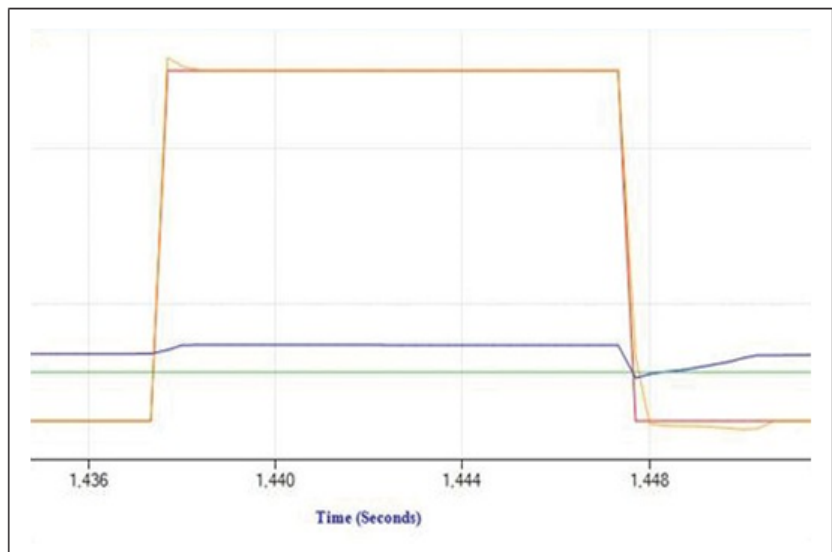


Figure 13-40 Valve Tuning, Kp Value Is Too High, or Ki Is Too Low

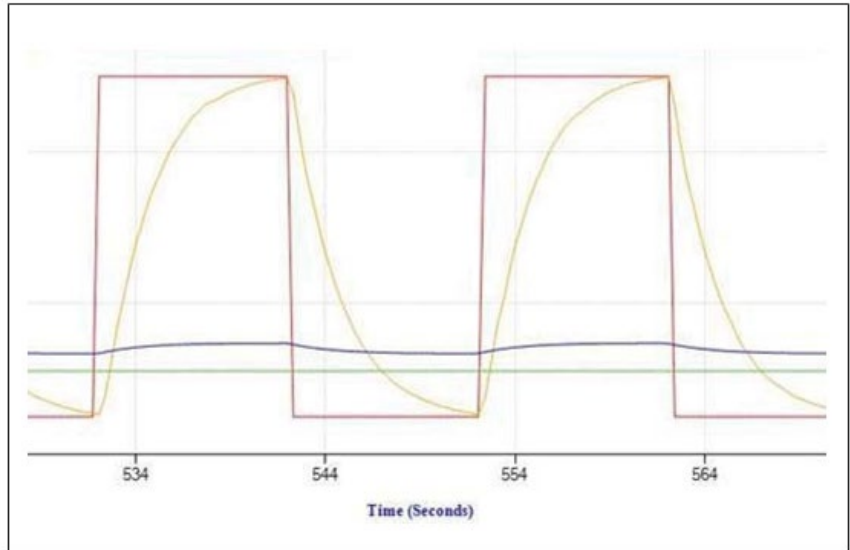


Figure 13-41 Valve Tuning, Kp and Ki Values Too Low

Start with the original PID settings. Note that these may vary per device.

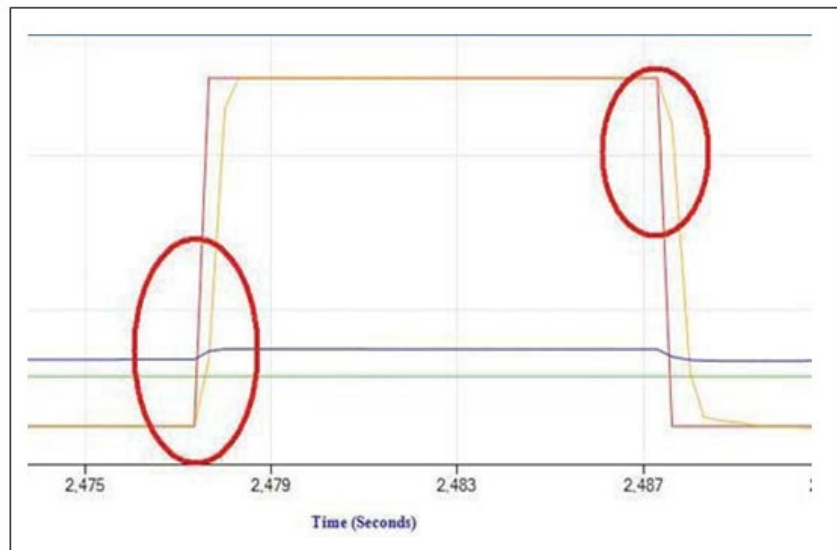


Figure 13-42 Original PID Settings

Increase the Kp value, the slope of the red circled part will slightly increase.

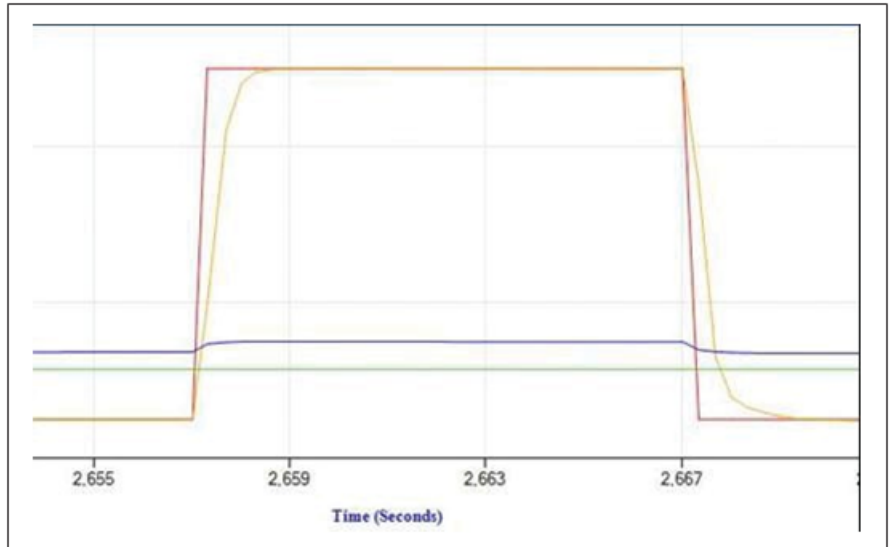


Figure 13-43 Valve Tuning, Increase Kp Value

Increase the Ki value, to move the flow curve towards the set point curve. This change will be the most visible but might lead to overshoot and undershoot.

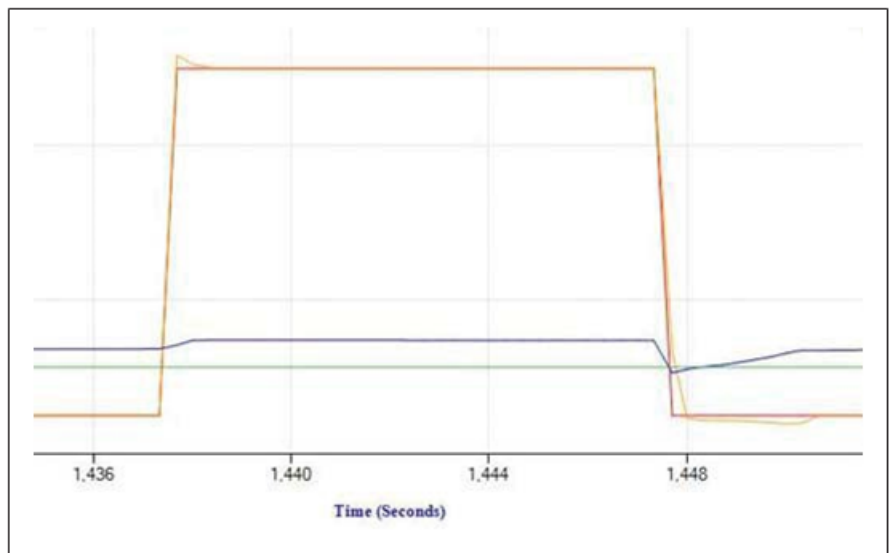


Figure 13-44 Valve Tuning, Overshoot



Figure 13-45 Valve Tuning, Overshoot

**\*NOTE:** If you need a higher data sample rate (resolution), change the graph options to show fewer parameters (see [Section 7.1](#)). Uncheck the **Auto Show Default Parameters** check box and select only the parameters you need to view. Unchecking the Valve Position parameter can yield significant increases in sample rate

### 13.13.2 Response Tuning (Pressure)

Pressure response tuning optimizes the dynamic performance of the pressure controller device to changes in set point. You can use this feature to eliminate undesired undershoot and overshoot.

The proportional and integral gain settings control the rate at which the valve responds to changes in setpoint. You can adjust these values to tune the valve's response. The optimal proportional and integral gain settings depend on the volume of the pressure vessel and the full-scale flow rate.

To tune the device's response, you will set up a square wave for the set point. You will then make adjustments to tuning parameters to make the actual pressure graph match the set point's square wave.

To tune the valve response:

1. Make sure the trending graph can display the range of setpoints between which you want to cycle. For more information about setting the maximum and minimum range displayed on the trend graph, refer to [Section 7.1](#).
2. Open the main graph and start monitoring.
3. If the device is an RT device, make sure it is in the pressure control mode (Device Control->RT Control Mode menu).
4. Open the Calibration->Valve Tuning menu.

The Valve Tuning (Pressure) window opens.

Figure 13-46 Pressure Valve Tuning Setup Window (SLA Rev A)

5. Initially, set Proportional Gain to 5 and Integral Gain to 0.2.
6. In the Cycling panel, set the cycling conditions you want to use:
7. Enter the high setpoint value for your process conditions.
8. Enter the low setpoint value for your process conditions.
9. Enter the switching time – enter enough time for the pressure to stabilize after the set point changes.

## Brooks® Expert Support Tool

- **NOTE:** The cycle time required to reach stable flow is highly dependent upon the volume of the pressure vessel and the maximum flow.
10. Select the **High and Low** option to have the cycling continue until you manually stop it.
  11. When you have completed entering the cycling conditions, click the **Start** button to start the cycling process.
  12. Observe the mass flow and valve drive graph to see how well the valve is responding to the changes in the setpoint.
    - In general, flow response should be as fast as possible with minimum overshoot (less than 5%).
  13. If the valve response needs tuning, change the Proportional Gain and Integral Gain values until the valve response is satisfactory.

When adjusting the Proportional (Kp) and Integral Gain (I) values in the Tune Response Form window, observe the following guidelines:

- Increasing the proportional gain value and/or decreasing the integral gain value speeds up the response time. Conversely, decreasing the proportional gain value and/or increasing the integral gain value slows the response time.
- To achieve the desired flow response, first adjust the Proportional Gain value in 0.1 increments, and then adjust the Integral Gain value in 0.05 increments.

**\*NOTE:** If you need a higher data sample rate (resolution), change the graph options to show fewer parameters (see **Section 7.1**). Uncheck the **Auto Show Default Parameters** check box and select only the parameters you need to view. Unchecking the Valve Position parameter can yield significant increases in sample rate

### 13.14 Print Top Label

BEST software can be used to print a simple label used for the side of the device. This feature is supported by all device types (including flow controllers and pressure controllers).

The label by default displays the device serial number, gas, range and range units of the current page of the device. However, the user may optionally substitute any text.

Some typical labels are:

1. Brady PN: THT-59-423-10 3" core 1x0.5 (1 label wide)
2. Brady PN: THT-59-533-2.5-SC 1" core 1x0.5 (3 labels wide)

A license is not required.



Figure 13-47 Top Label

Print Top Label: (E4375901001)

<b>Template Format</b> <input type="radio"/> GF with Customer Part# <input checked="" type="radio"/> GF with Orientation <input type="radio"/> Free Form	<b>Labels</b> <b>Column 1</b> Line 1 SN: E4375901001 Line 2 CO2 500 SCCM Line 3 HBD
<b>Print Setup</b> Printer Top Margin (in.) 0.00 Printer Left Margin (in.) 0.10 <b>Printer Orientation</b> <input type="radio"/> Landscape <input checked="" type="radio"/> Portrait	Save Cust PN Print Close <b>Label Printer</b> Brady BBP12

Figure 13-48 Print Top Label Window

## Brooks® Expert Support Tool

The user has up to three lines of test, the first two of which are populated with default text values from the device. The user may optionally type in any other text they choose, either on the blank line 3, or may overwrite existing text on lines 1 and 2.

For device label printing, a label printer is required. All printer models are supported – the user is responsible for installing the printer manufacturer's drivers as needed. Label printing uses any printer – the user is responsible for installing the standard Windows driver for the printer. The user may adjust the margins and landscape/portrait values.

When the user clicks Print, a print preview window appears and the user may select a printer.

## Chapter 14 Viewing and Setting the Device Configuration (SLA Rev A)

This chapter describes how to view and set device configuration parameters for the SLA Rev A device. (For the equivalent device configuration parameters for the Quantim device, see [Chapter 15](#)). These settings are accessible in the windows of the Device Config->Config Parameters menu.

Some control parameters can be modified, indicated by their field having a white background. Others can only be viewed (and not modified) indicated by their field having a grey background.

NOTE: When modifying the values, always remember to click Write to save the values to the device permanently.

When each window is opened, it takes a one-time reading of the parameters. To take another reading, click Read Once. To continuously read the parameters (once per second), click Read Continuous.

The actual parameters accessible/visible may vary depending on the device type and options.

**\*NOTE:** Any changes you make to the device configuration parameters are saved permanently to the currently connected device. Prior to making changes to device configuration settings, it is recommended that you save the current settings. This will allow you to restore the device configuration to a known, working state (see [Section 11.1](#)).

### 14.1 Viewing the Control Response Parameters

Some response parameters on the Control:Response - Flow tab are settable here. However, it is recommended that you adjust the proportional and integral gain values via the Response Tuning window – (refer to [Section 13.13](#)).


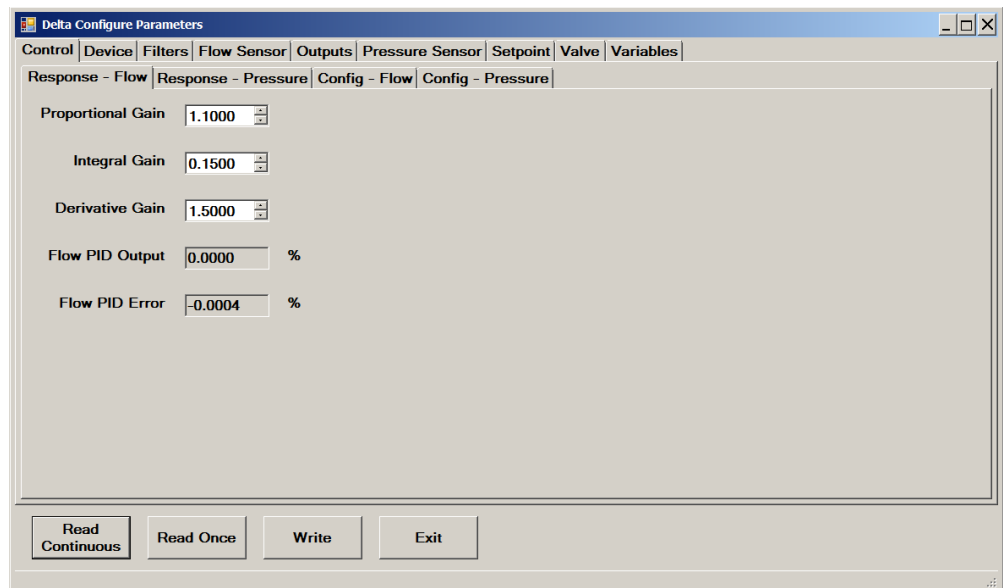


Figure 14-1 Control->Response - Flow


Some response parameters on the Control:Response - Pressure tab are settable here. However, it is recommended that you adjust the proportional and integral gain values via the Response Tuning window – (refer to [Section 13.13](#)).

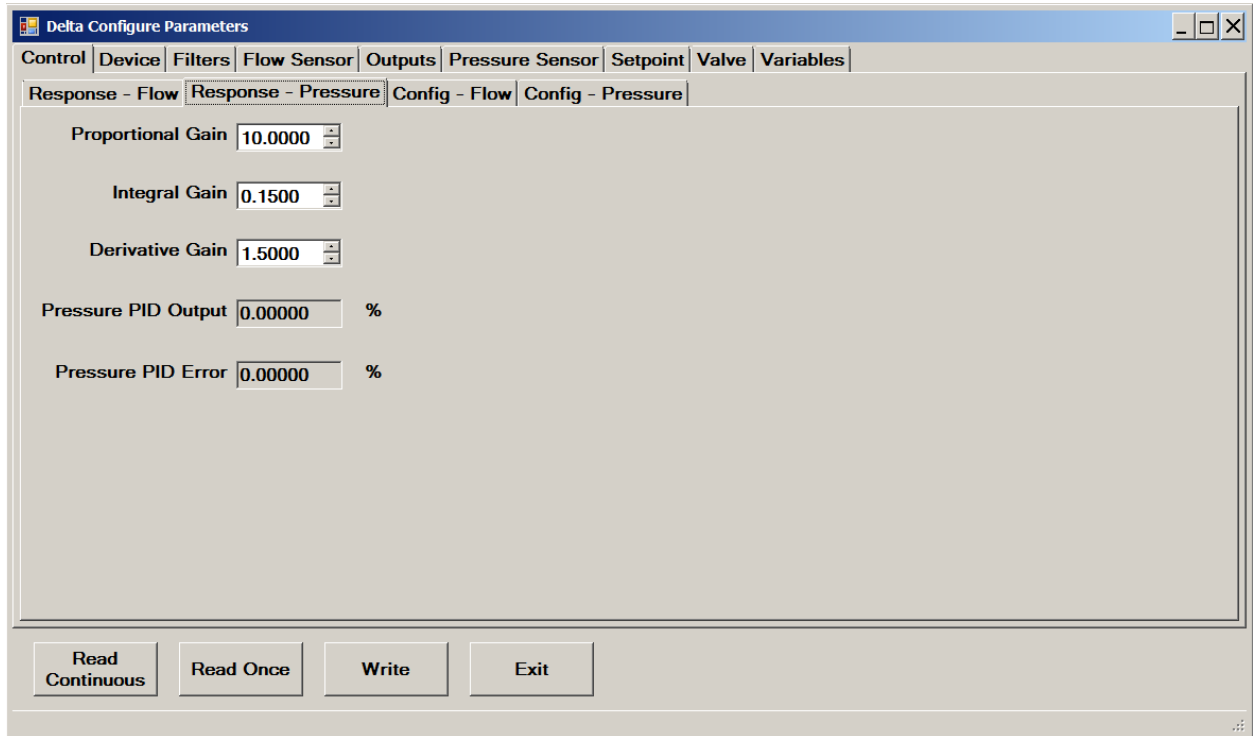

The screenshot shows the 'Delta Configure Parameters' window with the 'Response - Pressure' tab selected. The window has a menu bar with 'Control', 'Device', 'Filters', 'Flow Sensor', 'Outputs', 'Pressure Sensor', 'Setpoint', 'Valve', and 'Variables'. Below the menu bar are four sub-tabs: 'Response - Flow', 'Response - Pressure' (active), 'Config - Flow', and 'Config - Pressure'. The main area contains five input fields: 'Proportional Gain' (10.0000), 'Integral Gain' (0.1500), 'Derivative Gain' (1.5000), 'Pressure PID Output' (0.00000 %), and 'Pressure PID Error' (0.00000 %). At the bottom are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Proportional Gain	10.0000	
Integral Gain	0.1500	
Derivative Gain	1.5000	
Pressure PID Output	0.00000	%
Pressure PID Error	0.00000	%

Figure 14-2 Control-&gt;Response - Pressure

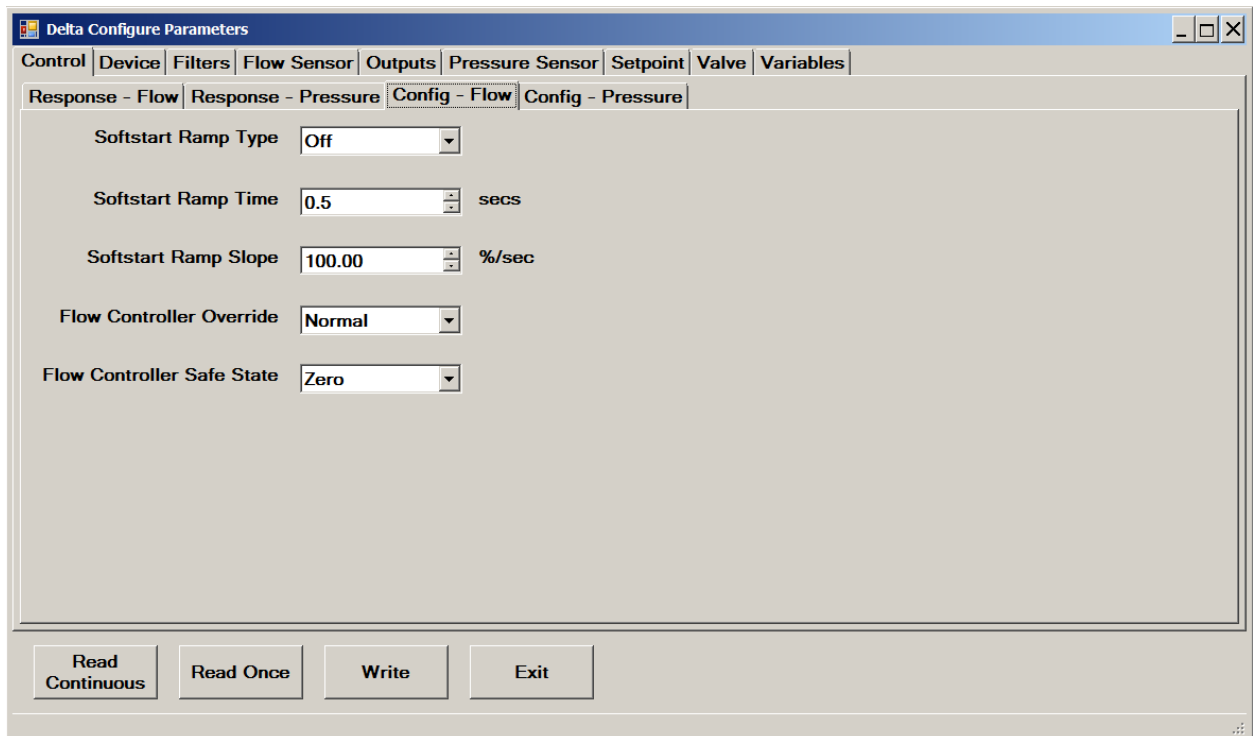

The screenshot shows the 'Delta Configure Parameters' window with the 'Config - Flow' tab selected. The window has the same menu bar as Figure 14-2. Below the menu bar are four sub-tabs: 'Response - Flow', 'Response - Pressure', 'Config - Flow' (active), and 'Config - Pressure'. The main area contains five input fields: 'Softstart Ramp Type' (Off), 'Softstart Ramp Time' (0.5 secs), 'Softstart Ramp Slope' (100.00 %/sec), 'Flow Controller Override' (Normal), and 'Flow Controller Safe State' (Zero). At the bottom are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Softstart Ramp Type	Off	
Softstart Ramp Time	0.5	secs
Softstart Ramp Slope	100.00	%/sec
Flow Controller Override	Normal	
Flow Controller Safe State	Zero	

Figure 14-3 Control-&gt;Config-Flow

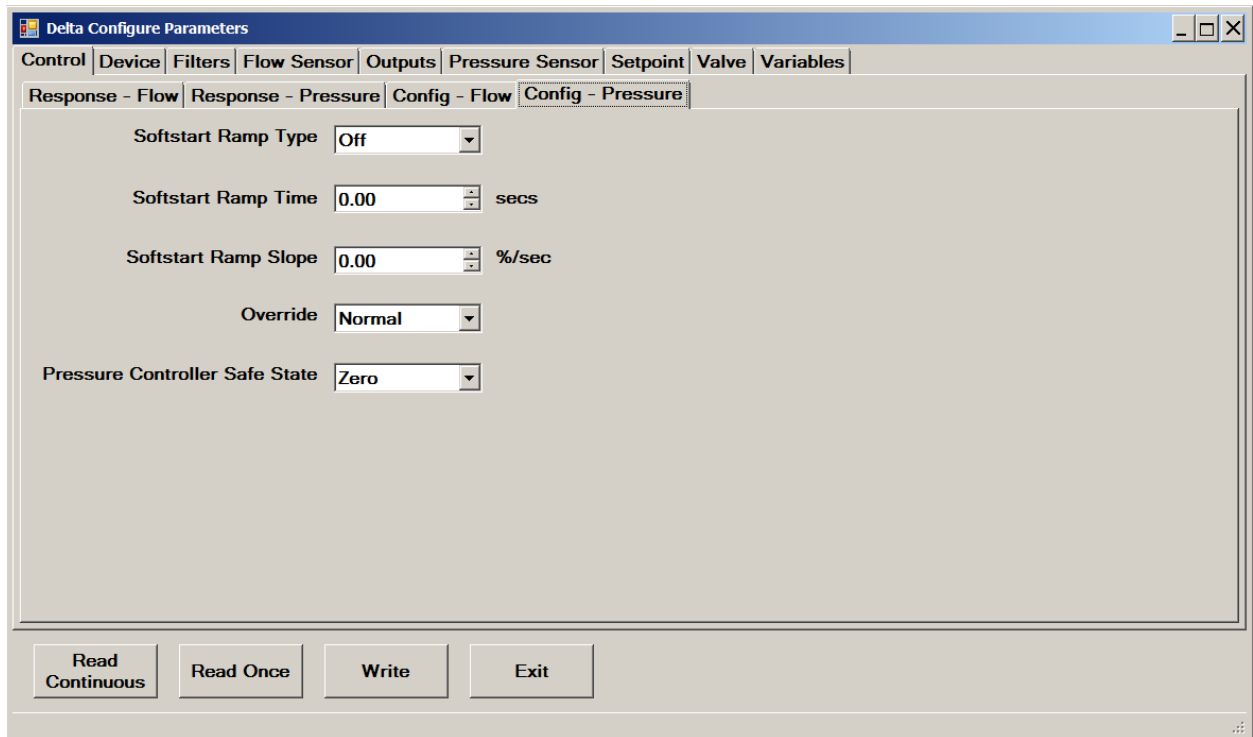


Figure 14-4 Control-&gt;Config-Pressure

The Softstart Ramp parameters allow you to configure the ramp behavior during a soft start of the device.

**To configure the softstart ramp behavior**, set the Softstart Ramp options as described below:

- **Type.** Choose one of the following:
  - **Off.** Device will transition to new setpoint as quickly as possible.
  - **Ramp Time.** Device will transition to a new setpoint in the number of seconds specified in the **Time** field.
- **Slope.** Device will transition to a new setpoint at the rate specified in the **Slope** field.
- **Time.** Ramp time, in seconds.
- **Slope.** Ramp rate, in percent/sec.

An additional parameter, **Setpoint Low Signal Cutoff**, may appear, which specifies the setpoint value below which the analog setpoint input is considered to be zero.

## 14.2 Viewing Device Information

Selected device information is shown here. The device information parameters are read-only, except for serial number which is editable with a license.

The screenshot shows the 'Delta Configure Parameters' window with the 'Device' tab selected. The 'Device Info' sub-tab is active, displaying the following fields:

Parameter	Value
Software Revision	AM
Hardware Revision	4
Model Number	SLA7840D1EGG1A2A1K4UHCA
Serial Number	0108060368146001

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-5 Device->Device Info

The screenshot shows the 'Delta Configure Parameters' window with the 'Device' tab selected. The 'Misc Configuration' sub-tab is active, displaying the following fields:

Parameter	Value
Device Type	RT
PC/RT Controller Mode	Flow
Non-Volatile Memory Update	Enable
Watchdog Disable	Enable
Critical Fault Watchdog Action	DoNotTimeout
Flow Calibration#	1
Pressure Application#	1
Analog RT Mode Select Enable	Disable

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-6 Device->Misc Configuration

### 14.3 Viewing Filter Parameters

The screenshot shows the 'Delta Configure Parameters' window with the 'Filters' tab selected. The window has a menu bar with 'Control', 'Device', 'Filters', 'Flow Sensor', 'Outputs', 'Pressure Sensor', 'Setpoint', 'Valve', and 'Variables'. The 'Filters' tab contains the following parameters:

- Noise Filter Pole: 1.500
- Noise Filter Off Limit: 0.050
- Flow Signal Pole: 0.170
- Signal Filter: 0.150 secs
- Pre-Filter Zero: 1.130
- Pre-Filter Pole: 0.150

At the bottom of the window are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-7 Filters

### 14.4 Viewing Flow Sensor Parameters

The screenshot shows the 'Delta Configure Parameters' window with the 'Flow Sensor' tab selected. The 'Flow Calibration' sub-tab is active. The window has a menu bar with 'Control', 'Device', 'Filters', 'Flow Sensor', 'Outputs', 'Pressure Sensor', 'Setpoint', 'Valve', and 'Variables'. The 'Flow Calibration' sub-tab contains the following parameters:

- Selected Flow Calibration: 1
- Linearization A0 Coeff.: -0.00007
- Gas Standard Number (Process): 13
- Calibration Full Scale Value: 2000.000 cc/min
- Gas Standard Number (Cal): 13
- Calibration Scaling Factor: 1.721
- Gas Correction Method: Empirical
- Flow Sensor Gain: 8
- Linearization A4 Coeff.: 0.38764
- Sensor Invert Enable: Disable
- Linearization A3 Coeff.: 0.18525
- Last Calibration Date: 12/31/2001
- Linearization A2 Coeff.: -0.22304
- Next Calibration Due Date: 12/31/2001
- Linearization A1 Coeff.: 1.94755
- Calibrator's Name: INIT

At the bottom of the window are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-8 Flow Sensor-&gt;Flow Calibration

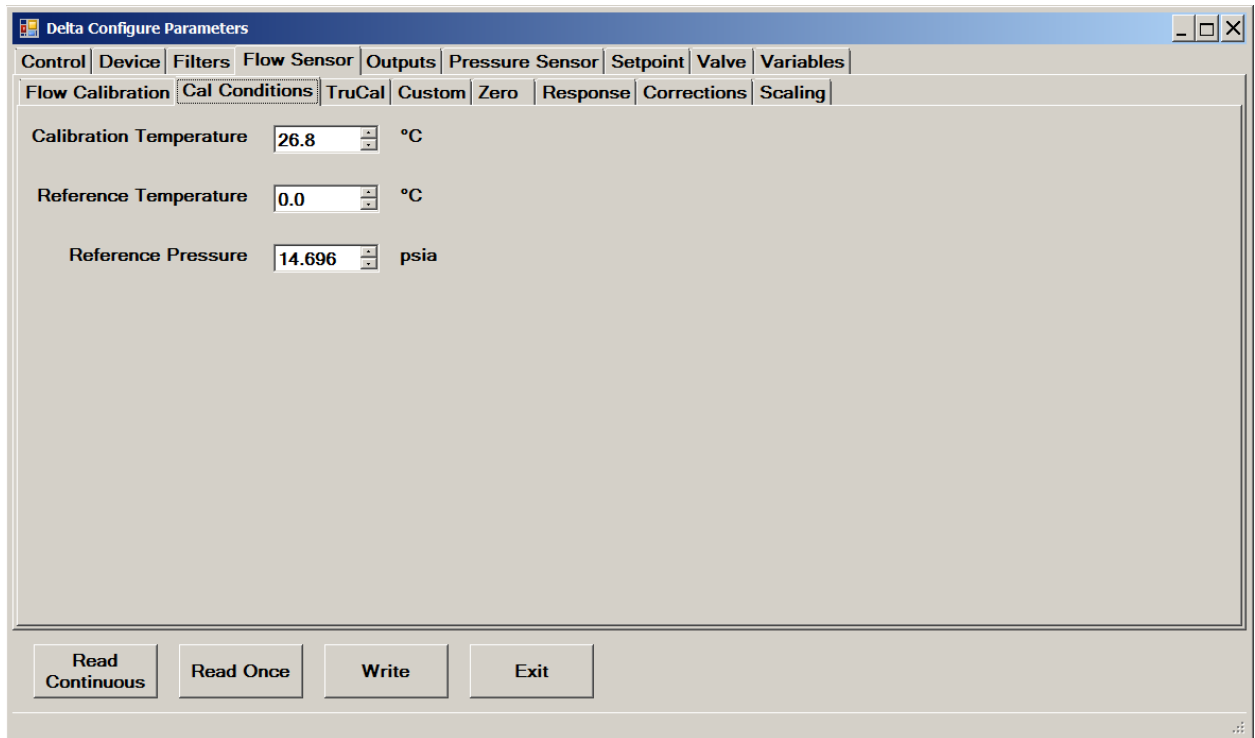


Figure 14-9 Flow Sensor-&gt;Cal Conditions


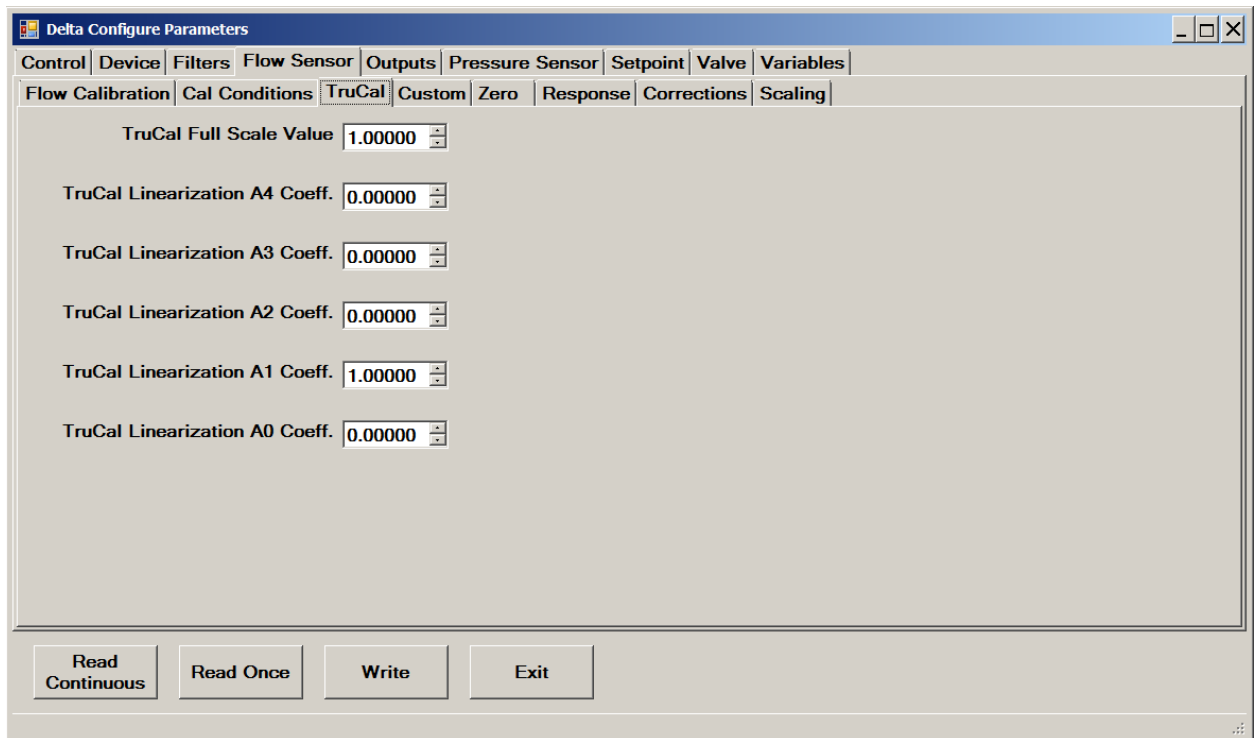



Figure 14-10 Flow Sensor-&gt;TruCal

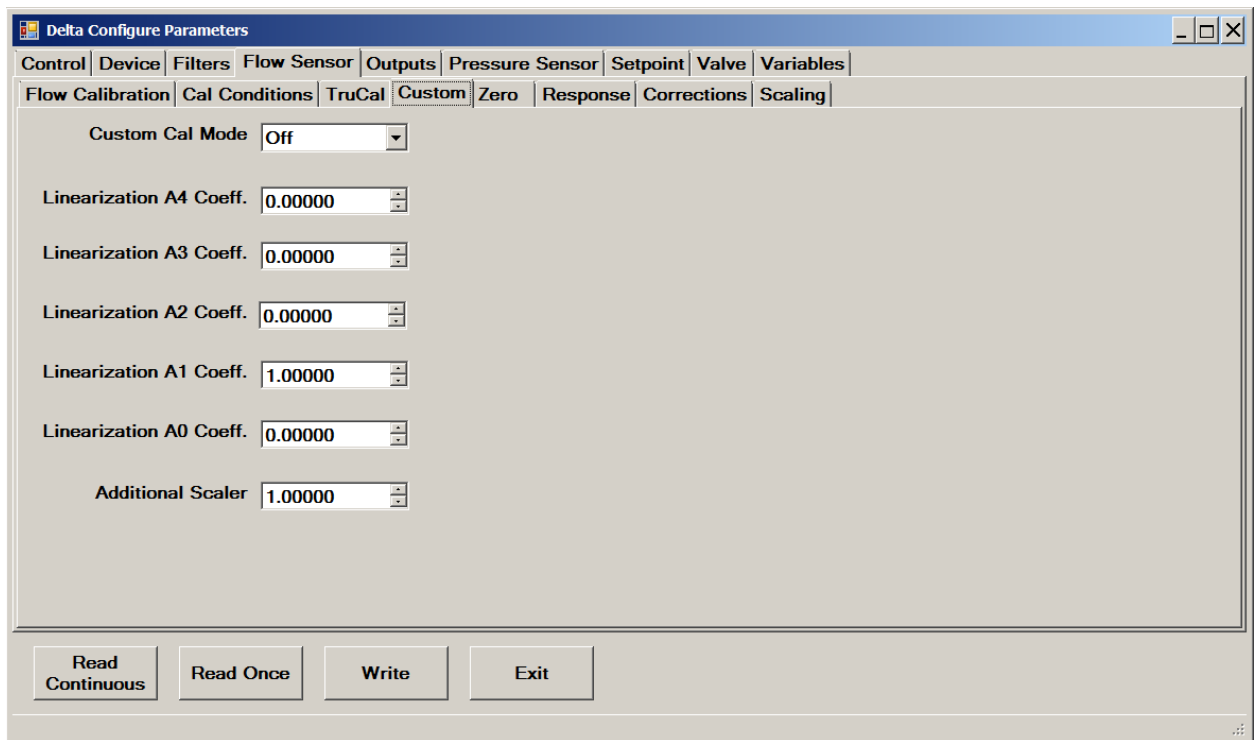

The screenshot shows the 'Delta Configure Parameters' window with the 'Custom' tab selected under the 'Flow Sensor' category. The 'Custom Cal Mode' is set to 'Off'. Below this, there are six linearization coefficient fields: A4, A3, A2, A1, and A0, all set to 0.00000 except for A1 which is 1.00000. An 'Additional Scaler' field is also present, set to 1.00000. At the bottom, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value
Custom Cal Mode	Off
Linearization A4 Coeff.	0.00000
Linearization A3 Coeff.	0.00000
Linearization A2 Coeff.	0.00000
Linearization A1 Coeff.	1.00000
Linearization A0 Coeff.	0.00000
Additional Scaler	1.00000


Figure 14-11 Flow Sensor-&gt;Custom

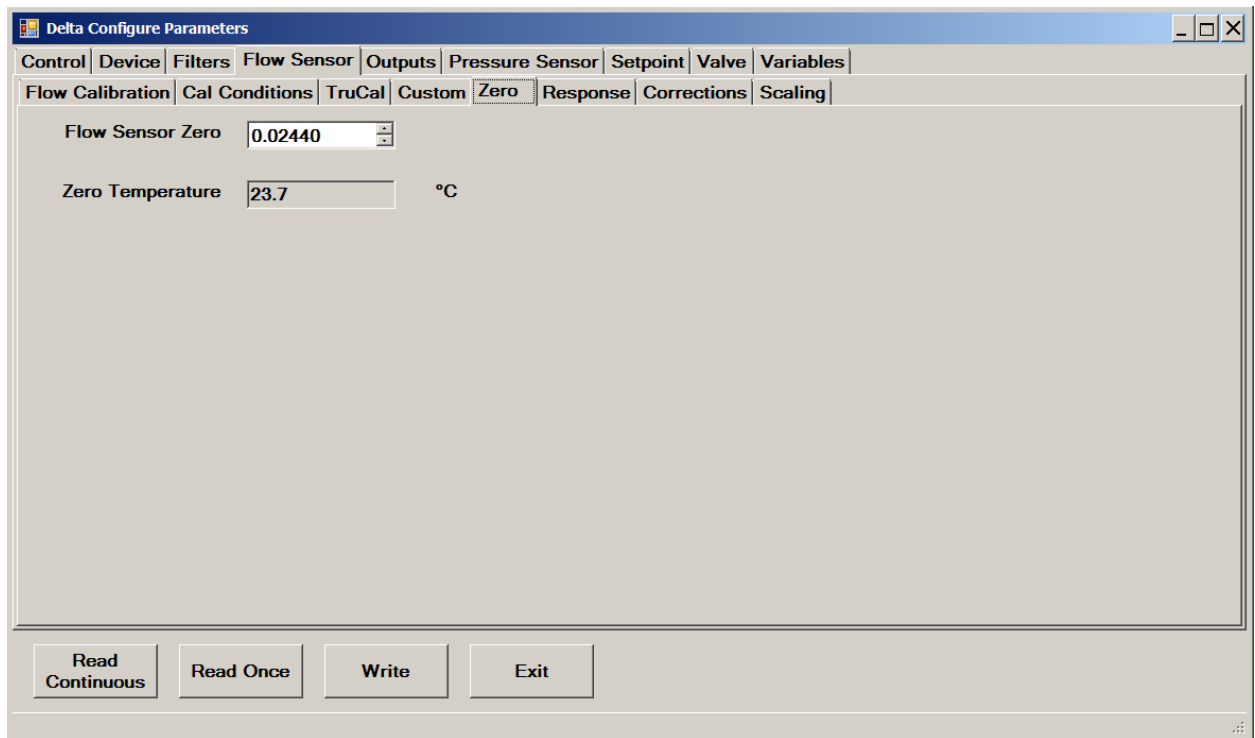

The screenshot shows the 'Delta Configure Parameters' window with the 'Zero' tab selected under the 'Flow Sensor' category. The 'Flow Sensor Zero' field is set to 0.02440. The 'Zero Temperature' field is set to 23.7 °C. At the bottom, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value
Flow Sensor Zero	0.02440
Zero Temperature	23.7 °C


Figure 14-12 Flow Sensor-&gt;Zero

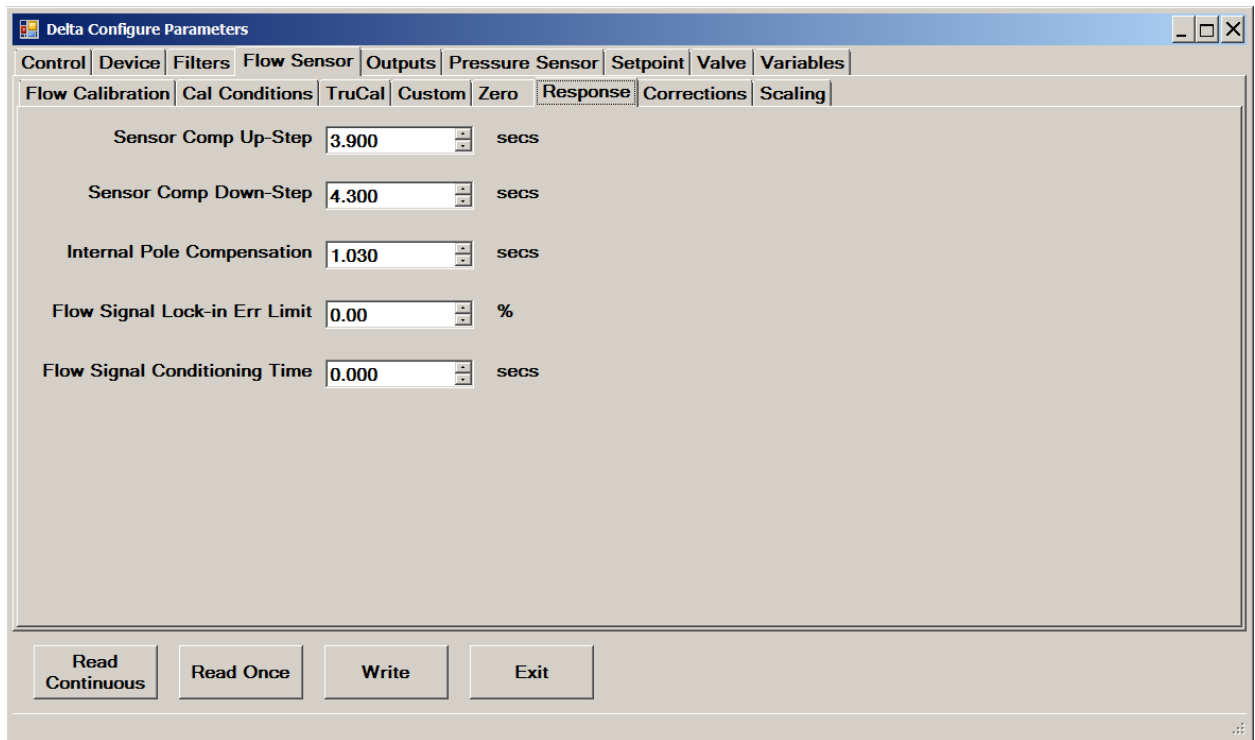

The screenshot shows the 'Delta Configure Parameters' window with the 'Response' tab selected. The window has a menu bar with 'Control', 'Device', 'Filters', 'Flow Sensor', 'Outputs', 'Pressure Sensor', 'Setpoint', 'Valve', and 'Variables'. Below the menu bar is a sub-menu bar with 'Flow Calibration', 'Cal Conditions', 'TruCal', 'Custom', 'Zero', 'Response', 'Corrections', and 'Scaling'. The main area contains five parameters, each with a numeric input field and a unit label: 'Sensor Comp Up-Step' (3.900 secs), 'Sensor Comp Down-Step' (4.300 secs), 'Internal Pole Compensation' (1.030 secs), 'Flow Signal Lock-in Err Limit' (0.00 %), and 'Flow Signal Conditioning Time' (0.000 secs). At the bottom are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Sensor Comp Up-Step	3.900	secs
Sensor Comp Down-Step	4.300	secs
Internal Pole Compensation	1.030	secs
Flow Signal Lock-in Err Limit	0.00	%
Flow Signal Conditioning Time	0.000	secs

Figure 14-13 Flow Sensor-&gt;Response

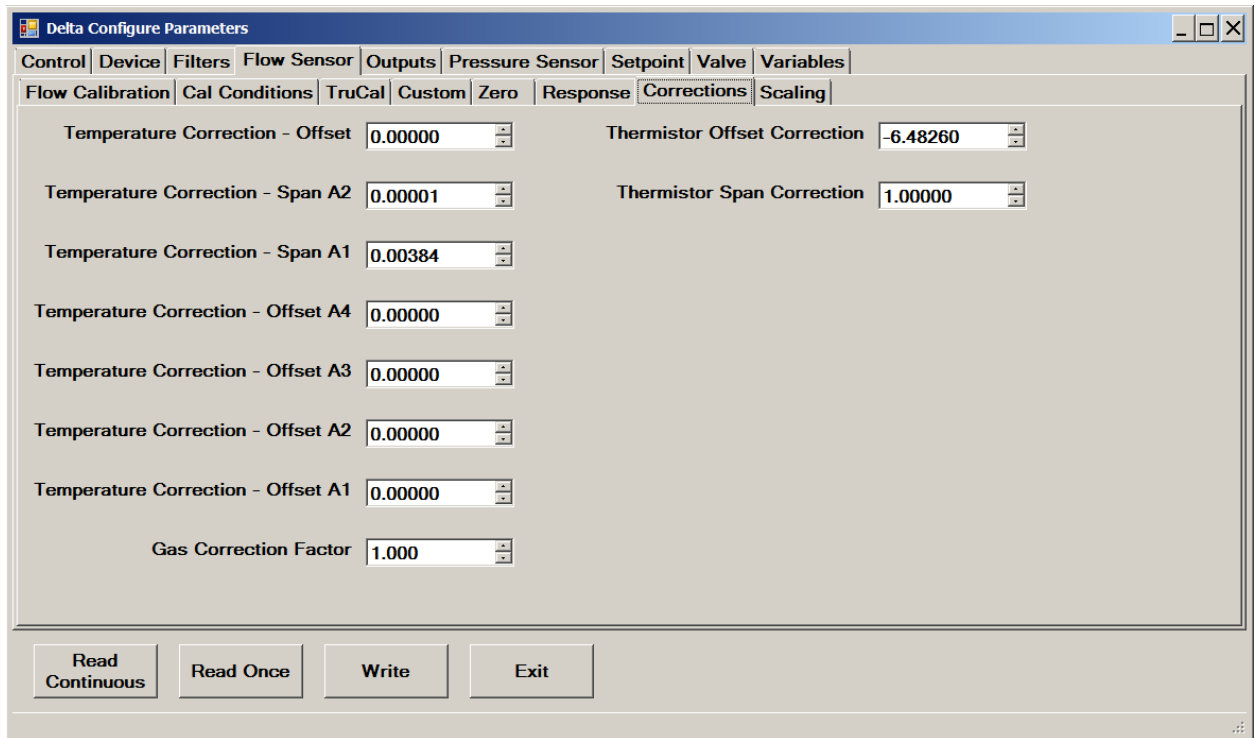

The screenshot shows the 'Delta Configure Parameters' window with the 'Corrections' tab selected. The window has the same menu bar and sub-menu bar as the previous figure. The main area contains several parameters, each with a numeric input field: 'Temperature Correction - Offset' (0.00000), 'Temperature Correction - Span A2' (0.00001), 'Temperature Correction - Span A1' (0.00384), 'Temperature Correction - Offset A4' (0.00000), 'Temperature Correction - Offset A3' (0.00000), 'Temperature Correction - Offset A2' (0.00000), 'Temperature Correction - Offset A1' (0.00000), 'Thermistor Offset Correction' (-6.48260), 'Thermistor Span Correction' (1.00000), and 'Gas Correction Factor' (1.000). At the bottom are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value
Temperature Correction - Offset	0.00000
Temperature Correction - Span A2	0.00001
Temperature Correction - Span A1	0.00384
Temperature Correction - Offset A4	0.00000
Temperature Correction - Offset A3	0.00000
Temperature Correction - Offset A2	0.00000
Temperature Correction - Offset A1	0.00000
Thermistor Offset Correction	-6.48260
Thermistor Span Correction	1.00000
Gas Correction Factor	1.000

Figure 14-14 Flow Sensor-&gt;Corrections

The screenshot shows the 'Delta Configure Parameters' window with the 'Flow Sensor' tab selected. The 'Scaling' sub-tab is active, displaying configuration parameters for flow measurement. The parameters are as follows:

Parameter	Value	Unit
Gas Density	1.251	kg/m <sup>3</sup>
User Full Scale Value	2000.000	cc/min
Volume Units for Full Scale Flow	cc	
Full Scale Flow Time Base	min	

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-15 Flow Sensor-&gt;Scaling

## 14.5 Setting the Output Signal Behavior

You can set the behavior of the output signal.

The screenshot shows the 'Delta Configure Parameters' dialog box with the 'Outputs' tab selected. The dialog has a tabbed interface with tabs for Control, Device, Filters, Flow Sensor, Outputs, Pressure Sensor, Setpoint, Valve, and Variables. The 'Outputs' tab contains the following settings:

- Analog Output Mode:** Tracking (dropdown menu)
- Flow Output Safe State:** Zero (dropdown menu)
- Flow Output Safe Value:** 0.000 (numeric input field)
- Pressure Output Safe State:** Zero (dropdown menu)
- Pressure Output Safe Value:** 0.000 (numeric input field)
- Analog Output Zero Cal:** 0.00000 (numeric input field)
- Analog Output Full-Scale Cal:** 0.50000 (numeric input field)

At the bottom of the dialog are four buttons: Read Continuous, Read Once, Write, and Exit.

Figure 14-16 Outputs

The **Analog Output Mode** setting determines the output signal behavior. The choices are:

- **Downscale.** Output will go to 0V.
- **Hold.** Output will remain at the value in effect when changed to Hold mode.
- **Manual.** For Brooks internal use only.
- **Tracking.** Output will continue to report the value of the measured process variable.
- **Upscale.** Output will go to 5.5 V.

The **Signal Filter** field allows you to dampen the output signal change relative to changes in flow by specifying the transition time, in seconds.

## 14.6 Viewing and Setting Pressure Sensor Parameters

For devices with a pressure sensor, you can view the pressure sensor parameters:

The screenshot shows the 'Delta Configure Parameters' window with the 'Pressure Sensor' tab selected. The window contains several input fields for configuring pressure sensor parameters. The parameters are organized into two columns. The left column includes Linearization A4 Coeff., Linearization A3 Coeff., Linearization A2 Coeff., Linearization A1 Coeff., Linearization A0 Coeff., Remote Transducer Zero Corr, Pressure Sensor Zero, and Full Scale Pressure Value. The right column includes DeviceNet Units for FS Press, Pressure Sensor Gain, Last Calibration Date, Next Calibration Due Date, and Calibrator's Name. At the bottom of the window are four buttons: Read Continuous, Read Once, Write, and Exit.

Parameter	Value
Linearization A4 Coeff.	0.14944
Linearization A3 Coeff.	0.00189
Linearization A2 Coeff.	-0.00234
Linearization A1 Coeff.	1.08073
Linearization A0 Coeff.	-0.00006
Remote Transducer Zero Corr	0.03929
Pressure Sensor Zero	0.00000
Full Scale Pressure Value	1000.00000
DeviceNet Units for FS Press	5
Pressure Sensor Gain	2.000
Last Calibration Date	12/31/2001
Next Calibration Due Date	12/31/2001
Calibrator's Name	Init

Figure 14-17 Pressure Sensor

## 14.7 Viewing and Setting Setpoint Parameters

For devices with setpoint control, you can view the setpoint parameters:

The screenshot shows the 'Delta Configure Parameters' window with the 'Setpoint' tab selected. The window contains several input fields for configuring setpoint parameters. The parameters are organized into two columns. The left column includes Setpoint Low Signal Cutoff, Internal Flow Setpoint, Setpoint Source, Analog Input Zero Cal, and Analog Input Full-Scale Cal. The right column includes a percentage sign. At the bottom of the window are four buttons: Read Continuous, Read Once, Write, and Exit.

Parameter	Value
Setpoint Low Signal Cutoff	1.00 %
Internal Flow Setpoint	0.00 %
Setpoint Source	Digital
Analog Input Zero Cal	0.00000
Analog Input Full-Scale Cal	1.00000

Figure 14-18 Setpoint->Flow

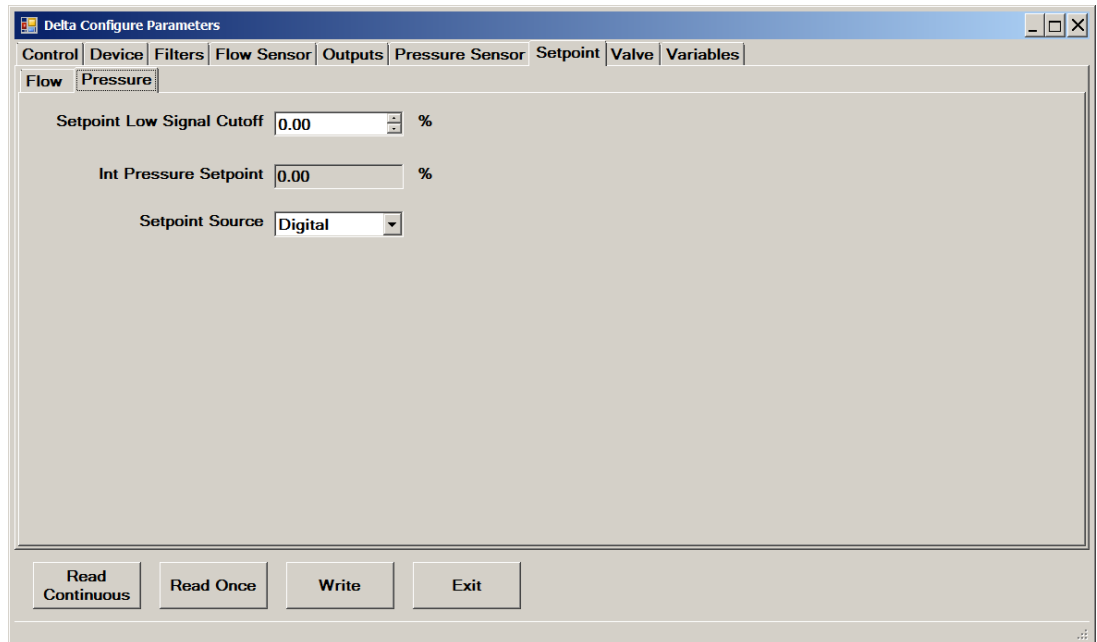


Figure 14-19 Setpoint-&gt;Pressure

## 14.8 Viewing and Setting Valve Parameters

You can view various valve adjust settings, and set parameters related to valve control.

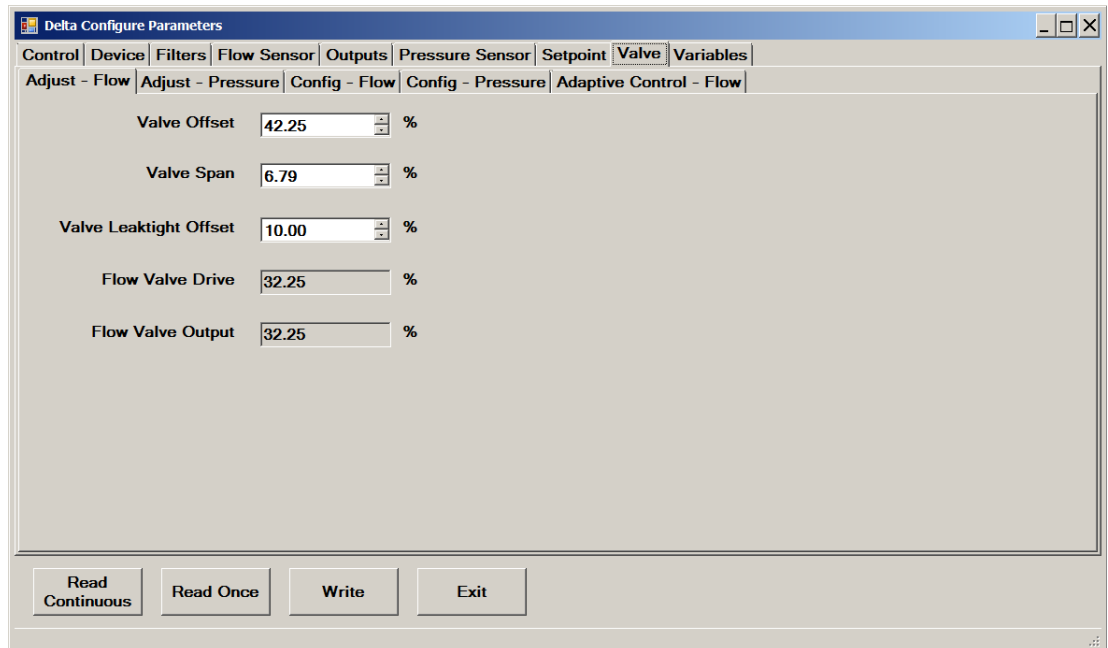


Figure 14-20 Valve-&gt; Adjust-Flow

The screenshot shows the 'Delta Configure Parameters' window with the 'Valve' tab selected. The 'Adjust - Pressure' sub-tab is active. The window contains several input fields for valve parameters:

- Valve Offset: 28.72 %
- Valve Span: 14.94 %
- Valve Leaktight Offset: 10.00 %
- Pressure Valve Drive: 0.00 %
- Pressure Valve Out: 0.00 %

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-21 Valve->Adjust-Pressure

The screenshot shows the 'Delta Configure Parameters' window with the 'Valve' tab selected. The 'Config - Flow' sub-tab is active. The window contains several input fields and a dropdown menu for valve configuration:

- Valve Type: NormallyClosed (dropdown menu)
- Hysteresis Reduction Time: 0.50 secs
- Valve Safe State: Closed (dropdown menu)
- Valve Safe Value: 0.00 %

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 14-22 Valve->Config-Flow

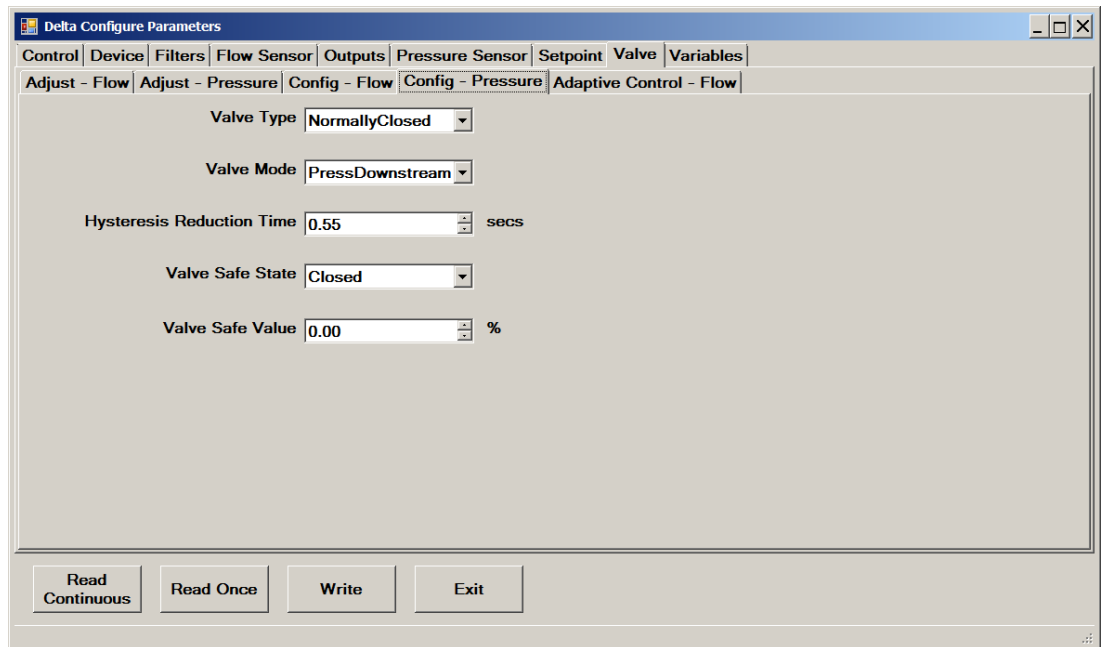


Figure 14-23 Valve-&gt;Config-Pressure

The Adaptive Valve Control function, when enabled, causes the device to dynamically adjust valve offset and span, or just offset, while the device is operating.

If process conditions change significantly (such as moderate shifts in inlet or outlet pressure) while Adaptive Control is enabled, valve offset and span will dynamically self-adjust for optimum valve performance under the new process condition without requiring operator intervention.

**NOTE:** When adaptive control is enabled, offset and/or span may change dynamically. However, these changes are not permanent, and the device returns to the stored offset and span after a power cycle or system reset.

The Valve:Adaptive Control tab includes the options that allow you to enable Adaptive Control and set its operating parameters.

Delta Configure Parameters

Control | Device | Filters | Flow Sensor | Outputs | Pressure Sensor | Setpoint | Valve | Variables

Adjust - Flow | Adjust - Pressure | Config - Flow | Config - Pressure | Adaptive Control - Flow

Adaptive Control Enable:

Actual Valve Span:  %

Adaptive Control Mode:

Adaptive Control TC:  secs

Minimum Valve Offset Limit:  %

Maximum Valve Offset Limit:  %

Minimum Valve Span Limit:  %

Maximum Valve Span Limit:  %

Actual Valve Offset:  %

Read Continuous | Read Once | Write | Exit

Figure 14-24 Valve-&gt;Adaptive Control - Flow

To enable Adaptive Control:

- Select **Enable** from the **Adaptive Control** drop-down list.
- Select the **Offset and Span** or **Offset Only** option from the **Adaptive Control Mode** drop-down list.
- In the **Adaptive Control TC** field, specify the time constant of the adaptive control algorithm. This time constant can be used to improve the performance of adaptive control. It is recommended that you use the default value.

## 14.9 Viewing Selected Live Measurement Parameters

You can view selected “live” measurement parameters.

The screenshot shows a software window titled "Delta Configure Parameters" with a tabbed interface. The "Variables" tab is selected, displaying a list of live measurement parameters. Each parameter has a text input field for its value and a unit indicator. At the bottom of the window, there are four buttons: "Read Continuous", "Read Once", "Write", and "Exit".

Parameter	Value	Unit
Flow	0.01	%
Raw Flow Sig	0.00063	
Int Flow Sig	0.00159	
Temperature	25.14	°C
Comp Temp	18.66	°C
Pressure	0.00	%

Figure 14-25 "Live" Variables

## Chapter 15 Viewing and Setting the Device Configuration (Quantim)

This chapter describes how to view and set device configuration parameters for the Quantim device. (For the equivalent device configuration parameters for the SLA Rev A device, see [Chapter 14](#)). These settings are accessible in the windows of the Device Config->Config Parameters menu.

Some control parameters can be modified, indicated by their field having a white background. Others can only be viewed (and not modified) indicated by their field having a grey background.

**NOTE:** When modifying the values, always remember to click Write to save the values to the device permanently.

When each window is opened, it takes a one-time reading of the parameters. To take another reading, click Read Once. To continuously read the parameters (once per second), click Read Continuous.

The actual parameters accessible/visible may vary depending on the device type and options.

**NOTE:** Any changes you make to the device configuration parameters are saved permanently to the currently connected device. Prior to making changes to device configuration settings, it is recommended that you save the current settings. This will allow you to restore the device configuration to a known, working state (see [Section 11.1](#)).

### 15.1 Setting Units of Measure

Change the units of measure for the main measurement parameters. (This applies only to Quantim devices).

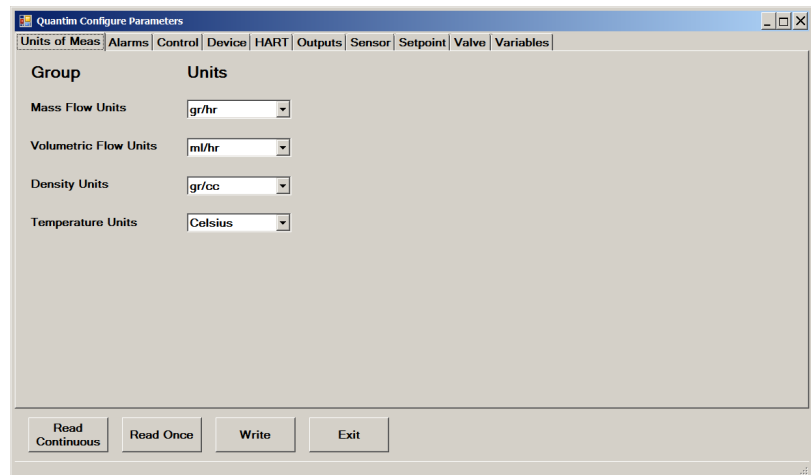


Figure 15-1 Units of Measure

## 15.2 Viewing and Setting Alarms

You can configure the device to report predefined alarm and warning conditions. The alarm and warning parameters are settable using the Service Tool. All alarm and warning conditions are reported to the Service Tool and indicated by green or red flashing codes on the device's Status and Alarm LEDs. You can also configure alarms and warnings to enable pin 3 of the device's D-connector.

The following topics provide detailed information about the Diagnostic alarm, which is configured by default, and the optional alarm/warning conditions that be configured.

## 15.3 Diagnostic Alarm

By default, BEST monitors the device's Diagnostic alarm status. This is the alarm signal that drives the Status and Alarm LEDs at the top of the device, and that is available to external devices at pin 3 of the device's D-connector.

The device continuously runs diagnostics. If the diagnostics detect a fatal error, the device goes to a safe state of operation and will not respond to the setpoint. Also, the Status LED turns a solid red and the Alarm LED flashes a red code 7 (7 flashes, followed by brief delay).

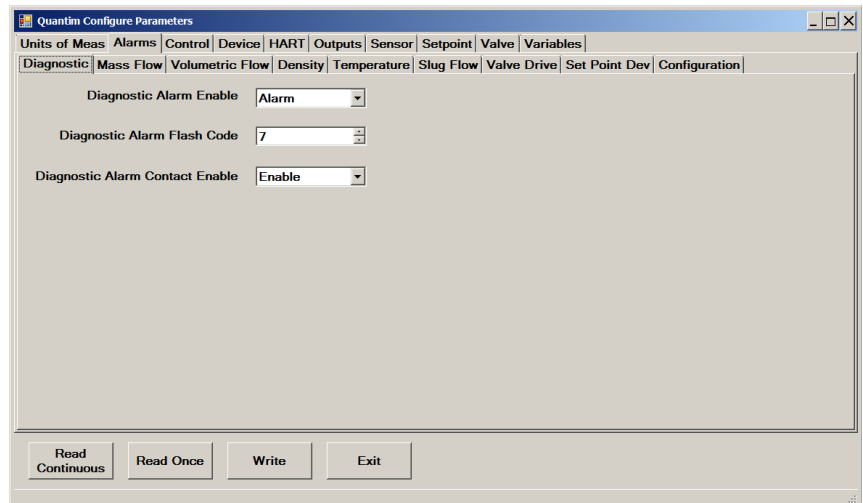


Figure 15-2 Alarms->Diagnostic

## 15.4 Configuring Optional Warnings and Alarms

In addition to the Diagnostic alarm, you can use BEST to configure the device to report warning and alarm conditions related to the following variables:

- Mass flow
- Volumetric flow
- Density
- Temperature
- Slug flow
- Valve drive
- Setpoint deviation

Each of these variables has a tab in the Alarms tab (the Density tab is shown below as an example – the other tabs show an identical format).

The screenshot shows the 'Quantim Configure Parameters' window with the 'Alarms' tab selected. The 'Density' sub-tab is active, displaying the following settings:

Parameter	Value	Unit
Density Alarm Enable	Disabled	
Density Alarm Flash Code	5	
Density Alarm Latching	Disable	
Density Alarm Contact Enable	Disable	
Density Alarm Low Limit	0.5000	gr/cc
Density Alarm High Limit	2.0000	gr/cc
Density Alarm Delay	0.0	secs

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-3 Typical Alarm Settings (Density Alarm Shown)

## 15.5 Modifying Standard Alarm Behavior

You can globally modify the behavior of alarms to automatically disable when one or both of the following conditions exist: setpoint is zero and valve override is active.

**Setpoint Zero Alarm Disable.** When this option is enabled, the alarms defined in **Table 15-1** below will not occur if the setpoint is zero. For example, if the Mass Flow Alarm is enabled and you do not want the alarm to occur while the setpoint is zero (flow is commanded to be zero), causing flow to be less than the lower limit, set the Setpoint Zero Alarm Disable option to On (enabled).

**Valve Override Alarm Disable.** When this option is enabled, the alarms defined in **Table 15-1** will not occur if the valve override is in the open or closed state. For example, if the Mass Flow Alarm is enabled and you do not want the alarm to occur while the valve override is set to open, causing flow to exceed the upper alarm limit, then set the Valve Override Alarm Disable option to On (enabled).

Table 15-1 Affected by Alarm Disable Options

Alarm	Setpoint Zero Alarm Disable	Valve Override Alarm Disable
Mass Flow	Yes	Yes
Volumetric Flow	Yes	Yes
Density	Yes	No
Temperature	No	No
Slug Flow	Yes	No
Valve Drive	Yes	Yes
Setpoint Deviation	Yes	Yes

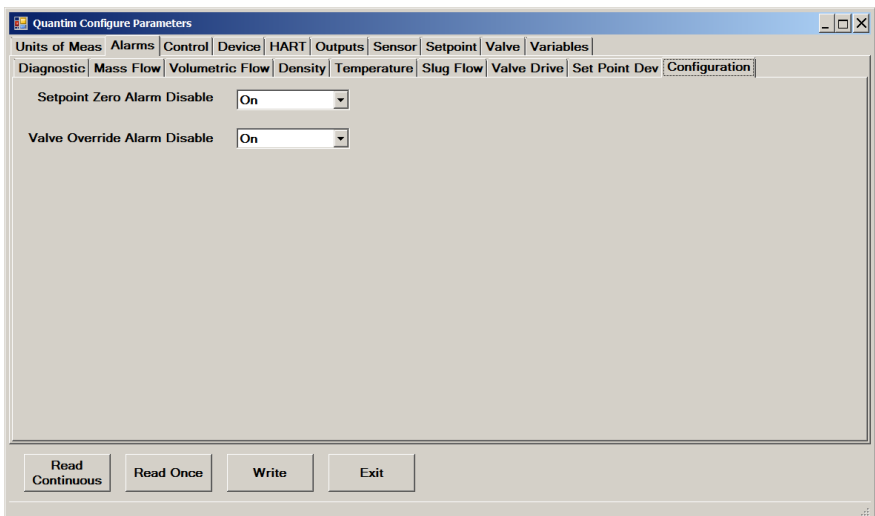


Figure 15-4 Alarms->Configuration (On = Enable, Off = Disable)

## 15.6 Viewing the Control Response Parameters

Some response parameters on the Control:Response - Pressure tab are settable here. However, it is recommended that you adjust the proportional and integral gain values via the Response Tuning window – (refer also to [Section 13.13](#)).

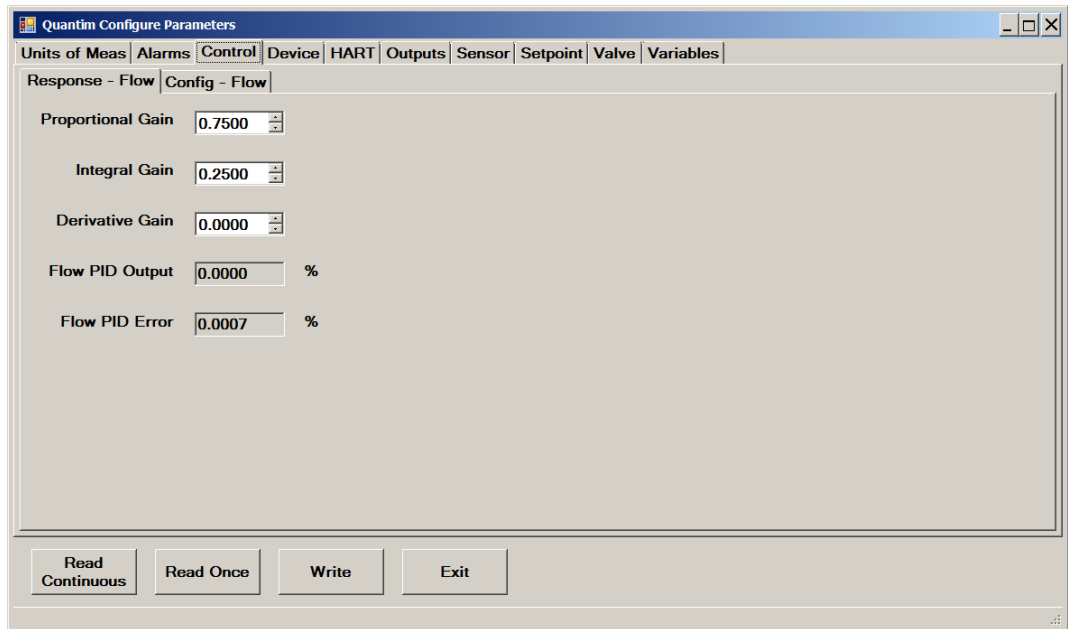


Figure 15-5 Control->Response-Flow

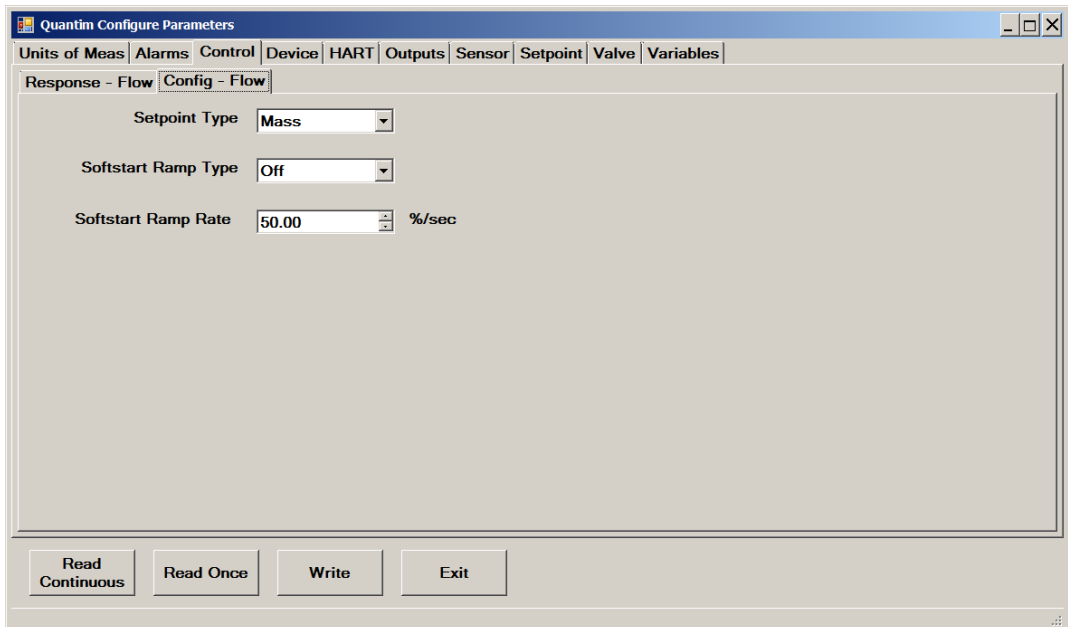


Figure 15-6 Control->Config-Flow

Note that if setpoint Type is changed, the primary output may need to be changed also (see also [Section 15.6](#)).

The Setpoint Type parameter is used to change the setpoint from mass to volume or volume to mass.


## Brooks® Expert Support Tool

The two Softstart Ramp parameters allow you to configure the ramp behavior during a soft start of the device.

To configure the softstart ramp behavior, select Ramp Rate from the Softstart Ramp Type drop-down list, then enter the ramp rate (in percent per second) in the Softstart Ramp Rate field.

### 15.7 Viewing Device Information

Selected device information is shown here. The device information parameters are read-only, except the serial number and sensor serial number, which are editable with a license.

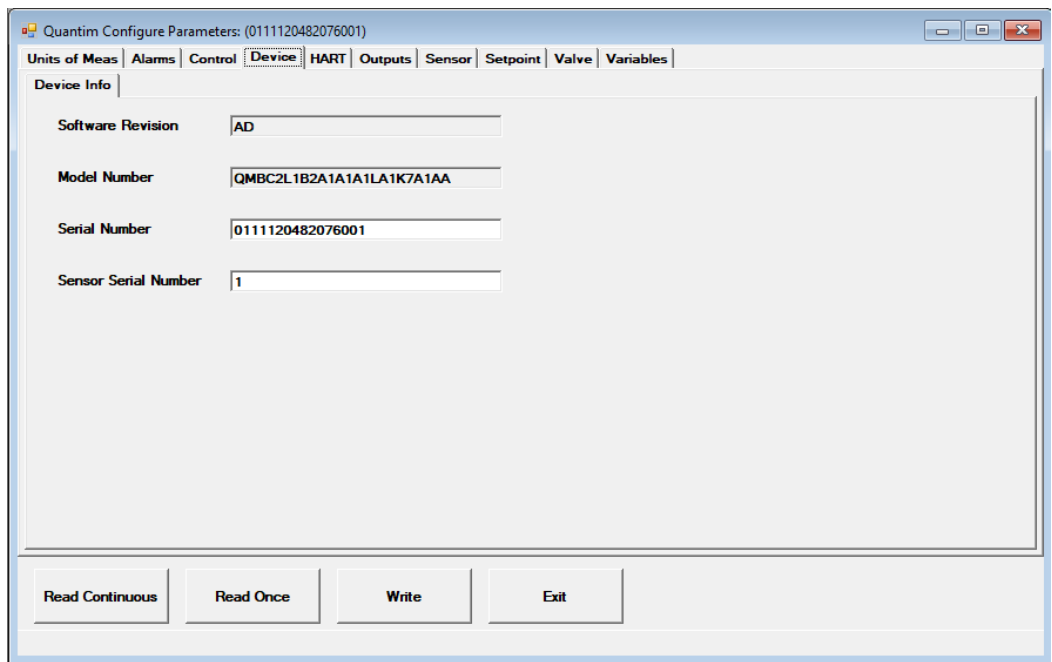

The screenshot shows a software window titled "Quantum Configure Parameters: (0111120482076001)". The window has a tabbed interface with the following tabs: Units of Meas, Alarms, Control, Device, HART, Outputs, Sensor, Setpoint, Valve, and Variables. The "Device" tab is currently selected, and within it, the "Device Info" sub-tab is active. The main area displays four fields for device information:


Parameter	Value
Software Revision	AD
Model Number	QMBC2L1B2A1A1A1LA1K7A1AA
Serial Number	0111120482076001
Sensor Serial Number	1

At the bottom of the window, there are four buttons: "Read Continuous", "Read Once", "Write", and "Exit".

Figure 15-7 Device->Device Info

## 15.8 Viewing HART Protocol Parameters

You can view and edit the current settings of the device's HART protocol parameters.

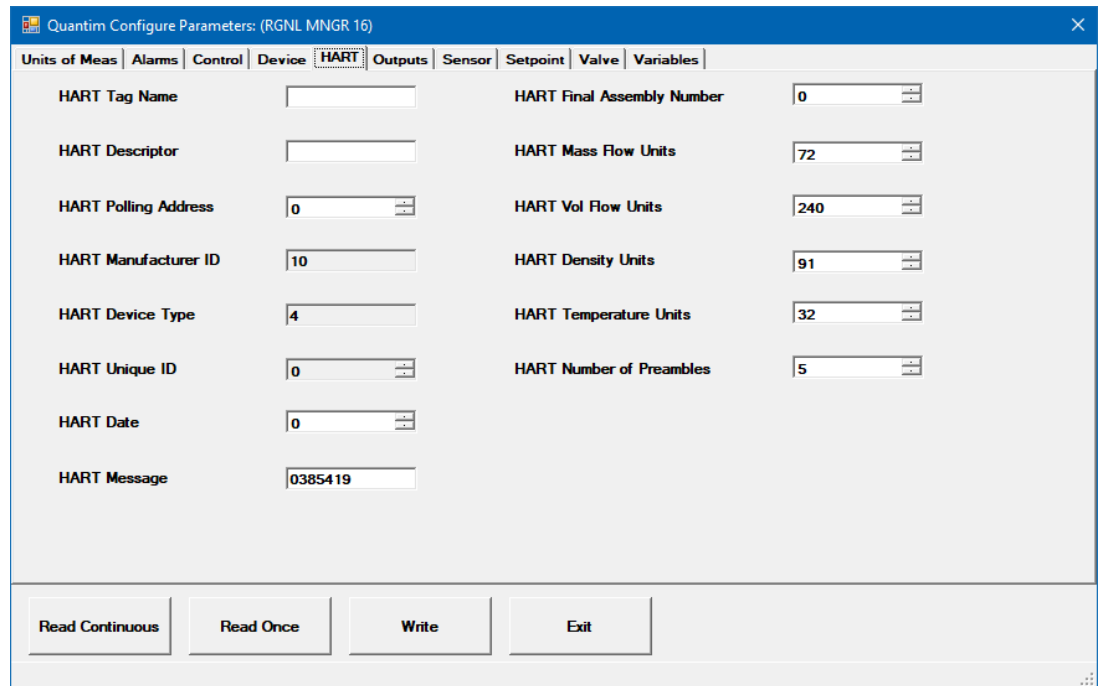

The image shows a screenshot of the 'Quantim Configure Parameters: (RGNL MNGR 16)' window, specifically the 'HART' tab. The window has a blue title bar and a tabbed interface with the following tabs: Units of Meas, Alarms, Control, Device, HART (selected), Outputs, Sensor, Setpoint, Valve, and Variables. The HART tab contains a list of parameters with their current values displayed in text boxes. At the bottom of the window, there are four buttons: Read Continuous, Read Once, Write, and Exit.

Parameter	Value
HART Tag Name	
HART Descriptor	
HART Polling Address	0
HART Manufacturer ID	10
HART Device Type	4
HART Unique ID	0
HART Date	0
HART Message	0385419
HART Final Assembly Number	0
HART Mass Flow Units	72
HART Vol Flow Units	240
HART Density Units	91
HART Temperature Units	32
HART Number of Preambles	5

Figure 15-8 HART Protocol

## 15.9 Viewing and Setting Primary and Secondary Output Parameters

You can view and edit the current settings of the primary and secondary output parameters from the Configuration Parameters window. You can also modify the output data assignment, the output configuration (voltage or current).

The screenshot shows the 'Quantim Configure Parameters' window with the 'Outputs' tab selected. The 'Primary Output' sub-tab is active. The settings are as follows:

Parameter	Value
Output Source	MassFlow
Analog Output Config	4to20mA
Analog Output Mode	Tracking
Out Alarm Behavior	Track
Out Zero Cal (Volts)	0.00000
Out Full Scale (Volts)	0.80506
Out Zero (mAmps)	0.16065
Out Full Scale (mAmps)	0.80410

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-9 Outputs->Primary Output

The screenshot shows the 'Quantim Configure Parameters' window with the 'Outputs' tab selected. The 'Secondary Output' sub-tab is active. The settings are as follows:

Parameter	Value
Output Source	MassFlow
Analog Output Config	4to20mA
Analog Output Mode	Tracking
Out Alarm Behavior	Track
Out Zero Cal	-0.02912
Out Full Scale	0.65250

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-10 Outputs->Secondary Output

## Brooks® Expert Support Tool


You can modify the following settings:

- **Out Source.** Specifies the output data assignment.  
The Primary Out Source must match the Setpoint Type assignment (see **Figure 15-6**). If you are changing from mass to volume or volume to mass this field must be changed.
- **Analog Output Config.** Specifies the type of analog output—voltage or current.
- **Out Alarm Behavior.** Specifies the behavior of the output during an alarm condition.

The Output Alarm Behavior choices are:

- **Downscale.** Output will go to minimum.
- **Hold.** Output will remain at the value in effect when the alarm condition was detected.
- **Track.** Output will continue to report the value of the measured process variable.
- **Upscale.** Output will go to maximum.

## 15.10 Viewing Sensor Parameters

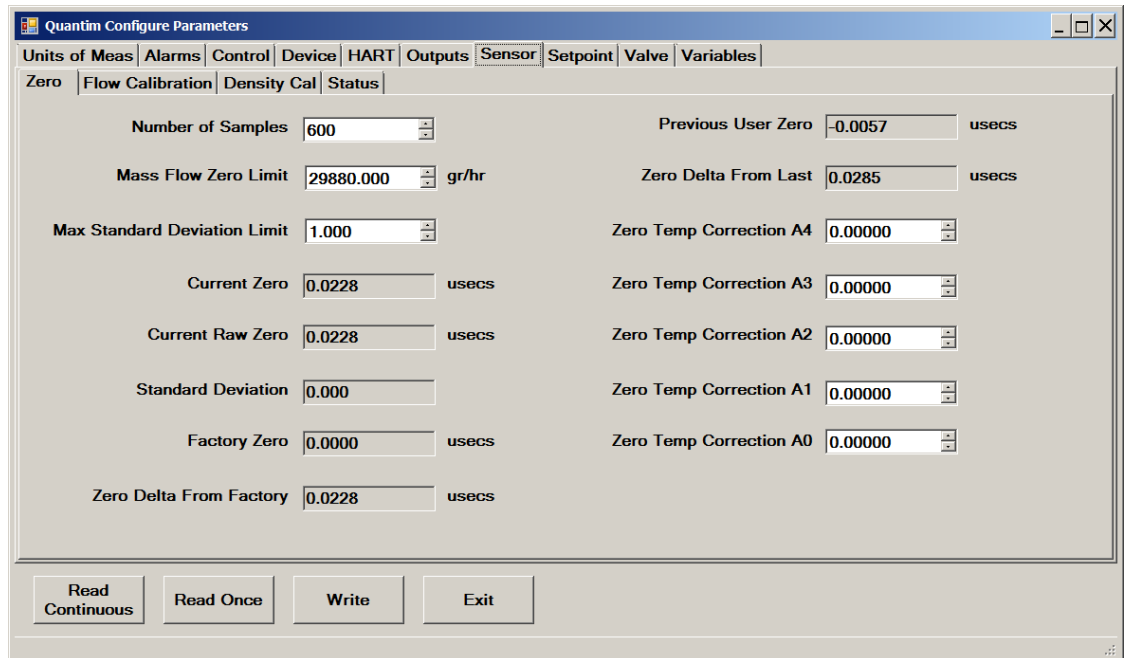

Quantim Configure Parameters


Units of Meas | Alarms | Control | Device | HART | Outputs | **Sensor** | Setpoint | Valve | Variables

Zero | Flow Calibration | Density Cal | Status

Number of Samples	600	Previous User Zero	-0.0057 usecs
Mass Flow Zero Limit	29880.000 gr/hr	Zero Delta From Last	0.0285 usecs
Max Standard Deviation Limit	1.000	Zero Temp Correction A4	0.00000
Current Zero	0.0228 usecs	Zero Temp Correction A3	0.00000
Current Raw Zero	0.0228 usecs	Zero Temp Correction A2	0.00000
Standard Deviation	0.000	Zero Temp Correction A1	0.00000
Factory Zero	0.0000 usecs	Zero Temp Correction A0	0.00000
Zero Delta From Factory	0.0228 usecs		

Read Continuous | Read Once | Write | Exit

Figure 15-11 Sensor-&gt;Zero

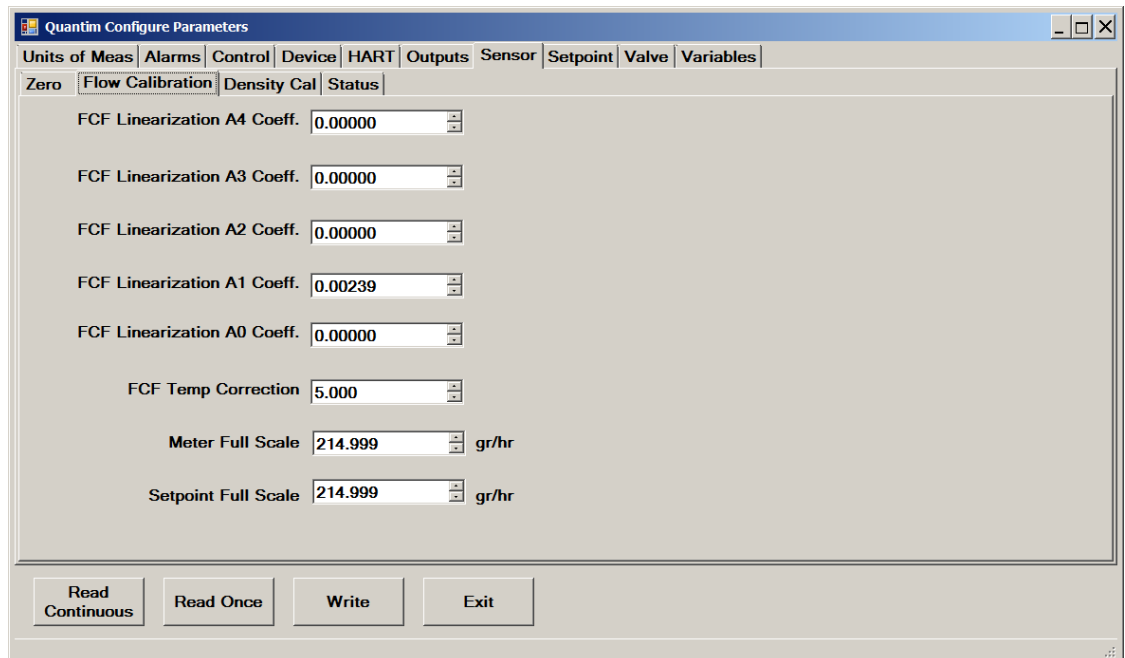

Quantim Configure Parameters


Units of Meas | Alarms | Control | Device | HART | Outputs | **Sensor** | Setpoint | Valve | Variables

Zero | **Flow Calibration** | Density Cal | Status

FCF Linearization A4 Coeff.	0.00000
FCF Linearization A3 Coeff.	0.00000
FCF Linearization A2 Coeff.	0.00000
FCF Linearization A1 Coeff.	0.00239
FCF Linearization A0 Coeff.	0.00000
FCF Temp Correction	5.000
Meter Full Scale	214.999 gr/hr
Setpoint Full Scale	214.999 gr/hr

Read Continuous | Read Once | Write | Exit


Figure 15-12 Sensor-&gt;Flow Calibration

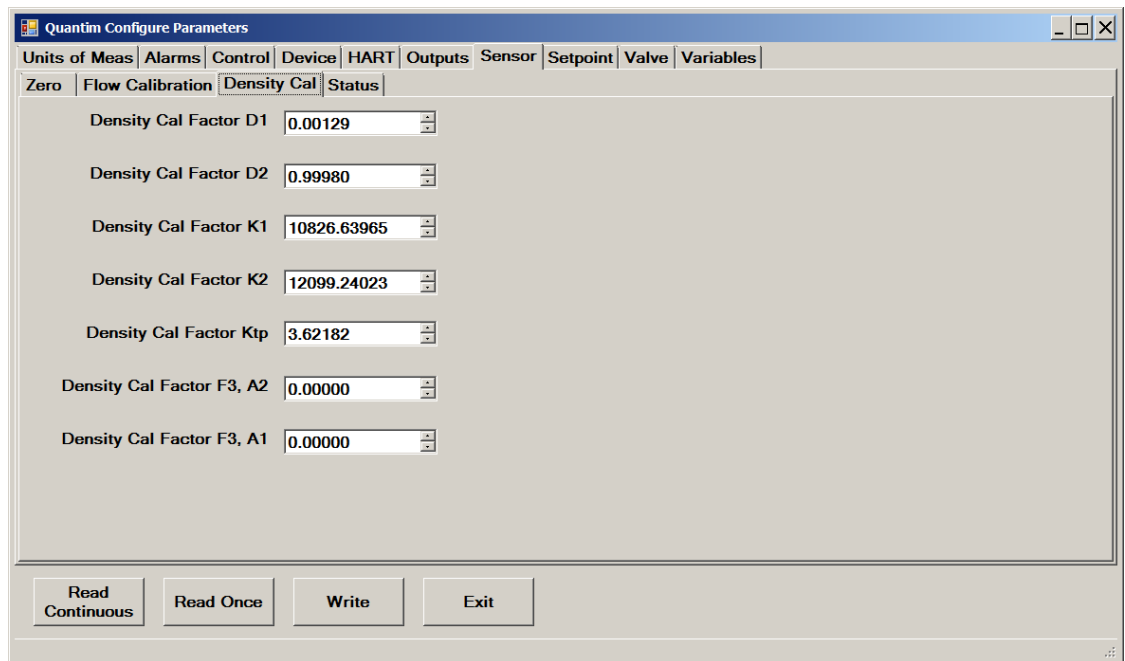

The screenshot shows the 'Quantim Configure Parameters' window with the 'Density Cal' tab selected. The window has a menu bar with 'Units of Meas', 'Alarms', 'Control', 'Device', 'HART', 'Outputs', 'Sensor', 'Setpoint', 'Valve', and 'Variables'. Below the menu bar is a sub-menu bar with 'Zero', 'Flow Calibration', 'Density Cal', and 'Status'. The 'Density Cal' tab contains seven input fields for density calibration factors, each with a numeric value and a small up/down arrow icon. At the bottom of the window are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value
Density Cal Factor D1	0.00129
Density Cal Factor D2	0.99980
Density Cal Factor K1	10826.63965
Density Cal Factor K2	12099.24023
Density Cal Factor Ktp	3.62182
Density Cal Factor F3, A2	0.00000
Density Cal Factor F3, A1	0.00000

Figure 15-13 Sensor-&gt;Density Cal

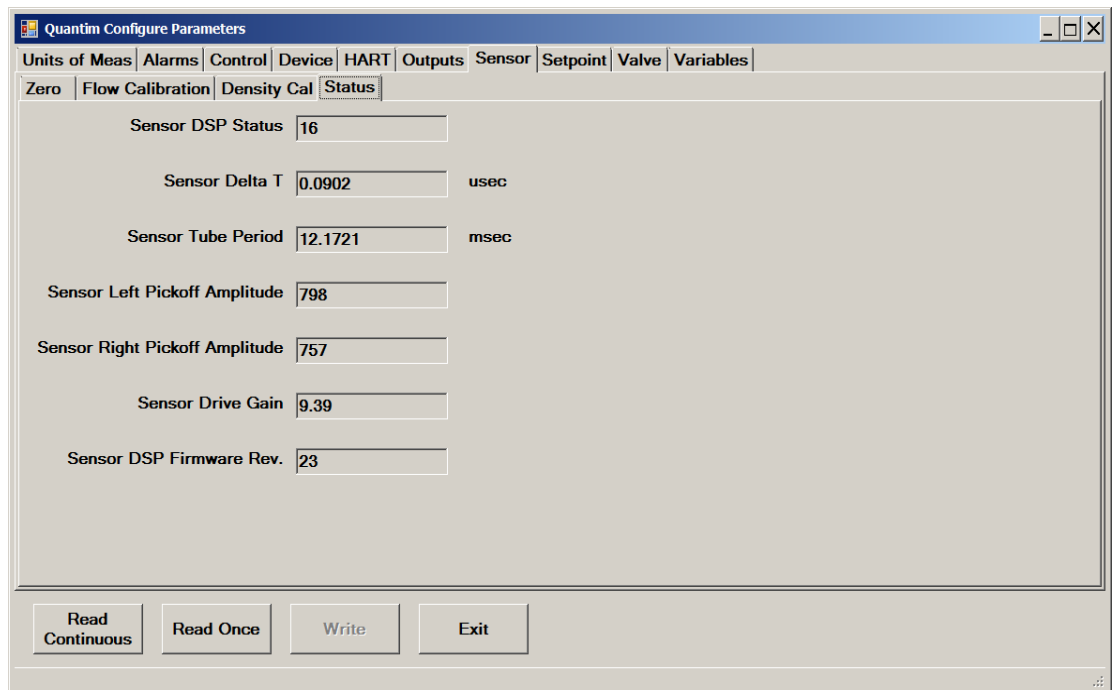

The screenshot shows the 'Quantim Configure Parameters' window with the 'Status' tab selected. The window has the same menu bar and sub-menu bar as Figure 15-13. The 'Status' tab contains seven input fields for sensor status parameters, each with a numeric value and a unit. At the bottom of the window are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Sensor DSP Status	16	
Sensor Delta T	0.0902	usec
Sensor Tube Period	12.1721	msec
Sensor Left Pickoff Amplitude	798	
Sensor Right Pickoff Amplitude	757	
Sensor Drive Gain	9.39	
Sensor DSP Firmware Rev.	23	

Figure 15-14 Sensor-&gt;Status

## 15.11 Viewing Setpoint Parameters

The screenshot shows the 'Quantim Configure Parameters' window with the 'Setpoint' tab selected. The 'Flow' parameter is active, and the following values are displayed:


Parameter	Value	Unit
Setpoint URV	100.001	gr/hr
Setpoint LRV	0.000	gr/hr
Setpoint Low Signal Cutoff	50.000	gr/hr
Setpoint Input Zero Cal	0.19932	
Setpoint Input Full-Scale Cal	0.90806	
Setpoint Analog Input Config	4to20mA	

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-15 Setpoint->Flow

## 15.12 Viewing Valve Parameters


To adjust the valve parameters, refer also to [Section 13.13](#).

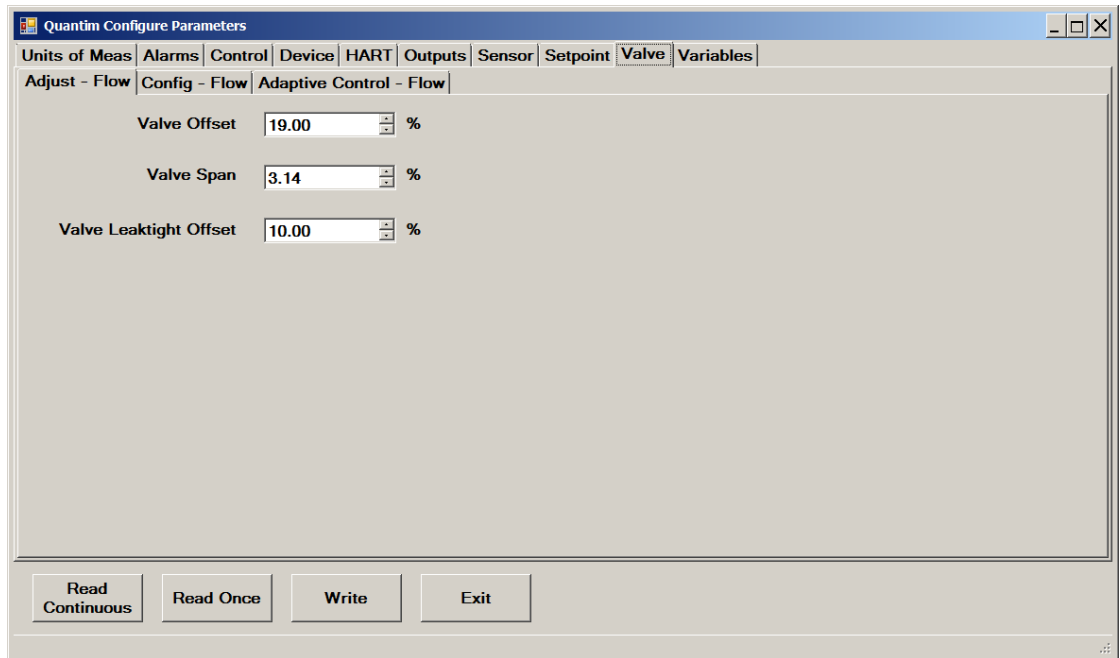

The screenshot shows the 'Quantim Configure Parameters' window with the 'Valve' tab selected. The 'Adjust - Flow' sub-tab is active, displaying three parameters: 'Valve Offset' (19.00 %), 'Valve Span' (3.14 %), and 'Valve Leaktight Offset' (10.00 %). Each parameter has a numeric input field with up/down arrows. At the bottom, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Valve Offset	19.00	%
Valve Span	3.14	%
Valve Leaktight Offset	10.00	%

Figure 15-16 Valve->Adjust - Flow

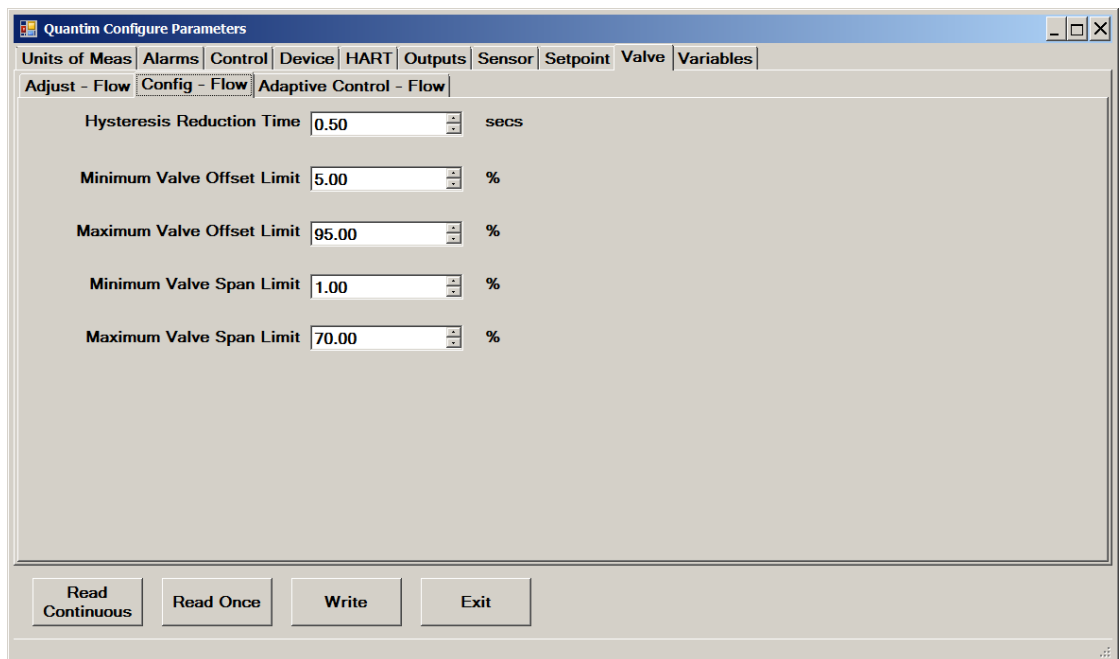

The screenshot shows the 'Quantim Configure Parameters' window with the 'Valve' tab selected. The 'Config - Flow' sub-tab is active, displaying five parameters: 'Hysteresis Reduction Time' (0.50 secs), 'Minimum Valve Offset Limit' (5.00 %), 'Maximum Valve Offset Limit' (95.00 %), 'Minimum Valve Span Limit' (1.00 %), and 'Maximum Valve Span Limit' (70.00 %). Each parameter has a numeric input field with up/down arrows. At the bottom, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Parameter	Value	Unit
Hysteresis Reduction Time	0.50	secs
Minimum Valve Offset Limit	5.00	%
Maximum Valve Offset Limit	95.00	%
Minimum Valve Span Limit	1.00	%
Maximum Valve Span Limit	70.00	%

Figure 15-17 Valve->Config - Flow

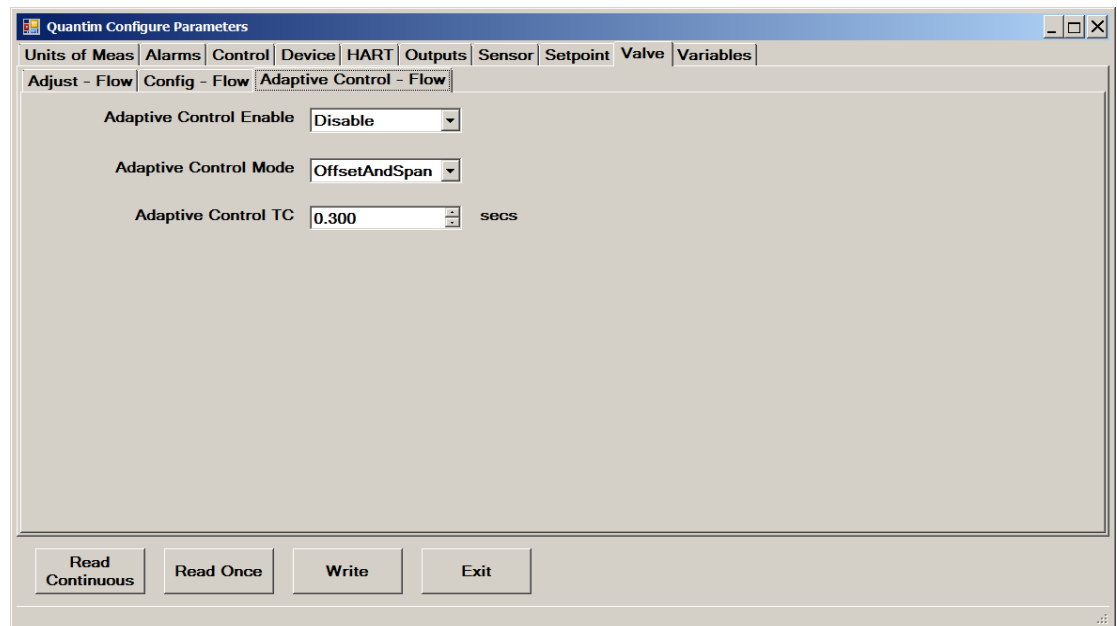


Figure 15-18 Valve-&gt;Adaptive Control - Flow

### 15.13 Viewing Selected Live Measurement Parameters

You can view selected “live” measurement parameters.

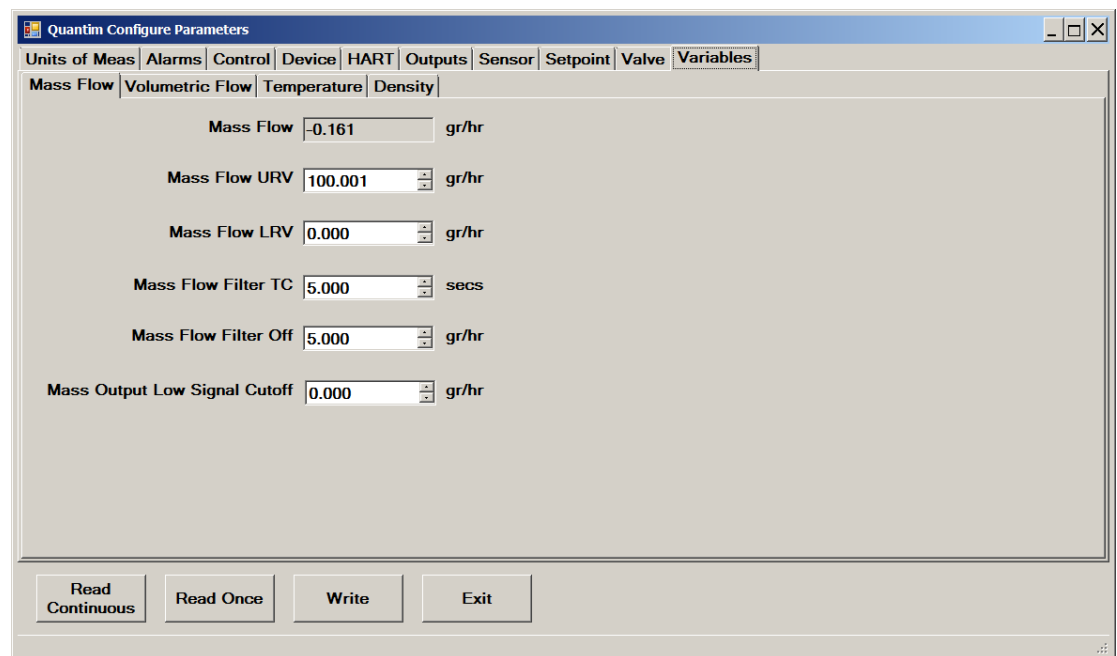


Figure 15-19 Variables-&gt;Mass Flow

The screenshot shows the 'Quantim Configure Parameters' window with the 'Variables' tab selected. Under the 'Volumetric Flow' sub-tab, the following parameters are displayed:

Parameter	Value	Unit
Volumetric Flow	-0.413	ml/hr
Volumetric Flow URV	100.004	ml/hr
Volumetric Flow LRV	0.000	ml/hr
Vol. Output Low Signal Cutoff	0.000	ml/hr

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-20 Variables->Volumetric Flow

The screenshot shows the 'Quantim Configure Parameters' window with the 'Variables' tab selected. Under the 'Temperature' sub-tab, the following parameters are displayed:

Parameter	Value	Unit
Temperature	41.0	°Celsius
Temperature URV	65.0	°Celsius
Temperature LRV	0.0	°Celsius

At the bottom of the window, there are four buttons: 'Read Continuous', 'Read Once', 'Write', and 'Exit'.

Figure 15-21 Variables->Temperature

Quantim Configure Parameters

Units of Meas | Alarms | Control | Device | HART | Outputs | Sensor | Setpoint | Valve | Variables

Mass Flow | Volumetric Flow | Temperature | **Density**

Density 0.9860 gr/cc

Density URV 2.0000 gr/cc

Density LRV 0.0000 gr/cc

Density Filter TC 0.800 secs

Density Filter Off 0.0100 gr/cc

Read Continuous Read Once Write Exit

Figure 15-22 Variables->Density

## LIMITED WARRANTY

Visit [www.BrooksInstrument.com](http://www.BrooksInstrument.com) for the terms and conditions of our limited warranty.

## BROOKS SERVICE AND SUPPORT

Brooks is committed to assuring all of our customers receive the ideal flow solution for their application, along with outstanding service and support to back it up. We operate first class repair facilities located around the world to provide rapid response and support. Each location utilizes primary standard calibration equipment to ensure accuracy and reliability for repairs and recalibration and is certified by our local Weights and Measures Authorities and traceable to the relevant International Standards.

*Visit [www.BrooksInstrument.com](http://www.BrooksInstrument.com) to locate the service location nearest to you.*

## START-UP SERVICE AND IN-SITU CALIBRATION

Brooks Instrument can provide start-up service prior to operation when required.

For some process applications, where ISO-9001 Quality Certification is important, it is mandatory to verify and/or (re)calibrate the products periodically. In many cases this service can be provided under in-situ conditions, and the results will be traceable to the relevant international quality standards.

## CUSTOMER SEMINARS AND TRAINING

Brooks Instrument can provide customer seminars and dedicated training to engineers, end users and maintenance persons.

*Please contact your nearest sales representative for more details.*

Due to Brooks Instrument's commitment to continuous improvement of our products, all specifications are subject to change without notice.

## TRADEMARKS

Brooks is a trademark of Brooks Instrument, LLC

All other trademarks are the property of their respective owners.



Supplemental-Manual-BEST-v5.14-RevA/2024-07  
Part Number: 541B226AAG

## Global Headquarters

**Brooks Instrument**  
407 West Vine Street  
Hatfield, PA  
19440-0903 USA

Toll-Free (USA): 888-554-FLOW  
T: 215-362-3500

[BrooksAM@BrooksInstrument.com](mailto:BrooksAM@BrooksInstrument.com)

A list of all Brooks Instrument locations and contact details can be found at [www.BrooksInstrument.com](http://www.BrooksInstrument.com)

© Copyright 2024 Brooks Instrument, LLC All rights reserved. Printed in U.S.A.

**BROOKS®**  
**INSTRUMENT**  
*Beyond Measure*