DATA SHEET

BROOKS INSTRUMENT 1000 TORR CACSet

CMC Series

Vacuum Measurement

CMC Series Compact, Unheated, Capacitance Manometers

Used as the vacuum capacitance manometer of choice for thin-film processes, the Brooks[®] CMC Series capacitance manometers provide accurate total pressure measurement independent of gas composition.

The CMC Series delivers exceptional performance over a wide range of operating temperatures, making it an alternative choice to larger premium performance unheated gauges. The CMC is 40% smaller in size than traditional unheated capacitance manometers.

Ideal for Aggressive Applications

The all-welded design and Inconel[®] wetted surfaces ensures reliable operation in even the most aggressive processes. The combination of precision components and a wide temperature compensated operating range allows the CMC to deliver best-in-class zero and span temperature coefficients for optimum measurement stability.

Available for Typical Process Ranges

The CMC Series is available in full scale ranges from 1000 Torr to 10 Torr and is an ideal upgrade for small form-factor capacitance manometers and an economical alternative to full-sized unheated capacitance manometers.

Features	Benefits
40% smaller than traditional unheated capacitance manometers	The CMC Series delivers similar performance in a space saving, economic package.
Robust all-welded construction	Ensures optimum measurement repeatability compared to other designs that are prone to error inducing internal stresses that cause unpredictable variations in pressure measurement independent of gas composition.
Optional high-accuracy calibration	Delivers the accuracy of more costly premium unheated manometers.

View CMC Series Product Page



BrooksInstrument.com

Beyond Measure

Product Specifications


PERFORMANCE				
Full Scale Ranges	10, 20 50, 100, 200 and 1000 Torr			
Accuracy ¹	Type A = 0.25% of reading; Type B = 0.5% of reading			
Resolution ²	Infinite, limited by output noise (≤0.0006% F.S.)			
Temp. Effect on Zero	0.005% F.S. / °C			
Temp. Effect on Span	0.027% F.S. / °C			
Response Time	20 msec			
Operating Temperature	0 to 80°C			
Compensated Temperature	0 to 50°C			
MECHANICAL				
Exposed Materials ²	Inconel®			
Over-Pressure Limit	45 psia			
Weight	0.3 lbs. (137 grams)			
ELECTRICAL				
Input Power	+12 to 30 Vdc			
Output Signal	0-10 Vdc (<10K Ω load)			
Power Consumption	<200 mW			
Electrical Connectors	5-pin terminal strip 9-pin D sub 15-pin D sub on 6″ cable			
CERTIFICATIONS				
Electromagnetic Compatibility	Fully CE certified to EMC Directive 89/336/EEC			
RoHs	Compliant			

Notes:

1. RSS-Including hysterisis, linearity and non-repeatability.

2. Wetted material is for 1/2" tube stub option, other flanges and fitting will add stainless steel.

Dimensional Drawing – CMC Series

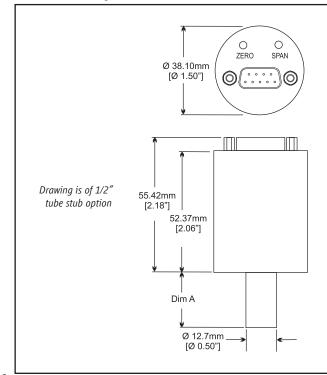

Fitting Type	Code	Dim. A	
0.5" O.D. Tube	0	25.4 mm [0.99"]	
KF - 16 Flange	2	28.96 mm [1.14"]	
KF - 25 Flange	3	28.96 mm [1.14"]	
8 VCR Female	4	44.07 mm [1.735"]	
4 VCR Female	R	34.06 mm [1.341"]	

Model Code

Code Description	Code Option	Option Description			
I. Base Model Number	CMCA	Compact Capacitance Manometer			
II. Full Scale Range	T11	10 Torr			
	T12	20 Torr			
	T15	50 Torr			
	T21	100 Torr			
	T22	200 Torr			
	T31	1000 Torr			
	C11	10 mbar*			
	C12	20 mbar			
	C21	100 mbar			
	C31	1000 mbar			
	P11	1.333 kPa			
	P21	13.33 kPa			
	P31	133.3 kPa			
III. Electrical Connector	1	9-pin sub D, 0-10 Vdc			
	2	5-pin terminal strip, 0-10 Vdc			
	3	15-pin sub D, 0-10 Vdc on 6" cable			
IV. Fitting	0	1/2" tube stub			
	1	KF10			
	2	KF16			
	3	KF25			
	4	8VCR° F			
	Р	4VCR [®] M			
	Q	1/4" tube stub			
	R	4VCR° F			
V. Accuracy	А	±0.25% of Reading Accuracy			
	В	±0.5% of Reading Accuracy			
VI. Compliance	R	RoHs Compliant			

* Available with "B" Code (.5% of reading) only.

Sample Standard Model Code

I	II	III	IV	V	VI
CMCA	T11	1	Q	А	R

Service and Support

Brooks is committed to assuring all of our customers receive the ideal flow solution for their application, along with outstanding service and support to back it up. We operate first class repair facilities located around the world to provide rapid response and support. Each location utilizes primary standard calibration equipment to ensure accuracy and reliability for repairs and recalibration and is certified by our local Weights and Measures Authorities and traceable to the relevant International Standards.

Visit www.BrooksInstrument.com to locate the service location nearest to you.

START-UP SERVICE AND IN-SITU CALIBRATION

Brooks Instrument can provide start-up service prior to operation when required. For some process applications, where ISO-9001 Quality Certification is important, it is mandatory to verify and/or (re)calibrate the products periodically. In many cases this service can be provided under in-situ conditions, and the results will be traceable to the relevant international quality standards.

SEMINARS AND TRAINING

Brooks Instrument can provide customer seminars and dedicated training to engineers, end users, and maintenance persons. *Please contact your nearest sales representative for more details.* Due to Brooks Instrument's commitment to continuous improvement of our products, all specifications are subject to change without notice.

TRADEMARKS

BrooksBrooks Instrument, LLC All other trademarks are the property of their respective owners.



DS-VAC-CMC-eng/2023-02

Global Headquarters Brooks Instrument 407 West Vine Street Hatfield, PA 19440-0903 USA Toll-Free (USA): 888-554-FLOW T: 215-362-3500 BrooksAM@BrooksInstrument.com

A list of all Brooks Instrument locations and contact details can be found at www.BrooksInstrument.com

Copyright 2023 Brooks Instrument, LLC All rights reserved. Printed in U.S.A.

